

PICKUP



TRUCK



BUILT TOUGH



TRAILER



HEAVY-DUTY EQUIPMENT



Oil Seals

CATALOG



SNT AUTOPART GROUP
www.sntautopart.com



SNT AUTOPART ENTERPRISE, LLC. (U.S.A.)
SNT AUTOPART INTERTRADE CO., LTD
SNT MACHINE LTD., PART

WWW.SNTAUTOPART.COM

1. FOREWORD

Rubber parts are in our DNA. It's not marketing speak. SNT produce only the highest quality products. If you need something custom, our engineering and design team can help assist with your unique rubber part requirements with our warranty guarantee. **We are different and we want to show why that's good for you.**

We know that having the right part at the right time is crucial to your operation. Under the SNT brand, we carry more than 30,000 SKUs.

We believe the best method to get our products to the customer is through strategic alliances with our distribution partners. Our commitment to our distributors, and the ultimate user, is to constantly introduce new and innovative products at higher levels of quality with an emphasis on compressed lead times - products that will last longer and reduce overall maintenance costs. All of our employees have a "can do" attitude and take pride in helping customers. **You have a problem? We have a solution.** All we ask is the chance to prove ourselves; you won't be disappointed!

Content Remarks

All rubber parts in this catalogue are specially manufactured by SNT. The O.E.M. Part No., Interchange Part No., Auto maker name, and all other trademarks mentioned in this document are the property of their respective owners and are used for identification purposes only.



SNT AUTOPART ENTERPRISE, LLC. (U.S.A.)
SNT AUTOPART INTERTRADE CO., LTD
SNT MACHINE LTD., PART

WWW.SNTAUTOPART.COM

2. INTRODUCTION

SNT AUTOPART GROUP is a leading manufacturer of replacement parts. For over 30 years experience, SNT supplies the high quality rubber parts successfully. We win worldwide clients' trust based on **premium quality of products, excellent service and competitive price.**

Our top executive has more than 7 years of R&D experience at the top 3 automobile companies in the world, create a perfect knowledge of products. Moreover, SNT products are manufactured according to German standard (DIN) and ISO 9001 quality management system. So we guarantee to

“SNT products are the same characteristics of original spare parts with competitive price”

SNT AUTOPART GROUP is comprised of the following companies:

1. SNT AUTOPART ENTERPRISE, LLC. (New York, U.S.A.)
2. SNT AUTOPART INTERTRADE Co., Ltd. (Bangkok, Thailand)
3. SNT MACHINE Ltd., Part. (Bangkok, Thailand)



SNT AUTOPART ENTERPRISE, LLC. (U.S.A.)
SNT AUTOPART INTERTRADE CO., LTD
SNT MACHINE LTD., PART

WWW.SNTAUTOPART.COM

2.1 ISO 9001 CERTIFICATION

globalgroup
Management System Experts[®]

Certificate of Registration

This is to certify that the

QUALITY MANAGEMENT SYSTEM

of

S.N.T. MACHINE LTD., PART.

18/3 Soi Bangkradee19 Yeak6, RAMA II Road, Bangkhuntien, Bangkok, 10150, THAILAND

for

Design and Manufacture of Rubber Parts and Stamping Parts, Oil Seals, Rubber Bushings, Torque Rod Bushings, Engine Mounts for Automotives, Motorcycles and Industrial Machineries.

has been assessed and registered against the provisions of

ISO 9001:2008

International Standard

With

Registration Number:	44Q16937	Project:	11-16937-1-Q
Certification Date:	11 December 2015	Code:	DH 25.13
Recertification Due Date:	14 September 2018	Exclusions:	7.5.4, 7.5.2
Certification Approved By:		Alan Cherry	
		Chairman	

Registration is subject to the management system being continually maintained to the above standard under regular surveillance. Should surveillance not take place when required, registration shall be removed.

This certificate is the property of GlobalGROUP of Companies Limited
21 Lansdowne Crescent, Edinburgh, Midlothian, EH12 5EH, Scotland, United Kingdom


0039

Please validate the authenticity of the certificate at www.globalgroup.net


30002530


3. SNT WARRANTY

SNT, warrants that all products sold shall be free from defects in material and workmanship for period of one year from date of shipment. At our option, any products prove to be defective either in workmanship or material whereby it is not suitable under proper usage and service for the purpose for which designed shall be replaced free of charge including transportation charges, but not the cost of installation, providing that the products are not subject to negligence, accident, or damages beyond our control. We shall not be responsible for consequential damages.

4. MEMBERSHIPS

SNT AUTOPART GROUP is long standing members and supporter of the following associations.

- 1) THE FEDERATION OF THAI INDUSTRIES
- 2) THE THAI CHAMBER OF COMMERCE
- 3) THAILAND AUTOMOTIVE INSTITUTE
- 4) THAI AUTO PARTS MANUFACTURERS ASSOCIATION

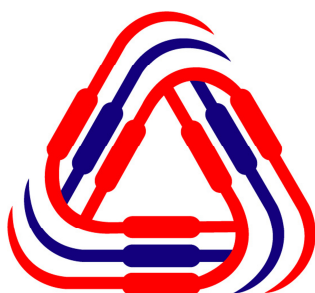

THE FEDERATION OF THAI INDUSTRIES



5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1199	MD050606	44 x 60 x 7	AIRTREK CU2W(4G63),CU4W(4G64)	01/6~	Engine CRANK SHAFT FRONT
03905 1130	MD755904	41 x 61 x 9 x 13.5	AIRTREK CU2WLYXFZ(4WD)	02/6~	Mission & Differential (A/T) FRONT DIFF. CASE
03905 8636	MD758763	41 x 61 x 11.5 x 16	AIRTREK CU2W,4W 4WD EXC.CU2WLYXFZ	01/6~	Mission & Differential (A/T) FRONT DIFF. CASE
03905 5684	MD707575	42 x 60 x 9	AIRTREK CU2W,4W	01/6~	Mission & Differential (A/T) CONVERTER OIL PUMP
03905 8135	MB393929	35 x 65 x 12	AIRTREK CU2W,4W 4WD	01/6~	Mission & Differential (A/T) REAR DIFF. PINION
03905 2357	MD707184	35 x 56 x 9 x 12	AIRTREK CU2W,4W 4WD	01/6~	Mission & Differential (A/T) REAR DIFF. SIDE
03905 3800	MN101885		AIRTREK CU2W,4W	01/6~	Power Steering SEAL KIT
03905 8933	MD755904	41 x 61 x 9 x 13.5	AIRTREK CU2W,4W 2WD	01/6~	Mission & Differential (A/T) FRONT DIFF. CASE
03905 4772	MD095355	20 x 30 x 7	AIRTREK CU2W(4G63),CU4W(4G64)	01/6~	Engine OIL PUMP
03905 6314	MD069950	25 x 35 x 6	AIRTREK CU2W(4G63),CU4W(4G64)	01/6~	Engine BALANCER SHAFT
03905 9005	MD184303		AIRTREK 4G63(EXC. TURBO) IN. & EX.	01/6~	Engine VALVE STEM SEAL
03905 4307	MD184303		AIRTREK 4G64(SOHC) IN. & EX.	02/12~	Engine VALVE STEM SEAL
03905 5669	MD306079		AIRTREK 4G63(TURBO) IN.	02/6~	Engine VALVE STEM SEAL
03905 2216	MD306079		AIRTREK 4G64(DOHC) IN.	01/6~	Engine VALVE STEM SEAL
03905 5441	MD307343		AIRTREK 4G63(TURBO) EX.	02/6~	Engine VALVE STEM SEAL
03905 8309	MD307343		AIRTREK 4G64(DOHC) EX.	01/6~	Engine VALVE STEM SEAL
03905 4478	MD153103	35 x 50 x 8	AIRTREK CU2W(4G63),CU4W(4G64)	01/6~	Engine CAM SHAFT
03905 3341	MD359158	85 x 103 x 7.5	AIRTREK CU2W(4G63),CU4W(4G64)	01/6~	Engine CRANK SHAFT REAR
03905 1166	ME202850	50 x 74 x 11	CANTER (1T~1.5T) 4M40 FB501,50A,511,51A,70A, FD501,50A,70A	96/11~	Engine CRANK SHAFT FRONT
03905 4508	MH034213	52 x 84 x 14	CANTER (1T~1.5T) FB51A..A1A46,47,B8#	99/3~	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7925	MH034213	52 x 84 x 14	CANTER (1T~1.5T) FB511,70A B8#	93/10~	Final Drive PINION
03905 2585	MH034213	52 x 84 x 14	CANTER (1T~1.5T) FC563	96/11~99/	Final Drive PINION
03905 1724	MH034213	52 x 84 x 14	CANTER (1T~1.5T) FD378	92/9~93/	Final Drive PINION
03905 8009	MH034213	52 x 84 x 14	CANTER (1T~1.5T) FD501,50A,70A B2#	93/10~	Final Drive PINION
03905 2876	MB664285	44 x 72 x 12	CANTER (1T~1.5T) FD#	92/9~97/1 1	Final Drive PINION (FRONT DIFF.)
03905 8432	MB160578	42 x 65 x 12	CANTER (1T~1.5T) FD#	97/11~	Final Drive PINION (FRONT DIFF.)
03905 8222	MD008762	35 x 50 x 8	CANTER (1T~1.5T) 4G63,4G64 FA5#,FB500,510,FC563	96/11~	Engine CAM SHAFT
03905 8696	MD095355	20 x 30 x 7	CANTER (1T~1.5T) 4G63,4G64 FA5#,FB500,510,FC563	96/11~	Engine OIL PUMP
03905 2435	MD008882	44 x 60 x 7	CANTER (1T~1.5T) 4G63,4G64 FA5#,FB500,510,FC563	96/11~	Engine CRANK SHAFT FRONT
03905 7718	31311-06101	48 x 70 x 12	CANTER (1T~1.5T) 4DR51 FB100,120,300	80/11~89/	Engine CRANK SHAFT FRONT
03905 1289	ME241213		CANTER (1T~1.5T) 4M40 IN. & EX.	93/10~	Engine VALVE STEM SEAL
03905 3776	ME200028	52 x 74 x 11 x 19	CANTER (1T~1.5T) 4M40 FB501,50A,511,51A,70A, FD501,50A,70A	93/10~96/ 10	Engine CRANK SHAFT FRONT
03905 6230	MB160949	45 x 72 x 12 x 19.5	CANTER (1T~1.5T) FB511,70A EXC. B8#	93/10~	Final Drive PINION
03905 8681	MD359158	85 x 103 x 7.5	CANTER (1T~1.5T) 4G63,4G64 FA5#,FB500,510,FC563	96/11~	Engine CRANK SHAFT REAR
03905 6683	ME001196	96 x 113 x 16	CANTER (1T~1.5T) 4DR51	80/11~86/ 1	Engine CRANK SHAFT REAR
03905 5480	ME001293	90 x 113 x 15	CANTER (1T~1.5T) 4DR51	86/1~89/	Engine CRANK SHAFT REAR
03905 6695	ME001293	90 x 113 x 15	CANTER (1T~1.5T) 4DR7	89/10~93/	Engine CRANK SHAFT REAR
03905 7661	ME200012	92 x 114 x 8 x 17	CANTER (1T~1.5T) 4M40	93/10~96/ 2	Engine CRANK SHAFT REAR
03905 4970	ME202115	90 x 114 x 10.5 x 17	CANTER (1T~1.5T) 4M40	96/3~96/1 0	Engine CRANK SHAFT REAR
03905 2951	ME202851	94.5 x 114 x 12	CANTER (1T~1.5T) 4M40	96/11~99/ 5	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3668	ME203250	90.5 x 114 x 12	CANTER (1T~1.5T) 4M40	99/6~	Engine CRANK SHAFT REAR
03905 5393	MD184303		CANTER (1T~1.5T) 4G63,4G64 IN. & EX.	96/11~	Engine VALVE STEM SEAL
03905 2204	ME241213		CANTER (1T~1.5T) 4DR51,4DR7 IN. & EX.	80/11~93/	Engine VALVE STEM SEAL
03905 7289	ME001509	48 x 70 x 8	CANTER (1T~1.5T) 4DR7 FB308,328,FD378	89/10~93/	Engine CRANK SHAFT FRONT
03905 8369	MH034067	32 x 45 x 8	CANTER (1T~1.5T) FA#,FB#,FD#	96/11~99/	Transmission FRONT
03905 3101	MB025291	52 x 73 x 10	CANTER (1T~1.5T) FA#	96/11~99/	Wheel Hub FRONT
03905 7811	MB025291	52 x 73 x 10	CANTER (1T~1.5T) FB#...EXC. FB51AA1A46,47	80/11~	Wheel Hub FRONT
03905 4031	MT119305	68 x 90 x 12	CANTER (1T~1.5T) FB51AA1A46,47	99/3~02/	Wheel Hub FRONT
03905 3197	MT119305	68 x 90 x 12	CANTER (1T~1.5T) FC563	96/11~99/	Wheel Hub FRONT
03905 5414	MH034185	64 x 84 x 8 x 12	CANTER (1T~1.5T) FD#	92/9~	Wheel Hub FRONT
03905 7529	MB161153	74 x 100 x 10	CANTER (1T~1.5T) FA#	96/11~99/	Wheel Hub REAR INNER
03905 2879	MB161153	74 x 100 x 10	CANTER (1T~1.5T) FB#...EXC. FB51AA1A46,47	80/11~	Wheel Hub REAR INNER
03905 7412	MB161153	74 x 100 x 10	CANTER (1T~1.5T) FD#	92/9~	Wheel Hub REAR INNER
03905 1022	MB161152	70 x 112 x 10 x 18.5	CANTER (1T~1.5T) FB51AA1A46,47	99/3~02/	Wheel Hub REAR INNER
03905 7313	MB161152	70 x 112 x 10 x 18.5	CANTER (1T~1.5T) FC563	96/11~99/	Wheel Hub REAR INNER
03905 9032	MB161139	74.4 x 93.5 x 6.8	CANTER (1T~1.5T) FB100,120	80/11~85/	Wheel Hub REAR OUTER
03905 8540	MH034213	52 x 84 x 14	CANTER (1T~1.5T) FB100,300A#,308A#	80/11~93/	Final Drive PINION
03905 6533	MB308934	46 x 95 x 10 x 14	CANTER (1T~1.5T) FD#	92/9~	Wheel Hub REAR OUTER
03905 6458	MB160949	45 x 72 x 12 x 19.5	CANTER (1T~1.5T) FD501,50A,70A B1#	93/10~	Final Drive PINION
03905 4763	MH034147	40 x 58 x 8	CANTER (1T~1.5T) FC563	96/11~99/	Transmission FRONT
03905 2936	MH034177	48 x 65 x 9	CANTER (1T~1.5T) FA#	96/11~99/	Transmission REAR EXTENTION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4313	MH034177	48 x 65 x 9	CANTER (1T~1.5T) FB1#,3#	80/11~93/	Transmission REAR EXTENTION
03905 5900	MH034177	48 x 65 x 9	CANTER (1T~1.5T) FB5#...4G63	99/3~	Transmission REAR EXTENTION
03905 7955	MH034181	50 x 65 x 9	CANTER (1T~1.5T) FB5#...4M40	93/10~	Transmission REAR EXTENTION
03905 5534	MH034181	50 x 65 x 9	CANTER (1T~1.5T) FC563	96/11~99/	Transmission REAR EXTENTION
03905 1046	MB664285	44 x 72 x 12	CANTER (1T~1.5T) FB120,300B#,308B#	80/11~93/	Final Drive PINION
03905 6863	MB160949	45 x 72 x 12 x 19.5	CANTER (1T~1.5T) FA#	96/11~99/	Final Drive PINION
03905 5405	MB160949	45 x 72 x 12 x 19.5	CANTER (1T~1.5T) FB500,501,50A,510,700	93/10~	Final Drive PINION
03905 1979	MB160949	45 x 72 x 12 x 19.5	CANTER (1T~1.5T) FB51A EXC. A1A46,47,B8#	99/3~	Final Drive PINION
03905 1508	MB308933	46 x 102 x 10 x 16	CANTER (1T~1.5T) FB51AA1A46,47	99/3~02/	Wheel Hub REAR OUTER
03905 5213	MB308934	46 x 95 x 10 x 14	CANTER (1T~1.5T) FA#	96/11~99/	Wheel Hub REAR OUTER
03905 2291	MB308934	46 x 95 x 10 x 14	CANTER (1T~1.5T) FB#...EXC.FB100,120,51 AA1A46,47	80/11~	Wheel Hub REAR OUTER
03905 7973	MB420112	36 x 50 x 8	CANTER (2T~) FG325,327,335,337,435,4 37,537,538,638	85/12~99/	Wheel Hub FRONT AXLE SHAFT
03905 2414	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE83D EN#,GN#	02/5~	Wheel Hub REAR WHEEL INNER
03905 6494	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE82C,82D,82E,83C,88E	02/5~	Wheel Hub REAR WHEEL INNER
03905 3410	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE7##	02/5~	Wheel Hub REAR WHEEL INNER
03905 4778	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE63E EXCEPT CY6#,CY7#,EY7#,GY6#	99/3~02/	Wheel Hub REAR WHEEL INNER
03905 6116	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE63D EXCEPT CY7#,EY7#,GY7#	99/3~02/	Wheel Hub REAR WHEEL INNER
03905 4352	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE62E,63C,69E	99/3~02/	Wheel Hub REAR WHEEL INNER
03905 4064	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE632,636,637,638,639,64 2,648,649,662,667,668,669	93/10~99/	Wheel Hub REAR WHEEL INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7532	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE5##	93/10~02/	Wheel Hub REAR WHEEL INNER
03905 1544	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE3##,4##	85/9~93/	Wheel Hub REAR WHEEL INNER
03905 4016	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE1##,2##	78/11~85/	Wheel Hub REAR WHEEL INNER
03905 1409	MB025295	72 x 94 x 10	CANTER (2T~) FE53E BX6#,CX6#	00/6~02/	Wheel Hub FRONT
03905 6965	MB420112	36 x 50 x 8	CANTER (2T~) FG53E,63E	99/3~02/	Wheel Hub FRONT AXLE SHAFT
03905 7514	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FG ALL	85/12~	Wheel Hub REAR WHEEL INNER
03905 6647	MB420155	72 x 96 x 8 x 12	CANTER (2T~) FG73E,83E	02/5~	Wheel Hub FRONT
03905 6062	MB420155	72 x 96 x 8 x 12	CANTER (2T~) FG53E,63E	99/3~02/	Wheel Hub FRONT
03905 4199	MB420155	72 x 96 x 8 x 12	CANTER (2T~) FG325,335,337,435,437,5 37,538,638	85,12~99/	Wheel Hub FRONT
03905 7823	MB025295	72 x 94 x 10	CANTER (2T~) FF658,659,63D,63E,83D,8 3E	96/11~	Wheel Hub FRONT
03905 1211	MB025295	72 x 94 x 10	CANTER (2T~) FE83E EXCEPT C4#,C6#,CX6#,EV6	02/5~	Wheel Hub FRONT
03905 6599	MB025295	72 x 94 x 10	CANTER (2T~) FE83D	02/5~	Wheel Hub FRONT
03905 3797	MB025295	72 x 94 x 10	CANTER (2T~) FE73E BY6#,CY6#,EY6#	02/5~	Wheel Hub FRONT
03905 6203	MB025295	72 x 94 x 10	CANTER (2T~) FE69E EV31	99/3~02/	Wheel Hub FRONT
03905 5729	MB025295	72 x 94 x 10	CANTER (2T~) FE63E CX3#,CY6#,CY7#,EY6#, EY7#,GY6#	99/3~02/	Wheel Hub FRONT
03905 1244	MB025295	72 x 94 x 10	CANTER (2T~) FE63D CY7#,EV3#,EX3#,EY7#,E 3#,GX3#,GY7	99/3~02/	Wheel Hub FRONT
03905 1175	MB025295	72 x 94 x 10	CANTER (2T~) FE63C EV355	99/3~02/	Wheel Hub FRONT
03905 4634	MB420112	36 x 50 x 8	CANTER (2T~) FG73E,83E	02/5~	Wheel Hub FRONT AXLE SHAFT
03905 6545	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE63D EXCEPT CY7#,EY7#,GY7#	99/3~02/	Wheel Hub REAR WHEEL OUTER
03905 5327	MH034175	130 x 146 x 14	CANTER (2T~) FE83D JZ7	02/5~	Wheel Hub REAR WHEEL INNER
03905 1847	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE1##,2##	78/11~85/	Wheel Hub REAR WHEEL OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3569	MB308966	56 x 114 x 10	CANTER (2T~) FE63E CY6#,CY7#,EY6#,EY7#, GY6#	99/3~02/	Wheel Hub REAR WHEEL OUTER
03905 9014	MB308966	56 x 114 x 10	CANTER (2T~) FE3D CY7#,EY7#,GY7#	99/3~02/	Wheel Hub REAR WHEEL OUTER
03905 7670	MB308966	56 x 114 x 10	CANTER (2T~) FE652,658,659	95/3~99/	Wheel Hub REAR WHEEL OUTER
03905 2276	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FG ALL	85/12~	Wheel Hub REAR WHEEL OUTER
03905 4040	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FF ALL	96/11~	Wheel Hub REAR WHEEL OUTER
03905 3065	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE83E C4#,C6#,CX3#,CX6#,EN# ,GN#	02/5~	Wheel Hub REAR WHEEL OUTER
03905 3605	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE83D EN#,GN#	02/5~	Wheel Hub REAR WHEEL OUTER
03905 2774	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE82C,82D,82E,83C,88E	02/5~	Wheel Hub REAR WHEEL OUTER
03905 5378	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FE83E C4#,C6#,CX3#,CX6#,EN# ,GN#	02/5~	Wheel Hub REAR WHEEL INNER
03905 8903	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE63E EXCEPT CY6#,CY7#,EY6#,EY7#, GY6#	99/3~02/	Wheel Hub REAR WHEEL OUTER
03905 5372	MB161152	70 x 112 x 10 x 18.5	CANTER (2T~) FF ALL	96/11~	Wheel Hub REAR WHEEL INNER
03905 4001	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE62E,63C,69E	99/3~02/	Wheel Hub REAR WHEEL OUTER
03905 6191	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE632,636,637,638,639,64 2,648,649,662,667,668,669	93/10~99/	Wheel Hub REAR WHEEL OUTER
03905 2237	MT119305	68 x 90 x 12	CANTER (2T~) FE63E C4#,C6#,CX6#,EV1#	99/3~02/	Wheel Hub FRONT
03905 1268	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE5##	93/10~02/	Wheel Hub REAR WHEEL OUTER
03905 1568	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE3##,4##	85/9~93/	Wheel Hub REAR WHEEL OUTER
03905 4823	MB308965	85 x 127 x 13	CANTER (2T~) FE83E CY#,EY#,GY#	02/5~	Wheel Hub REAR WHEEL INNER
03905 2912	MB308965	85 x 127 x 13	CANTER (2T~) FE83D CY7#,EY7#,GY7#	02/5~	Wheel Hub REAR WHEEL INNER
03905 5867	MB308965	85 x 127 x 13	CANTER (2T~) FE63E CY6#,CY7#,EY6#,EY7#, GY6#	99/3~02/	Wheel Hub REAR WHEEL INNER
03905 6944	MB308965	85 x 127 x 13	CANTER (2T~) FE63D CY7#,EY7#,GY7#	99/3~02/	Wheel Hub REAR WHEEL INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1862	MB308965	85 x 127 x 13	CANTER (2T~) FE652,658,659	95/3~99/	Wheel Hub REAR WHEEL INNER
03905 2750	MB308966	56 x 114 x 10	CANTER (2T~) FE83D CY7#,EY7#,GY7#	02/5~	Wheel Hub REAR WHEEL OUTER
03905 8741	MB308933	46 x 102 x 10 x 16	CANTER (2T~) FE7##	02/5~	Wheel Hub REAR WHEEL OUTER
03905 1235	MT119305	68 x 90 x 12	CANTER (2T~) FE512,517,518,532,533,53 6,537,538	93/10~99/	Wheel Hub FRONT
03905 5600	MT327029	56 x 81 x 8	CANTER (2T~) FE507,508,527,528	93/10~99/	Wheel Hub FRONT
03905 7490	MT327029	56 x 81 x 8	CANTER (2T~) FE516 BT#	93/10~99/	Wheel Hub FRONT
03905 2261	MT327029	56 x 81 x 8	CANTER (2T~) FE50C,50E,52C,52E	99/3~02/	Wheel Hub FRONT
03905 5918	MT327029	56 x 81 x 8	CANTER (2T~) FE53E CIM#	99/3~02/	Wheel Hub FRONT
03905 6464	MT119305	68 x 90 x 12	CANTER (2T~) FE111 EXCEPT B,E	78/11~85/	Wheel Hub FRONT
03905 4721	MT119305	68 x 90 x 12	CANTER (2T~) FE114 EXCEPT B,BG,E,EW	82/11~85/	Wheel Hub FRONT
03905 6344	MT119305	68 x 90 x 12	CANTER (2T~) FE131,134	81/3~85/	Wheel Hub FRONT
03905 4091	MT119305	68 x 90 x 12	CANTER (2T~) FE211,214 CZZ,EZZ(S)	79/4~85/	Wheel Hub FRONT
03905 6440	MT119305	68 x 90 x 12	CANTER (2T~) FE311,315,317 DUMP(BD#,BN#)	85/9~91/4	Wheel Hub FRONT
03905 9053	MB025295	72 x 94 x 10	CANTER (2T~) FE662,668,669 E3#,EV3#	96/11~99/	Wheel Hub FRONT
03905 8729	MT119305	68 x 90 x 12	CANTER (2T~) FE337 EXCEPT EGE#,EHE#	87/9~91/4	Wheel Hub FRONT
03905 5837	MT327029	56 x 81 x 8	CANTER (2T~) FE337 EGE#,EHE#	89/10~91/ 4	Wheel Hub FRONT
03905 1310	MT119305	68 x 90 x 12	CANTER (2T~) FE355,431,434,435,437,43 7,439	85/9~93/	Wheel Hub FRONT
03905 4940	MT119305	68 x 90 x 12	CANTER (2T~) FE334,335 EXCEPT EHE#	85/9~91/4	Wheel Hub FRONT
03905 7235	MT119305	68 x 90 x 12	CANTER (2T~) FE542,548,562,566,567,56 8,636,637,667	95/3~99/	Wheel Hub FRONT
03905 6899	MT119305	68 x 90 x 12	CANTER (2T~) FE516 EXCEPT BT#	93/10~99/	Wheel Hub FRONT
03905 1091	MT119305	68 x 90 x 12	CANTER (2T~) FE632 C4#,C6#,G1#,G4#,G6#	97/10~99/	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5582	MT119305	68 x 90 x 12	CANTER (2T~) FE638 EXCEPT E3#,EN4#,EV3#,F3#,G3#	93/10~99/	Wheel Hub FRONT
03905 2759	MT119305	68 x 90 x 12	CANTER (2T~) FE639 EXCEPT E3#,EV3#	93/10~99/	Wheel Hub FRONT
03905 7802	MT119305	68 x 90 x 12	CANTER (2T~) FE648 C6A,E6A,E6VM,G6A	96/11~99/	Wheel Hub FRONT
03905 1790	MT119305	68 x 90 x 12	CANTER (2T~) FE662 E1#,E4#,E6#,EV1#,EV4#, EV6#	97/10~99/	Wheel Hub FRONT
03905 7628	MT119305	68 x 90 x 12	CANTER (2T~) FE668,669 EV1#,EV4#,EV6#	96/11~99/	Wheel Hub FRONT
03905 1214	MT119305	68 x 90 x 12	CANTER (2T~) FE51C,51E,53C,59E,62E	99/3~02/	Wheel Hub FRONT
03905 5459	MT119305	68 x 90 x 12	CANTER (2T~) FE53E EXCEPT CIM#,BX62#,CX62#	99/3~02/	Wheel Hub FRONT
03905 6008	MT119305	68 x 90 x 12	CANTER (2T~) FE63C EXCEPT EV355	99/3~02/	Wheel Hub FRONT
03905 4892	MT119305	68 x 90 x 12	CANTER (2T~) FE63D EV1#,EV4#,EV6#,E6#,G1 #,G4#,G6#	99/3~02/	Wheel Hub FRONT
03905 5861	MB308966	56 x 114 x 10	CANTER (2T~) FE83E CY#,EY#,GY#	02/5~	Wheel Hub REAR WHEEL OUTER
03905 6470	MB025295	72 x 94 x 10	CANTER (2T~) FE444,445,447,449,465,46 7	85/9~93,	Wheel Hub FRONT
03905 6554	MT119305	68 x 90 x 12	CANTER (2T~) FE70C,70E,71C,71E,72C, 72E,73C,79E	02/5~	Wheel Hub FRONT
03905 3368	MT119305	68 x 90 x 12	CANTER (2T~) FE82C,82D,82E,83C,88E	02/5~	Wheel Hub FRONT
03905 5954	MT119305	68 x 90 x 12	CANTER (2T~) FE73E B1#,B3#,B4#,B6#,BX#,E N#	02/5~	Wheel Hub FRONT
03905 3977	MT119305	68 x 90 x 12	CANTER (2T~) FE83E C4#,C6#,CX6#,EV6	02/5~	Wheel Hub FRONT
03905 8186	MT119305	68 x 90 x 12	CANTER (2T~) FG507,508	96/10~99/	Wheel Hub FRONT
03905 7397	MT119305	68 x 90 x 12	CANTER (2T~) FG50E,52E,62E,68E	99/3~02/	Wheel Hub FRONT
03905 1103	MT119305	68 x 90 x 12	CANTER (2T~) FG70E,72E,82E,88E	02/5~	Wheel Hub FRONT
03905 7295	MT119305	68 x 90 x 12	CANTER (2T~) FE69E EV11	99/3~02/	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6704	MB025295	72 x 94 x 10	CANTER (2T~) FE231,234	80/12~85/	Wheel Hub FRONT
03905 2819	MB025295	72 x 94 x 10	CANTER (2T~) FE648 ALL	93/10~96/11	Wheel Hub FRONT
03905 6536	MB025295	72 x 94 x 10	CANTER (2T~) FE632 EN4#,G3#	97/10~99/	Wheel Hub FRONT
03905 8444	MB025295	72 x 94 x 10	CANTER (2T~) FE638 E#,EN4#,EV3#,F3#,G3#	93/10~99/	Wheel Hub FRONT
03905 7988	MB025295	72 x 94 x 10	CANTER (2T~) FE639 E3#,EV3#	83/10~99/	Wheel Hub FRONT
03905 1511	MB025295	72 x 94 x 10	CANTER (2T~) FE642	97/10~99/	Wheel Hub FRONT
03905 3134	MT327029	56 x 81 x 8	CANTER (2T~) FE334,335 EHE#	85/9~91/4	Wheel Hub FRONT
03905 2978	MB025295	72 x 94 x 10	CANTER (2T~) FE648 C3#,E3#,G3#	96/11~99/	Wheel Hub FRONT
03905 4793	MT119305	68 x 90 x 12	CANTER (2T~) FE307,311,315,317,331,335,337	91/4~93/	Wheel Hub FRONT
03905 5447	MB025295	72 x 94 x 10	CANTER (2T~) FE211,214 EXCEPT CZZ,EZZ(S)	79/4~85/	Wheel Hub FRONT
03905 4346	MT327029	56 x 81 x 8	CANTER (2T~) FE300,301,305,320,321,325,425	85/9~93/	Wheel Hub FRONT
03905 6170	MB025295	72 x 94 x 10	CANTER (2T~) FE649,652,658,659	93/10~99/	Wheel Hub FRONT
03905 7874	MT327029	56 x 81 x 8	CANTER (2T~) FE100,101,120,121,124,221,224	78/11~85/	Wheel Hub FRONT
03905 6788	MT327029	56 x 81 x 8	CANTER (2T~) FE307,331	89/10~91/4	Wheel Hub FRONT
03905 2705	MT327029	56 x 81 x 8	CANTER (2T~) FE114 B,BG,E,EW	82/11~85/	Wheel Hub FRONT
03905 7985	MT327029	56 x 81 x 8	CANTER (2T~) FE111 B,E	82/10~85/	Wheel Hub FRONT
03905 5693	MT327029	56 x 81 x 8	CANTER (2T~) FE311,315,317 CARGO(BG#,BH#)	85/9~91/4	Wheel Hub FRONT
03905 5660	MH034181	50 x 65 x 9	CANTER (2T~) FE6##...EXCEPT 63ECY6B2,EV6B2,EY6B2	99/3~02/	Transmission REAR
03905 1463	MH034193	57 x 124 x 14.5 x 27	CANTER (2T~) FE83D JZ7	02/5~	Wheel Hub REAR WHEEL OUTER
03905 4121	ME240328	42 x 66 x 11.5 x 18.5	CANTER (2T~) 4M40 FE63D,82D,83D,FF63D,83D	99/3~	Engine TIMING GEAR CASE

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4244	MH034205	56 x 99 x 10 x 34	CANTER (2T~) FE50E,51E,52E,53E,59E,6 2E,63D,63E,69E	99/3~02/	Final Drive PINION
03905 4460	MH034205	56 x 99 x 10 x 34	CANTER (2T~) FE70D,E,71E,72D,E,73D, E,78E,82D,E,83D,E,88E	02/5~	Final Drive PINION
03905 2375	MH034205	56 x 99 x 10 x 34	CANTER (2T~) FG538,638	93/10~99/	Final Drive PINION
03905 6596	MH034205	56 x 99 x 10 x 34	CANTER (2T~) FG53E,63E,73E,83E	99/3~	Final Drive PINION
03905 6686	MH034205	56 x 99 x 10 x 34	CANTER (2T~) FF6##,8##	96/11~	Final Drive PINION
03905 3584	31311-06101	48 x 70 x 12	CANTER (2T~) 4DR5 FE100,120,300,320	78/11~89/	Engine TIMING GEAR CASE
03905 3620	ME024156	55 x 78 x 12	CANTER (2T~) 4D3#...FE1##,2##,3##,4## ,FG3##,4##	78/11~89/ 9	Engine TIMING GEAR CASE
03905 5114	ME013384	55 x 78 x 8	CANTER (2T~) 4D3#...FE1##,2##,3##,4## ,FG3##,4##	89/10~93/	Engine TIMING GEAR CASE
03905 1376	ME017208	57 x 78 x 10 x 16.5	CANTER (2T~) 4D3#...FE5#6,5#7,5#8,6#6 ,6#7,6#8,6#9	93/10~99/	Engine TIMING GEAR CASE
03905 4055	ME017208	57 x 78 x 10 x 16.5	CANTER (2T~) 4D3#...FG5#7,5#8,638	93/10~99/	Engine TIMING GEAR CASE
03905 6758	ME017208	57 x 78 x 10 x 16.5	CANTER (2T~) 4D33 FE5#C,63C,7#C,8#C	99/3~	Engine TIMING GEAR CASE
03905 2660	ME240328	42 x 66 x 11.5 x 18.5	CANTER (2T~) 4M51 FE5#2,6#2	97/10~99/	Engine TIMING GEAR CASE
03905 4295	MH034205	56 x 99 x 10 x 34	CANTER (2T~) FE632,638,639,642,648,64 9,652,658,659,662,668,669	93/10~99/	Final Drive PINION
03905 8816	ME240328	42 x 66 x 11.5 x 18.5	CANTER (2T~) 4M51 FG5#E,6#E,7#E,8#E,FF63 E,83E	93/3~	Engine TIMING GEAR CASE
03905 6014	ME011754	100 x 120 x 16	CANTER (2T~) 4D3#	78/11~85/ 8	Engine CRANK SHAFT REAR
03905 4412	MD008762	35 x 50 x 8	CANTER (2T~) 4G64 FE533	99/3~02/	Engine CAM SHAFT
03905 7499	MD095355	20 x 30 x 7	CANTER (2T~) 4G64 FE533	99/3~02/	Engine OIL PUMP
03905 8831	MD008882	44 x 60 x 7	CANTER (2T~) 4G64 FE533	99/3~02/	Engine CRANK SHAFT FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8876	ME001196	96 x 113 x 16	CANTER (2T~) 4DR5	78/11~86/9	Engine CRANK SHAFT REAR
03905 8789	ME001293	90 x 113 x 15	CANTER (2T~) 4DR5	86/10~93/	Engine CRANK SHAFT REAR
03905 1469	ME011867	100 x 124 x 15	CANTER (2T~) 4D3#	85/9~93/8	Engine CRANK SHAFT REAR
03905 7142	ME240010	101 x 123 x 13.5	CANTER (2T~) 4M50,4M51	97/10~	Engine CRANK SHAFT REAR
03905 6419	MD359158	85 x 103 x 7.5	CANTER (2T~) 4G64	99/3~02/	Engine CRANK SHAFT REAR
03905 1247	ME241213		CANTER (2T~) 4DR5	78/11~93/	Engine VALVE STEM SEAL
03905 3308	ME241213		CANTER (2T~) 4M50,4M51	97/10~	Engine VALVE STEM SEAL
03905 2489	ME215092		CANTER (2T~) 4D3#	78/11~	Engine VALVE STEM SEAL
03905 1832	MH034181	50 x 65 x 9	CANTER (2T~) FE8##	02/5~	Transmission REAR
03905 2417	ME240328	42 x 66 x 11.5 x 18.5	CANTER (2T~) 4M51 FE5#E,6#E,7#E,8#E	93/3~	Engine TIMING GEAR CASE
03905 2516	MH034147	40 x 58 x 8	CANTER (2T~) FG5##,6##,7##,8##	93/10~	Transmission FRONT
03905 3338	ME240010	101 x 123 x 13.5	CANTER (2T~) 4D3#	93/9~	Engine CRANK SHAFT REAR
03905 3512	MH034205	56 x 99 x 10 x 34	CANTER (2T~) FE508,512,518,528,532,538,542,548,562,568	93/10~99/	Final Drive PINION
03905 4376	ME620713	34 x 50 x 7	CANTER (2T~) FE1##,2##,3##...EXCEPT 100,120,300,320	78/11~93/	Transmission FRONT
03905 3773	ME620713	34 x 50 x 7	CANTER (2T~) FE4##	85/9~93/	Transmission FRONT
03905 8294	MH034147	40 x 58 x 8	CANTER (2T~) FE5##,6##,7##,8##	93/10~	Transmission FRONT
03905 4598	MH034147	40 x 58 x 8	CANTER (2T~) FF6##,8##	96/11~	Transmission FRONT
03905 8180	MH034067	32 x 45 x 8	CANTER (2T~) FE100,120,300,320	78/11~89/	Transmission FRONT
03905 2048	MH034177	48 x 65 x 9	CANTER (2T~) FE1##,2##,3##,4##	78/11~93/	Transmission REAR
03905 7094	MH034181	50 x 65 x 9	CANTER (2T~) FE5##...EXCEPT 537,538,568B6B#,562C6BK	93/10~99/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2060	MH034181	50 x 65 x 9	CANTER (2T~) FE6##...EXCEPT 638,668EV6B,648,659C6 B,E6B	93/10~99/	Transmission REAR
03905 4367	MH034181	50 x 65 x 9	CANTER (2T~) FE5##...EXCEPT 53EBX6B#,B6B#,CX6BK 1	99/3~02/	Transmission REAR
03905 4748	MH034181	50 x 65 x 9	CANTER (2T~) FE70C,70E,71C,71E,72C, 72E,73C,73E,78E	02/5~	Transmission REAR
03905 1964	MH034181	50 x 65 x 9	CANTER (2T~) FF6##,8##	96/11~	Transmission REAR
03905 1739	MH034207	50 x 68 x 9	CANTER (2T~) FE537,538,568B6B#,562C 6BK	93/10~99/	Transmission REAR
03905 3356	MH034213	52 x 84 x 14	CANTER (2T~) FG3##,4##	85/12~99/	Final Drive PINION
03905 6650	MH034205	56 x 99 x 10 x 34	CANTER (2T~) FE439,449	89/11~93/	Final Drive PINION
03905 3905	MH034213	52 x 84 x 14	CANTER (2T~) FG50E,52E,62E,68E,70E, 72E,82E,88E	99/3~	Final Drive PINION
03905 1661	ME620713	34 x 50 x 7	CANTER (2T~) FG325,327,335,337,437	85/9~93/	Transmission FRONT
03905 1073	MH034207	50 x 68 x 9	CANTER (2T~) FE638,668EV6B,648,659 C6B,E6B	93/10~99/	Transmission REAR
03905 3671	MH034213	52 x 84 x 14	CANTER (2T~) FG507,508,537	93/10~99/	Final Drive PINION
03905 8006	MH034213	52 x 84 x 14	CANTER (2T~) FE70C,71C,72C,73C,82C, 83C	02/5~	Final Drive PINION
03905 8147	MH034213	52 x 84 x 14	CANTER (2T~) FE50C,51C,52C,53C,63C	99/3~02/	Final Drive PINION
03905 2159	MH034213	52 x 84 x 14	CANTER (2T~) FE1##,2##,3##	78/11~93/	Final Drive PINION
03905 1313	MH034207	50 x 68 x 9	CANTER (2T~) FE53EBX6#,B6B#,CX6B K1	99/3~02/	Transmission REAR
03905 1613	MH034213	52 x 84 x 14	CANTER (2T~) FE507,516,517,527,533,53 6,537,566,567	93/10~99/	Final Drive PINION
03905 7805	MH034213	52 x 84 x 14	CANTER (2T~) FE4##...EXCEPT 439,449	85/9~93/	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1931	MH034207	50 x 68 x 9	CANTER (2T~) FE63CY6B2, EV6B2, EV6 B2, EY6B2	99/3~02/	Transmission REAR
03905 6521	MH034213	52 x 84 x 14	CANTER (2T~) FE636, 637, 667	93/10~99/	Final Drive PINION
03905 8072	MH034249	40 x 65 x 9	CANTER (2T~) FE700, 72D, 73D	02/5~	Transmission REAR
03905 4514	MD153103	35 x 50 x 8	CARISMA DA2A 4G93	96/6~98/	Engine CAM SHAFT
03905 4415	MB303875	52 x 72 x 8 x 11	CARISMA DA2A	96/6~98/	Wheel Hub FRONT OUTER
03905 7304	MB573309	54 x 82 x 8 x 11	CARISMA DA2A	96/6~98/	Wheel Hub FRONT INNER
03905 1901	MD359158	85 x 103 x 7.5	CARISMA DA2A 4G93	96/6~98/	Engine CRANK SHAFT REAR
03905 7772	MD707575	42 x 60 x 9	CARISMA DA2A	96/6~98/	Mission & Differential (M/T) CONVERTER OIL PUMP
03905 5498	MD755904	41 x 61 x 9 x 13.5	CARISMA DA2A	96/6~98/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 8132	MD184303		CARISMA 4G93 IN. & EX.	96/6~98/	Engine VALVE STEM SEAL
03905 6320	MD168055	37 x 50 x 6	CARISMA DA2A 4G93	96/6~98/	Engine CRANK SHAFT FRONT
03905 1571	MD307343		CHALLENGER 6G74 EX.	97/8~02/	Engine VALVE STEM SEAL
03905 1001	MD306079		CHALLENGER 6G74 IN.	97/8~02/	Engine VALVE STEM SEAL
03905 6938	MD050606	44 x 60 x 7	CHALLENGER 4D56	96/5~97/	Engine CRANK SHAFT FRONT
03905 4658	ME202115	90 x 114 x 10.5 x 17	CHALLENGER 4M40	96/5~96/1 10	Engine CRANK SHAFT REAR
03905 3818	MD069948	17 x 28 x 7	CHALLENGER 4D56	96/5~97/	Engine BALANCER SHAFT (RH)
03905 1586	MD069950	25 x 35 x 6	CHALLENGER 4D56	96/5~97/	Engine BALANCER SHAFT (LH)
03905 1997	MD152603	30 x 42 x 8 x 8.4	CHALLENGER 6G74 K99	97/8~02/	Engine CAM SHAFT
03905 1388	ME241213		CHALLENGER 4M40 IN. & EX.	96/5~99/	Engine VALVE STEM SEAL
03905 2618	MD307342		CHALLENGER 6G72 EX.	96/5~98/	Engine VALVE STEM SEAL
03905 3656	MD184303		CHALLENGER 6G72 IN.	96/5~98/	Engine VALVE STEM SEAL
03905 4736	ME202851	94.5 x 114 x 12	CHALLENGER 4M40	96/11~99/	Engine CRANK SHAFT REAR
03905 3899	MD153103	35 x 50 x 8	CHALLENGER 6G72 K96	96/5~98/	Engine CAM SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4565	MR350599	45 x 68.2 x 7 x 8	CHALLENGER K99	97/8~02/	Mission & Differential (A/T) CASE ADAPTER
03905 4469	MD120699	91 x 111 x 9	CHALLENGER 6G72,6G74	96/5~02/	Engine CRANK SHAFT REAR
03905 5744	MD069947	80 x 96 x 9	CHALLENGER 4D56	96/5~97/	Engine CRANK SHAFT REAR
03905 2354	ME202850	50 x 74 x 11	CHALLENGER 4M40 K97	96/11~99/	Engine TIMING GEAR CASE
03905 2837	ME200028	52 x 74 x 11 x 19	CHALLENGER 4M40 K97	96/5~96/10	Engine TIMING GEAR CASE
03905 1853	MD197467		CHALLENGER 4D56 IN. & EX.	96/5~97/	Engine VALVE STEM SEAL
03905 3500	MB936826	30 x 45 x 6.5	CHALLENGER K97	96/5~99/	Mission & Differential (M/T) INPUT SHAFT
03905 1385	MB664285	44 x 72 x 12	CHALLENGER K9#	96/5~02/	Drive Pinion FRONT
03905 4088	MB160949	45 x 72 x 12 x 19.5	CHALLENGER K9#	96/5~02/	Drive Pinion REAR
03905 4904	MD168055	37 x 50 x 6	CHALLENGER 6G72,6G74	96/5~02/	Engine CRANK SHAFT FRONT
03905 4034	MB526395	57 x 75 x 7.5 x 11.5	CHALLENGER K9#	96/5~02/	Wheel Hub FRONT
03905 4100	MB837719	37 x 62 x 12.5	CHALLENGER K9#	96/5~02/	Wheel Hub REAR INNER
03905 3050	MR145792	45 x 68.2 x 8.5	CHALLENGER K9#...ATM	96/5~02/	Mission & Differential (A/T) TRANSFER INPUT
03905 4601	MH034067	32 x 45 x 8	CHALLENGER K94	96/5~97/	Mission & Differential (M/T) INPUT SHAFT
03905 5282	MD153103	35 x 50 x 8	CHALLENGER 4D56 K94	96/5~97/	Engine CAM SHAFT
03905 3260	MR350599	45 x 68.2 x 7 x 8	CHALLENGER K96,97	96/5~99/	Mission & Differential (A/T) EXTENTION HPUSING
03905 4883	MR145502	45 x 68.2 x 15	CHALLENGER K9#...MTM	96/5~99/	Mission & Differential (A/T) TRANSFER INPUT
03905 2129	MD712012	36 x 52 x 10 x 11	CHALLENGER K9#	96/5~02/	Mission & Differential (A/T) TRANSFER FRONT OUTPUT
03905 2948	MD731708	39.6 x 52 x 10 x 11	CHALLENGER K94	96/5~97/	Mission & Differential (A/T) TRANSFER REAR OUTPUT
03905 8057	MB919210	42.8 x 55 x 10 x 11	CHALLENGER K96,97,99	96/5~02/	Mission & Differential (A/T) TRANSFER REAR OUTPUT
03905 7316	MR151061		CHALLENGER K9#	96/5~02/	Power Steering SEAL KIT
03905 7097	MR151065		CHALLENGER K9#	96/5~02/	Power Steering SECTOR SHAFT SEAL KIT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6995	MB664612	50 x 75 x 9	CHALLENGER K9#	96/5~02/	Wheel Hub REAR PUTER
03905 7154	MD069947	80 x 96 x 9	CHARIOT / SPACE WAGON 4G63	91/3~92/5	Engine CRANK SHAFT REAR
03905 7721	MD168057	20 x 30 x 7 x 7.5	CHARIOT / SPACE WAGON G62B,G63B,4G63	85/5~92/5	Engine OIL PUMP
03905 3659	MD120699	91 x 111 x 9	CHARIOT / SPACE WAGON 6G72	99/10~00/2	Engine CRANK SHAFT REAR
03905 2450	MD000508		CHARIOT / SPACE WAGON G32B,G37B,G62B,G67B,4D56,4D68	83/1~97/	Engine VALVE STEM SEAL
03905 8738	MB176746	50 x 66.5 x 13 x 16	CHARIOT / SPACE WAGON DO2WD,3W,5W,9W	83/1~91/	Wheel Hub FRONT INNER
03905 8687	MD372251	91 x 111 x 7.5	CHARIOT / SPACE WAGON 6G72	00/3~	Engine CRANK SHAFT REAR
03905 2255	MD016549	72 x 96 x 9	CHARIOT / SPACE WAGON G32B,G37B	83/1~91/	Engine CRANK SHAFT REAR
03905 5825	MD153103	35 x 50 x 8	CHARIOT / SPACE WAGON 4G64(N33W,44W,84W,94W)	93/3~	Engine CAM SHAFT
03905 4517	MD152603	30 x 42 x 8 x 8.4	CHARIOT / SPACE WAGON 6G72(N86W,96W)	99/10~	Engine CAM SHAFT
03905 4274	MD151463	28 x 40 x 8	CHARIOT / SPACE WAGON G7B	84/6~91/	Engine BALANCER SHAFT
03905 5966	MD069950	25 x 35 x 6	CHARIOT / SPACE WAGON G62B,G63B,4G63,4G64,4D56,4D68	83/1~	Engine BALANCER SHAFT
03905 1403	MD184303		CHARIOT / SPACE WAGON 4G63,4G64	92/6~97/	Engine VALVE STEM SEAL
03905 4754	MD069948	17 x 28 x 7	CHARIOT / SPACE WAGON G62B,G63B,4D56	83/1~85/4	Engine OIL PUMP
03905 7475	MD307343		CHARIOT / SPACE WAGON 4G64	97/8~	Engine VALVE STEM SEAL
03905 1055	MD095355	20 x 30 x 7	CHARIOT / SPACE WAGON 4D56	85/5~91/	Engine OIL PUMP
03905 1478	MD095355	20 x 30 x 7	CHARIOT / SPACE WAGON 4G63,4G64,4D63,4D68	92/6~	Engine OIL PUMP
03905 6071	MD050606	44 x 60 x 7	CHARIOT / SPACE WAGON G32B,G37B,G62B,G67B,4D56,4D68	83/1~	Engine CRANK SHAFT FRONT
03905 5540	MD050606	44 x 60 x 7	CHARIOT / SPACE WAGON 4G63	91/3~92/5	Engine CRANK SHAFT FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2465	MD174462	44 x 60 x 7	CHARIOT / SPACE WAGON 4G63,4G64	92/6~	Engine CRANK SHAFT FRONT
03905 3128	MD120700	37 x 50 x 6	CHARIOT / SPACE WAGON 6G72	99/10~	Engine CRANK SHAFT FRONT
03905 8957	MD069947	80 x 96 x 9	CHARIOT / SPACE WAGON G62B,G63B,4D56	83/1~91/	Engine CRANK SHAFT REAR
03905 3191	MD150161	85 x 103 x 8	CHARIOT / SPACE WAGON 4G63	92/6~97/	Engine CRANK SHAFT REAR
03905 2555	MD359158	85 x 103 x 7.5	CHARIOT / SPACE WAGON 4G64,4D63	92/6~	Engine CRANK SHAFT REAR
03905 6431	MD069948	17 x 28 x 7	CHARIOT / SPACE WAGON G32B,G37B	83/1~91/	Engine OIL PUMP
03905 7124	MD707184	35 x 56 x 9 x 12	CHARIOT / SPACE WAGON DO2W,3W,5W,8W,9W	83/1~91/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE (L&R)
03905 7541	MB176746	50 x 66.5 x 13 x 16	CHARIOT / SPACE WAGON DO8W EXCEPT LBU#	84/6~91/	Wheel Hub FRONT INNER
03905 3917	MB303867	50 x 82 x 8 x 11	CHARIOT / SPACE WAGON DO8W LBU#	84/10~88/	Wheel Hub FRONT INNER
03905 7148	MB573309	54 x 82 x 8 x 11	CHARIOT / SPACE WAGON N33W,38W,43W,48W	91/3~97/	Wheel Hub FRONT INNER
03905 2186	MB176746	50 x 66.5 x 13 x 16	CHARIOT / SPACE WAGON DO2WD,3W,5W,9W	83/1~91/	Wheel Hub FRONT OUTER
03905 8888	MB176746	50 x 66.5 x 13 x 16	CHARIOT / SPACE WAGON DO8W EXCEPT LBU#	84/6~91/	Wheel Hub FRONT OUTER
03905 7547	MB303875	52 x 72 x 8 x 11	CHARIOT / SPACE WAGON DO8W LBU#	84/10~88/	Wheel Hub FRONT OUTER
03905 8912	MB303875	52 x 72 x 8 x 11	CHARIOT / SPACE WAGON N33W,38W,43W,48W	91/3~97/	Wheel Hub FRONT OUTER
03905 1763	MA125844	38 x 52 x 6	CHARIOT / SPACE WAGON DO2W,3W,5W,9W	83/1~91/	Wheel Hub REAR
03905 5255	MB393807	36 x 64 x 11 x 19	CHARIOT / SPACE WAGON DO8W	86/1~91/	Wheel Hub REAR
03905 7367	MD000508		CHARIOT / SPACE WAGON 4G63	91/3~92/5	Engine VALVE STEM SEAL
03905 6356	MD741818	25 x 35 x 6	CHARIOT / SPACE WAGON N33W,38W,43W,48W	91/3~97/	Mission & Differential (M/T) INPUT SHAFT
03905 1562	MD153103	35 x 50 x 8	CHARIOT / SPACE WAGON 4G63(N33W,43W),4D68(N38W,48W)	91/3~97/	Engine CAM SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1565	MD707184	35 x 56 x 9 x 12	CHARIOT / SPACE WAGON N33W,38W	91/3~97/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE (L&R)
03905 4997	MD707184	35 x 56 x 9 x 12	CHARIOT / SPACE WAGON N43W,44W,48W	91/3~97/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE (RH)
03905 1961	MD719710	35 x 54 x 10 x 7	CHARIOT / SPACE WAGON N43W,44W,48W	91/3~97/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE (LH)
03905 2201	MD755904	41 x 61 x 9 x 13.5	CHARIOT / SPACE WAGON N84W,86W	97/8~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE (L&R)
03905 4937	MD758763	41 x 61 x 11.5 x 16	CHARIOT / SPACE WAGON N94W,96W	97/8~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE (L&R)
03905 6989	MD153103	35 x 50 x 8	CHARIOT / SPACE WAGON G32B(DO2W),G62B(DO3 W)	83/1~86/	Engine CAM SHAFT
03905 6023	MD153103	35 x 50 x 8	CHARIOT / SPACE WAGON G37B(DO5W),G63B(DO8 W),4D56(DO9W)	84/6~91/	Engine CAM SHAFT
03905 5603	MD307342		CHARIOT / SPACE WAGON 6G72 EX.	99/10~	Engine VALVE STEM SEAL
03905 9029	MD306079		CHARIOT / SPACE WAGON 6G72 IN.	99/10~	Engine VALVE STEM SEAL
03905 6500	MD069950	25 x 35 x 6	CHARIOT / SPACE WAGON DO2W,3W,5W,8W,9W	83/1~91/	Mission & Differential (M/T) INPUT SHAFT
03905 3074	MD707575	42 x 60 x 9	COLT Z25A,27A	02/11~	Mission & Differential (A/T) CONVERTER HOUSING
03905 8627	MR567613	46 x 60 x 8.5	COLT Z26A,28A(4WD)	02/11~	Mission & Differential (A/T) REAR DIFF. PINION
03905 2120	MD153103	35 x 50 x 8	COLT Z25A,26A,27A,28A	02/11~	Engine CAM SHAFT
03905 8897	MD377999	34 x 46 x 7	COLT Z25A,26A,27A,28A	02/11~	Engine CRANK SHAFT FRONT
03905 7952	MD372250	72 x 96 x 7.5	COLT Z25A,26A,27A,28A	02/11~	Engine CRANK SHAFT REAR
03905 3737	MD302172		COLT Z25A,26A,27A,28A INTAKE	02/11~	Engine VALVE STEM SEAL
03905 5024	MD307341		COLT Z25A,26A,27A,28A EXHAUST	02/11~	Engine VALVE STEM SEAL
03905 2693	MR196784	33 x 60 x 15	COLT Z26A,28A(4WD)	02/11~	Wheel Hub REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1133	MD755904	41 x 61 x 9 x 13.5	COLT Z25A,26A,27A,28A	02/11~	Mission & Differential (A/T) FRONT DIFF. CASE
03905 5420	MD153103	35 x 50 x 8	DELICA / L300 4G33,G33B(1400) LO31P,36P,P01V	79/5~94/	Engine CAM SHAFT
03905 1889	MB092145	42 x 65 x 12	DELICA / L301 P05W 4F A/T	86/4~99/	Final Drive REAR DRIVE PINION
03905 8354	MB160578	42 x 65 x 12	DELICA / L302 PA3V	94/3~99/	Final Drive REAR DRIVE PINION
03905 4331	MB160949	45 x 72 x 12 x 19.5	DELICA / L303 LO35G,37G,38G,39G	82/10~94/	Final Drive REAR DRIVE PINION
03905 6098	MB160949	45 x 72 x 12 x 19.5	DELICA / L304 P04W,23#,24W,25#,35W, 45W	86/4~99/	Final Drive REAR DRIVE PINION
03905 1346	MB160949	45 x 72 x 12 x 19.5	DELICA / L305 P12V	86/8~90/7	Final Drive REAR DRIVE PINION
03905 2621	MB160949	45 x 72 x 12 x 19.5	DELICA / L306 P15W	90/8~99/	Final Drive REAR DRIVE PINION
03905 2636	MB160949	45 x 72 x 12 x 19.5	DELICA / L307 P05W 5F M/T	86/4~99/	Final Drive REAR DRIVE PINION
03905 4214	MD723202	30 x 45 x 6	DELICA / L308 PA3V,5V,PB5V,PC4W,P D5V	94/3~	Transmission FRONT
03905 4535	MR151977		DELICA / L309 PA#,PB#,PC#,PD#,PE#,P F#	94/3~	Power Steering SEAL KIT
03905 7790	MB092145	42 x 65 x 12	DELICA / L310 P01V,02V,03W,05V,15V	86/4~99/	Final Drive REAR DRIVE PINION
03905 4727	MD153103	35 x 50 x 8	DELICA / L311 4G32,G32B(1600) LO32P,33P,34P,63P,P02V ,12V	79/5~94/	Engine CAM SHAFT
03905 1040	MD153103	35 x 50 x 8	DELICA / L312 4G92(1600) P02T,P06V	94/3~99/	Engine CAM SHAFT
03905 3089	MD153103	35 x 50 x 8	DELICA / L313 G62B(1800) LO35#	79/5~86/	Engine CAM SHAFT
03905 2207	MD153103	35 x 50 x 8	DELICA / L314 G63B(2000) LO37G,P03#,P13V,23#	83/11~94/	Engine CAM SHAFT
03905 6998	MD153103	35 x 50 x 8	DELICA / L315 4G63(2000) P07V,13T,17T,27V,PA3V	94/3~99/	Engine CAM SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4319	MD153103	35 x 50 x 8	DELICA / L316 4G64(2400) P04W,P24W,PA4W,PB4 W,PC4W,PD4W	89/8~	Engine CAM SHAFT
03905 6473	MB160949	45 x 72 x 12 x 19.5	DELICA / L317 PA4W,5V.W,PB#,PC#,PD #,PE8W,PF#	94/3~	Final Drive REAR DRIVE PINION
03905 8525	MB160578	42 x 65 x 12	DELICA / L318 P2#,35W,45V(4WD)	86/4~99/	Final Drive FRONT DRIVE PINION
03905 8771	MB936826	30 x 45 x 6.5	DELICA / L319 PA5W,PB5W,PC5W,PD8 W,PE8W,PF8W	94/3~	Transmission FRONT
03905 4025	MD701430	32 x 48 x 10	DELICA / L320 LO31P	79/6~82/	Transmission REAR
03905 6152	MD701430	32 x 48 x 10	DELICA / L321 LO36P,PO1V	82/10~88/ 7	Transmission REAR
03905 7301	MD703743	36 x 52 x 10	DELICA / L322 P0#,P1#,2#,3#,4#...EXCE PT P01V	86/4~99/	Transmission REAR
03905 7769	MB526395	57 x 75 x 7.5 x 11.5	DELICA / L323 P2#,3#,4#(4WD)	86/4~99/	Wheel Hub FRONT
03905 5507	MB919210	42.8 x 55 x 10 x 11	DELICA / L324 PA5W,PB5W,PC5W	94/3~	Transmission REAR
03905 4280	MB092145	42 x 65 x 12	DELICA / L325 P15W	86/8~90/7	Final Drive REAR DRIVE PINION
03905 2654	MD609235	45 x 68.2 x 7 x 8	DELICA / L326 PD4W,5V,6W,8W,PE8W, PF6W,8W	94/3~	Transmission (A/T) EXTENTION HOUSING
03905 3119	MB092145	42 x 65 x 12	DELICA / L327 P12V	90/8~93/	Final Drive REAR DRIVE PINION
03905 4931	MB160578	42 x 65 x 12	DELICA / L328 PD4W,6V,6W,PF6W(4W D)	94/3~	Final Drive FRONT DRIVE PINION
03905 1076	MB160578	42 x 65 x 12	DELICA / L329 PD8W,PE8W,PF8W(4WD) AT	94/3~97/5	Final Drive FRONT DRIVE PINION
03905 1970	MB664285	44 x 72 x 12	DELICA / L330 PD8W,PE8W,PF8W(4WD) MT	94/3~97/5	Final Drive FRONT DRIVE PINION
03905 8426	MB664285	44 x 72 x 12	DELICA / L331 PD8W,PE8W,PF8W(4WD) ALL	97/6~	Final Drive FRONT DRIVE PINION
03905 7325	MB092145	42 x 65 x 12	DELICA / L332 2WD ALL	79/6~86/3	Final Drive REAR DRIVE PINION
03905 3548	MB092145	42 x 65 x 12	DELICA / L333 LO36P,39P,63P,69P	86/4~94/	Final Drive REAR DRIVE PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5312	MD153103	35 x 50 x 8	DELICA / L334 4D56(2500) LO39#,69P,P05#,15#,25#, 35W,45V	86/4~99/	Engine CAM SHAFT
03905 6572	MD951482	40 x 57.2 x 13	DELICA / L335 PA3V,4W,5V.W,PB4W,5 V.W,6W,PC4W,5W	94/3~	Transmission (A/T) EXTENTION HOUSING
03905 7436	MD000508		DELICA / L336 G63B,4G64 EX.	92/10~94/	Engine VALVE STEM SEAL
03905 8126	MD153103	35 x 50 x 8	DELICA / L337 6G72(3000) PB6W,PD6W,PF6W	94/3~	Engine CAM SHAFT
03905 9002	MD120699	91 x 111 x 9	DELICA / L338 6G72	94/3~00/2	Engine CRANK SHAFT REAR
03905 3278	MD372251	91 x 111 x 7.5	DELICA / L339 6G72	00/3~	Engine CRANK SHAFT REAR
03905 1673	ME200012	92 x 114 x 8 x 17	DELICA / L340 4M40	94/3~96/2	Engine CRANK SHAFT REAR
03905 3845	ME202115	90 x 114 x 10.5 x 17	DELICA / L341 4M40	96/3~96/1 0	Engine CRANK SHAFT REAR
03905 6017	ME202851	94.5 x 114 x 12	DELICA / L342 4M40	96/11~99/ 5	Engine CRANK SHAFT REAR
03905 2906	MD150161	85 x 103 x 8	DELICA / L343 G63B,4G63,4G64,4G92	92/5~95/2	Engine CRANK SHAFT REAR
03905 3449	MD000508		DELICA / L344 G32B,33B,62B,63B,4G64, 4G92,4D55,56 IN. & EX.	79/5~92/9	Engine VALVE STEM SEAL
03905 2051	MD069947	80 x 96 x 9	DELICA / L345 4D55,4D56	82/10~	Engine CRANK SHAFT REAR
03905 1250	MD197467		DELICA / L346 G33B,4G92 IN. & EX.	92/10~94/	Engine VALVE STEM SEAL
03905 1748	MD197467		DELICA / L347 G63B,4G64 IN.	92/10~94/ 3	Engine VALVE STEM SEAL
03905 5927	MD197467		DELICA / L348 4D56 IN. & EX.	92/10~	Engine VALVE STEM SEAL
03905 5513	MD184303		DELICA / L349 4G92,4G63,4G64 IN. & EX.	94/4~	Engine VALVE STEM SEAL
03905 7868	MD184303		DELICA / L350 6G72 IN.	94/3~	Engine VALVE STEM SEAL
03905 4646	MD307342		DELICA / L351 6G72 EX.	94/3~	Engine VALVE STEM SEAL
03905 4118	ME241213		DELICA / L352 4M40 IN. & EX.	94/3~	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5849	ME203250	90.5 x 114 x 12	DELICA / L353 4M40	99/6~	Engine CRANK SHAFT REAR
03905 1424	MD168057	20 x 30 x 7 x 7.5	DELICA / L354 G62B,G63B,4G64	85/5~94/	Engine OIL PUMP
03905 7382	MD703743	36 x 52 x 10	DELICA / L355 LO3#...EXCEPT LO31P,36P,LO6#	79/6~94/	Transmission REAR
03905 8711	MD153103	35 x 50 x 8	DELICA / L356 4D56(2500) PA5#,PB5#,PC5W,PD5V	94/3~	Engine CAM SHAFT
03905 6194	MD151463	28 x 40 x 8	DELICA / L357 4G3,G3 LO33PW,63PW	79/5~86/	Engine BALANCER SHAFT
03905 7604	MD069950	25 x 35 x 6	DELICA / L358 G62B,G63B,4G63,4G64	79/5~	Engine BALANCER SHAFT
03905 5477	MD069950	25 x 35 x 6	DELICA / L359 4D55,4D56	82/10~	Engine BALANCER SHAFT(LH)
03905 8666	MD069948	17 x 28 x 7	DELICA / L360 4D55,4D56	82/10~	Engine BALANCER SHAFT(RH)
03905 5132	MD359158	85 x 103 x 7.5	DELICA / L361 4G63,4G64	95/3~	Engine CRANK SHAFT REAR
03905 7970	MD069948	17 x 28 x 7	DELICA / L362 G62B,G63B	79/6~85/4	Engine OIL PUMP
03905 4361	MD153103	35 x 50 x 8	DELICA / L363 4D55(2300) LO38#,68P	82/10~86/	Engine CAM SHAFT
03905 7616	MD095355	20 x 30 x 7	DELICA / L364 4G63,4G64	94/3~	Engine OIL PUMP
03905 1274	ME200028	52 x 74 x 11 x 19	DELICA / L365 4M40 PD8W,PE8W,PF8W	94/3~96/10	Engine TIMING GEAR CASE
03905 7202	ME202850	50 x 74 x 11	DELICA / L366 4M40 PD8W,PE8W,PF8W	96/11~	Engine TIMING GEAR CASE
03905 7256	MD050606	44 x 60 x 7	DELICA / L367 G32B,G33B,G62B,G63B, 4G63,4G64	79/5~	Engine CRANK SHAFT FRONT
03905 2036	MD168055	37 x 50 x 6	DELICA / L368 4G92,6G72	94/3~	Engine CRANK SHAFT FRONT
03905 5651	MD016549	72 x 96 x 9	DELICA / L369 G32B,G33B	79/5~94/	Engine CRANK SHAFT REAR
03905 5135	MD069947	80 x 96 x 9	DELICA / L370 G62B,G63B,4G64	79/5~92/4	Engine CRANK SHAFT REAR
03905 7421	MD069948	17 x 28 x 7	DELICA / L371 G32B,G33B	79/5~94/	Engine OIL PUMP
03905 2150	MB001314	45 x 58 x 9	DELICA / L372 PO1V HI ROOF	90/5~92/7	Wheel Hub REAR OUTER
03905 5231	MB092437	50 x 65 x 10	DELICA / L373 P13T,15T,25T WITHOUT ABS	94/3~99/	Wheel Hub REAR OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8489	MB837719	37 x 62 x 12.5	DELICA / L374 P13T,15T	86/8~99/	Wheel Hub REAR INNER
03905 2753	MB837719	37 x 62 x 12.5	DELICA / L375 P2#,3#,4#(4WD)	86/4~99/	Wheel Hub REAR INNER
03905 3230	MB837719	37 x 62 x 12.5	DELICA / L376 PA3V WITH ABS	94/3~99/	Wheel Hub REAR INNER
03905 4232	MB837719	37 x 62 x 12.5	DELICA / L377 PA4W,5V.W,PB4W,5V.W ,6W,PC4W,5W	94/3~	Wheel Hub REAR INNER
03905 2543	MB837719	37 x 62 x 12.5	DELICA / L378 PO4W,5V,6W,8W,PE8W, PF6W,8W	94/3~	Wheel Hub REAR INNER
03905 2066	MB092712	58 x 75 x 9	DELICA / L379 P02T,05T W TIRE	86/4~99/	Wheel Hub REAR INNER
03905 6962	MB001314	45 x 58 x 9	DELICA / L380 LO38PV.W,39P(ST),69P(ST)	82/10~94/	Wheel Hub REAR OUTER
03905 8492	MB092712	58 x 75 x 9	DELICA / L381 LO63P,68P,69P TRUCK W TIRE	82/10~94/	Wheel Hub REAR INNER
03905 2117	MD703743	36 x 52 x 10	DELICA / L382 PA3V,5V,PB5V,PC4W	94/3~	Transmission REAR
03905 8285	MB001314	45 x 58 x 9	DELICA / L383 P06V,07V,12V,13V,15V. W,17V	86/8~99/	Wheel Hub REAR OUTER
03905 5909	MD723202	30 x 45 x 6	DELICA / L384 P0#,P1#,P2#,3#,4#...EXC EPT P01V	86/4~99/	Transmission FRONT
03905 3311	MB092713	30 x 37 x 3.5 x 6.5	DELICA / L385 LO31P,34P,36P,38P,39P TRUCK W TIRE	79/6~94/	Wheel Hub REAR OUTER
03905 3455	MB092713	30 x 37 x 3.5 x 6.5	DELICA / L386 LO63P,68P,69[TRUCK W TIRE	82/10~94/	Wheel Hub REAR OUTER
03905 5831	MB092713	30 x 37 x 3.5 x 6.5	DELICA / L387 P02T,05T W TIRE	86/4~99/	Wheel Hub REAR OUTER
03905 7268	MB092437	50 x 65 x 10	DELICA / L388 LO35G,37G,38G,39G 4WD	82/10~94/	Wheel Hub REAR OUTER
03905 7742	MB001314	45 x 58 x 9	DELICA / L389 LO36P,63P TRUCK S TIRE	79/6~94/	Wheel Hub REAR OUTER
03905 2525	MA181498	51 x 65 x 9	DELICA / L390 PO1V ALL	92/8~93/	Wheel Hub REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1610	MB526395	57 x 75 x 7.5 x 11.5	DELICA / L391 LO3#...4WD	82/10~94/	Wheel Hub FRONT
03905 5294	MT141132	50 x 65 x 9	DELICA / L392 2WD ALL	79/6~	Wheel Hub FRONT
03905 8192	MB922062	63 x 81 x 7.5 x 11.5	DELICA / L393 PD#,PE#,PF#(4WD)	94/3~	Wheel Hub FRONT
03905 1694	MA181498	51 x 65 x 9	DELICA / L394 LO31P,36P VAN	79/6~86/	Wheel Hub REAR
03905 3182	MA181498	51 x 65 x 9	DELICA / L395 LO32P,33P,35P ALL	79/6~86/	Wheel Hub REAR
03905 6401	MA181498	51 x 65 x 9	DELICA / L396 LO63P,68P VAN,WAGON	82/10~94/	Wheel Hub REAR
03905 8987	MB837719	37 x 62 x 12.5	DELICA / L397 LO35G,37G,38G,39G 4WD	82/10~94/	Wheel Hub REAR INNER
03905 6710	MA181498	51 x 65 x 9	DELICA / L398 PO1V STD ROOF	90/8~92/7	Wheel Hub REAR
03905 6416	MB001314	45 x 58 x 9	DELICA / L399 PA3V WITHOUT ABS	94/3~99/	Wheel Hub REAR OUTER
03905 1730	MB664588	35 x 58 x 8.5	DELICA / L400 LO31P,36P,38P,39P TRUCK S TIRE	79/6~94/	Wheel Hub REAR INNER
03905 7553	MB664588	35 x 58 x 8.5	DELICA / L401 LO63P,68P,69P TRUCK S TIRE	82/10~94/	Wheel Hub REAR INNER
03905 2534	MB664588	35 x 58 x 8.5	DELICA / L402 PO1V HI ROOF	90/5~92/7	Wheel Hub REAR INNER
03905 5225	MB664588	35 x 58 x 8.5	DELICA / L403 PO2T(ST),02V,03V.W,04 W,05T(ST),05V.W	86/4~99/	Wheel Hub REAR INNER
03905 1712	MB664588	35 x 58 x 8.5	DELICA / L404 PO6V,07V,12V,13V,15V. W,17V	86/8~99/	Wheel Hub REAR INNER
03905 4922	MB664588	35 x 58 x 8.5	DELICA / L405 PA3V WITHOUT ABS	94/3~99/	Wheel Hub REAR INNER
03905 4814	MB092712	58 x 75 x 9	DELICA / L406 LO31P,34P,36P,38P,39P TRUCK W TIRE	79/6~94/	Wheel Hub REAR INNER
03905 2558	MA181498	51 x 65 x 9	DELICA / L407 PO1V ALL	86/4~90/7	Wheel Hub REAR
03905 4490	MD069950	25 x 35 x 6	DELICA / L408 LO36P,PO1V	82/10~88/ 7	Transmission FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7220	MB001314	45 x 58 x 9	DELICA / L409 PO2T(ST),02V,03V.W,04 W,05T(ST),05V.W	86/4~99/	Wheel Hub REAR OUTER
03905 3608	MD723202	30 x 45 x 6	DELICA / L410 LO3#...EXCEPT LO31P,36P,LO6#	79/6~94/	Transmission FRONT
03905 1499	MB092437	50 x 65 x 10	DELICA / L411 PA5V,PB5V,PD5V WITHOUT ABS	94/3~99/	Wheel Hub REAR OUTER
03905 8312	MB092437	50 x 65 x 10	DELICA / L412 PA4W,5W,PB5W,6W,PC5 W WITHOUT ABS	94/3~97/5	Wheel Hub REAR OUTER
03905 1598	MB664612	50 x 75 x 9	DELICA / L413 P13T,15T,25T WITH ABS	94/3~99/	Wheel Hub REAR OUTER
03905 4733	MB664612	50 x 75 x 9	DELICA / L414 PA3V,5V,PB5V,PD5V WITH ABS	94/3~99/	Wheel Hub REAR OUTER
03905 2855	MB664612	50 x 75 x 9	DELICA / L415 PA4W,5W,PB4W,5W,6W, PC5W WITH ABS	94/3~	Wheel Hub REAR OUTER
03905 4886	MB664612	50 x 75 x 9	DELICA / L416 PD4W,6W,8W,PE8W,PF6 W,8W	94/3~	Wheel Hub REAR OUTER
03905 7775	MD069950	25 x 35 x 6	DELICA / L417 LO31P	79/6~82/	Transmission FRONT
03905 5552	MB092437	50 x 65 x 10	DELICA / L418 P23V.W,24W,25V.W,27V ,35W,45W	86/4~99/	Wheel Hub REAR OUTER
03905 8213	MB393929	35 x 65 x 12	DIAMANTE / SIGMA F25A,27A,41A,46A,47A(4 WD)	90/2~02/	Mission & Differential (M/T) REAR DIFF. PINION
03905 7694	MD069950	25 x 35 x 6	DIAMANTE / SIGMA F1#...MT	90/2~91/8	Mission & Differential (M/T) INPUT SHAFT
03905 6107	MD758763	41 x 61 x 11.5 x 16	DIAMANTE / SIGMA F14A TRHA#	96/12~97/	Mission & Differential (M/T) FRONT DIFF. CASE(L&R)
03905 8414	MD153103	35 x 50 x 8	DIAMANTE / SIGMA 6A12 F12A	92/10~95/	Engine CAM SHAFT
03905 5360	MD755904	41 x 61 x 9 x 13.5	DIAMANTE / SIGMA F14A EXC. TRHA#	96/12~97/	Mission & Differential (M/T) FRONT DIFF. CASE(L&R)
03905 6122	MD755904	41 x 61 x 9 x 13.5	DIAMANTE / SIGMA F41A	94/11~96/ 11	Mission & Differential (M/T) FRONT DIFF. CASE(L&R)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1652	MD755904	41 x 61 x 9 x 13.5	DIAMANTE / SIGMA F31A,34A,36A,36W,46A, 47A	94/11~	Mission & Differential (M/T) FRONT DIFF. CASE(L&R)
03905 8558	MD719710	35 x 54 x 10 x 17	DIAMANTE / SIGMA F15A,17A,25A,27A	90/2~94/	Mission & Differential (M/T) FRONT DIFF. CASE(LH)
03905 6308	MD742053	37 x 56 x 9 x 12.5	DIAMANTE / SIGMA F13A,F07W	91/10~96/	Mission & Differential (M/T) FRONT DIFF. CASE(L&R)
03905 8594	MD742053	37 x 56 x 9 x 12.5	DIAMANTE / SIGMA 15A,17A	91/10~94/	Mission & Differential (M/T) FRONT DIFF. CASE(RH)
03905 1745	MD707184	35 x 56 x 9 x 12	DIAMANTE / SIGMA F25A,27A	90/2~94/	Mission & Differential (M/T) FRONT DIFF. CASE(RH)
03905 2810	MD707184	35 x 56 x 9 x 12	DIAMANTE / SIGMA F13A,15A,17A	90/2~91/9	Mission & Differential (M/T) FRONT DIFF. CASE(RH)
03905 5588	MD741818	25 x 35 x 6	DIAMANTE / SIGMA F1#...MT	91/8~95/	Mission & Differential (M/T) INPUT SHAFT
03905 3098	MD758763	41 x 61 x 11.5 x 16	DIAMANTE / SIGMA F14A	99/9~02/	Mission & Differential (M/T) FRONT DIFF. CASE(L&R)
03905 7211	MD101915	91 x 111 x 9	DIAMANTE / SIGMA 6G71	90/2~92/	Engine CRANK SHAFT REAR
03905 2807	MD307343		DIAMANTE / SIGMA 6G73 DOHC EX.	94/11~02/	Engine VALVE STEM SEAL
03905 7934	MD307342		DIAMANTE / SIGMA 6G73 SOHC EX.	94/11~02/	Engine VALVE STEM SEAL
03905 3359	MD184303		DIAMANTE / SIGMA 6A12,6A13 IN.	92/10~	Engine VALVE STEM SEAL
03905 2096	MD184303		DIAMANTE / SIGMA 6G73 SOHC IN.	94/11~02/	Engine VALVE STEM SEAL
03905 2213	MD306079		DIAMANTE / SIGMA 6G72 IN.	94/11~02/	Engine VALVE STEM SEAL
03905 4688	MD306079		DIAMANTE / SIGMA 6G73 DOHC IN.	94/11~02/	Engine VALVE STEM SEAL
03905 2918	MD306079		DIAMANTE / SIGMA 6G73,6G72 IN. & EX.	90/2~95/	Engine VALVE STEM SEAL
03905 6902	MD000508		DIAMANTE / SIGMA 6G71 IN. & EX.	90/2~92/	Engine VALVE STEM SEAL
03905 7946	MD359158	85 x 103 x 7.5	DIAMANTE / SIGMA 6A13	02/10~	Engine CRANK SHAFT REAR
03905 8048	MD150161	85 x 103 x 8	DIAMANTE / SIGMA 6A12	92/10~95/	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7466	MD707184	35 x 56 x 9 x 12	DIAMANTE / SIGMA F25A,27A,41A,46A,47A(4 WD)	90/2~02/	Mission & Differential (M/T) REAR DIFF. SIDE
03905 7055	MD120699	91 x 111 x 9	DIAMANTE / SIGMA 6G73,6G72	92/10~00/3	Engine CRANK SHAFT REAR
03905 7724	MD153103	35 x 50 x 8	DIAMANTE / SIGMA 6G71 F11A	90/2~92/9	Engine CAM SHAFT
03905 7133	MD168055	37 x 50 x 6	DIAMANTE / SIGMA 6G71,6G72,6G73,6A12,6A13	90/2~	Engine CAM SHAFT
03905 6548	MD307343		DIAMANTE / SIGMA 6G72 EX.	94/11~02/	Engine VALVE STEM SEAL
03905 6896	MD152603	30 x 42 x 8 x 8.4	DIAMANTE / SIGMA 6G72 F36A(EXC. TYGH),46A,47A	94/11~02/	Engine CAM SHAFT
03905 1676	MD302338		DIAMANTE / SIGMA 6A12,6A13 EX.	92/10~	Engine VALVE STEM SEAL
03905 4421	MD152603	30 x 42 x 8 x 8.4	DIAMANTE / SIGMA 6G72 F17A,27A	90/2~95/	Engine CAM SHAFT
03905 5423	MD152603	30 x 42 x 8 x 8.4	DIAMANTE / SIGMA 6G73 F31A,41A(DOHC)	94/11~02/	Engine CAM SHAFT
03905 2498	MD152603	30 x 42 x 8 x 8.4	DIAMANTE / SIGMA 6G73 F13A,15A,25A	90/2~95/	Engine CAM SHAFT
03905 7787	MD153103	35 x 50 x 8	DIAMANTE / SIGMA 6G72 F36A TYGH	94/11~02/	Engine CAM SHAFT
03905 6083	MD153103	35 x 50 x 8	DIAMANTE / SIGMA 6G73 F31A,41A(SOHC)	94/11~02/	Engine CAM SHAFT
03905 6590	MD153103	35 x 50 x 8	DIAMANTE / SIGMA 6A13 F34A	02/10~	Engine CAM SHAFT
03905 6293	MD372251	91 x 111 x 7.5	DIAMANTE / SIGMA 6G73,6G72	00/3~02/	Engine CRANK SHAFT REAR
03905 1301	MB573309	54 x 82 x 8 x 11	DIAMANTE / SIGMA F13A	90/2~92/9	Wheel Hub FRONT INNER
03905 3386	MD707184	35 x 56 x 9 x 12	DIAMANTE / SIGMA F11A,12A	90/2~94/	Mission & Differential (M/T) FRONT DIFF. CASE(L&R)
03905 2504	MB573309	54 x 82 x 8 x 11	DIAMANTE / SIGMA F11A,F12A	90/2~95/	Wheel Hub FRONT INNER
03905 3731	MB573309	54 x 82 x 8 x 11	DIAMANTE / SIGMA F13A TNHM,TRHM	92/10~95/	Wheel Hub FRONT INNER
03905 1742	MB633432	60 x 86 x 7 x 12	DIAMANTE / SIGMA F13A TRHM1	92/10~95/	Wheel Hub FRONT INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8993	MB633432	60 x 86 x 7 x 12	DIAMANTE / SIGMA F15A,17A,27A	90/2~95/	Wheel Hub FRONT INNER
03905 2993	MB633432	60 x 86 x 7 x 12	DIAMANTE / SIGMA F07W,F36W	92/12~98/	Wheel Hub FRONT INNER
03905 5183	MB303875	52 x 72 x 8 x 11	DIAMANTE / SIGMA F13A	90/2~92/9	Wheel Hub FRONT OUTER
03905 5165	MB303875	52 x 72 x 8 x 11	DIAMANTE / SIGMA F13A TNHM,TRHM	92/10~95/	Wheel Hub FRONT OUTER
03905 7331	MB633434	57 x 76 x 6.8 x 9.5	DIAMANTE / SIGMA F13A TRHM1	92/10~95/	Wheel Hub FRONT OUTER
03905 4334	MB633434	57 x 76 x 6.8 x 9.5	DIAMANTE / SIGMA F15A,17A,27A	90/2~95/	Wheel Hub FRONT OUTER
03905 7751	MB633434	57 x 76 x 6.8 x 9.5	DIAMANTE / SIGMA F07W,F36W	92/12~98/	Wheel Hub FRONT OUTER
03905 8504	MB303875	52 x 72 x 8 x 11	DIAMANTE / SIGMA F11A,F12A	90/2~95/	Wheel Hub FRONT OUTER
03905 5843	MB393807	36 x 64 x 11 x 19	DIAMANTE / SIGMA A25A,F27A(4WD)	90/2~95/	Wheel Hub REAR
03905 3722	MD755904	41 x 61 x 9 x 13.5	DION CR5W,6W,9W 2WD	99/12~	Mission & Differential (A/T) FRONT DIFF. CASE
03905 1223	MD050606	44 x 60 x 7	DION 4G63	99/12~	Engine CRANK SHAFT FRONT
03905 8861	MD168055	37 x 50 x 6	DION 4G93,94	00/7~	Engine CRANK SHAFT FRONT
03905 5216	MD069950	25 x 35 x 6	DION 4G63	99/12~	Engine BLANCER SHAFT
03905 3872	MD095355	20 x 30 x 7	DION 4G63	99/12~	Engine OIL PUMP
03905 2666	MD153103	35 x 50 x 8	DION CR9W 4G63	99/12~	Engine CAM SHAFT
03905 8078	MD153103	35 x 50 x 8	DION CR5W 4G63	02/4~	Engine CAM SHAFT
03905 1475	MD758763	41 x 61 x 11.5 x 16	DION CR5W,6W 4WD	00/7~	Mission & Differential (A/T) FRONT DIFF. CASE
03905 3572	MD359158	85 x 103 x 7.5	DION 4G63,93,94	99/12~	Engine CRANK SHAFT FRONT
03905 7340	MD153103	35 x 50 x 8	DION CR6W 4G94	00/7~	Engine CAM SHAFT
03905 5429	MD707575	42 x 60 x 9	DION CR5W,6W,9W	99/12~	Mission & Differential (A/T) CONVERTER OIL PUMP
03905 2453	MD306079		DION 4G63 IN.	99/12~	Engine VALVE STEM SEAL
03905 8486	MD307343		DION 4G63 EX.	99/12~	Engine VALVE STEM SEAL
03905 8873	MD184303		DION 4G93,94	00/7~	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8543	MD707184	35 x 56 x 9 x 12	DION CR5W,6W 4WD	00/7~	Mission & Differential (A/T) REAR DIFF. SIDE
03905 4871	MD069950	25 x 35 x 6	ECLIPSE D22A,27A,32A,38A 4G63	89/9~97/	Engine BRANCER SHAFT
03905 3239	MD707184	35 x 56 x 9 x 12	ECLIPSE D22A	89/9~94/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 1466	MD742053	37 x 56 x 9 x 12.5	ECLIPSE D32A,38A	95/6~97/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 7172	MD742053	37 x 56 x 9 x 12.5	ECLIPSE D32A,38A	95/6~97/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 3515	MD707575	42 x 60 x 9	ECLIPSE D22A,27A,32A,38A	89/9~97/	Mission & Differential (M/T&A/T) CONVERTER OIL PUMP
03905 4082	MD741818	25 x 35 x 6	ECLIPSE D22A,27A,32A	91/8~97/	Mission & Differential (M/T) INPUT SHAFT
03905 2972	MD095355	20 x 30 x 7	ECLIPSE D22A,27A,32A,38A 4G63	89/9~97/	Engine OIL PUMP
03905 2018	MD719710	35 x 54 x 10 x 17	ECLIPSE D27A	89/9~93/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 4388	MD050606	44 x 60 x 7	ECLIPSE D22A,27A,32A,38A 4G63	89/9~97/	Engine CRANK SHAFT FRONT
03905 8468	MD069947	80 x 96 x 9	ECLIPSE D22A,27A 4G63	89/9~92/6	Engine CRANK SHAFT REAR
03905 1025	MD359158	85 x 103 x 7.5	ECLIPSE D22A,27A 4G63	92/7~95/	Engine CRANK SHAFT REAR
03905 5525	MD359158	85 x 103 x 7.5	ECLIPSE D32A,38A 4G63	95/6~97/	Engine CRANK SHAFT REAR
03905 6803	MD307343		ECLIPSE 4G63 IN. & EX.	89/9~97/	Engine VALVE STEM SEAL
03905 5939	MD153103	35 x 50 x 8	ECLIPSE D22A,27A,32A,38A 4G63	89/9~97/	Engine CAM SHAFT
03905 2699	MB303875	52 x 72 x 8 x 11	ECLIPSE D22A,27A	89/9~95/	Wheel Hub FRONT OUTER
03905 7217	MB573309	54 x 82 x 8 x 11	ECLIPSE D22A,27A	89/9~95/	Wheel Hub FRONT INNER
03905 1910	MD707184	35 x 56 x 9 x 12	ECLIPSE D22A,27A	89/9~95/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 8618	MD069950	25 x 35 x 6	ECLIPSE D22A,27A	89/9~91/8	Mission & Differential (M/T) INPUT SHAFT
03905 3995	MD707575	42 x 60 x 9	EK-WAGON, EK-SPORTS H81W	01/10~	Mission & Differential (A/T) OIL PUMP BODY

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4436	MV026391	35 x 46 x 8	EK-WAGON, EK-SPORTS H81W WITHOUT ABS	01/10~	Wheel Hub REAR
03905 2432	MD707184	35 x 56 x 9 x 12	EK-WAGON, EK-SPORTS H81W	01/10~	Mission & Differential (A/T) FRONT DIFF. CASE
03905 1034	MB092620	35 x 55 x 11	EK-WAGON, EK-SPORTS H81W 4WD	01/10~	Mission & Differential (A/T) REAR DIFF. PINION
03905 6791	MD162689	35 x 47 x 8.5	EK-WAGON, EK-SPORTS 3G83 H81W	01/10~	Engine CAM SHAFT
03905 4544	MD069948	17 x 28 x 7	EK-WAGON, EK-SPORTS 3G83 H81W	01/10~	Engine OIL PUMP
03905 7049	MD115245	31 x 45 x 7	EK-WAGON, EK-SPORTS 3G83 H81W	01/10~	Engine CRANK SHAFT FRONT
03905 7199	MD321819	60 x 75 x 8	EK-WAGON, EK-SPORTS 3G83 H81W	01/10~	Engine CRANK SHAFT REAR
03905 3545	MD179175		EK-WAGON, EK-SPORTS 3G83 H81W	01/10~	Engine VALVE STEM SEAL
03905 1895	MB936241	33 x 50 x 13	EK-WAGON, EK-SPORTS H81W WITH ABS	01/10~	Wheel Hub REAR
03905 1760	MD302338		FTO 6A12 EX.	94/10~00/	Engine VALVE STEM SEAL
03905 5012	MD008762	35 x 50 x 8	FTO DE2A 4G93	94/10~00/	Engine CAM SHAFT
03905 6224	MD008762	35 x 50 x 8	FTO DE3A 6A12	94/10~00/	Engine CAM SHAFT
03905 5906	MD168055	37 x 50 x 6	FTO 4G93,6A12	94/10~00/	Engine CRANK SHAFT FRONT
03905 9026	MD150161	85 x 103 x 8	FTO 4G93,6A12	94/10~95/2	Engine CRANK SHAFT REAR
03905 8267	MD359158	85 x 103 x 7.5	FTO 4G93,6A12	95/3~00/	Engine CRANK SHAFT REAR
03905 8315	MD184303		FTO 6A12 IN.	94/10~00/	Engine VALVE STEM SEAL
03905 4856	MR198955		FTO DE3A HRG#,HNG#,HNF#,HRF#,HNX#,HY#	94/10~00/	Power Steering SEAL KIT
03905 1256	MB573309	54 x 82 x 8 x 11	FTO DE2A,DE3A	94/10~00/	Wheel Hub FRONT INNER
03905 6566	MD184303		FTO 4G93 IN. & EX.	94/10~00/	Engine VALVE STEM SEAL
03905 5714	MB303875	52 x 72 x 8 x 11	FTO DE2A,DE3A	94/10~00/	Wheel Hub FRONT OUTER
03905 3662	MN184008		FTO DE3A HNH#,HRH#	97/2~00/	Power Steering SEAL KIT
03905 5048	MD741818	25 x 35 x 6	FTO DE2A,DE3A	94/10~00/	Mission & Differential (M/T) INPUT SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7631	MD755904	41 x 61 x 9 x 13.5	FTO DE2A,DE3A	94/10~00/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(L&R)
03905 8231	MD707575	42 x 60 x 9	FTO DE2A,DE3A	94/10~00/	Mission & Differential (A/T) CONVERTER OIL PUMP
03905 2522	MB103090R		FTO DE2A	94/10~97/1	Power Steering SEAL KIT
03905 7577	MB103090R		FTO DE3A HNH#,HRH#	94/10~97/1	Power Steering SEAL KIT
03905 4781	MN184008		FTO DE2A	97/2~00/	Power Steering SEAL KIT
03905 6326	MH034036	55 x 72 x 9	FUSO BUS MJ, MK, ME MK115	76/~84/	Transmission REAR
03905 6611	MH034146	50 x 68 x 9	FUSO BUS MJ, MK, ME MJ2#,6#	93/7~	Transmission FRONT
03905 8360	MH034146	50 x 68 x 9	FUSO BUS MJ, MK, ME MK2#,6#	93/7~	Transmission FRONT
03905 4439	MH034146	50 x 68 x 9	FUSO BUS MJ, MK, ME MK117 FF,JF,JR,JUF,JUR	87/10~93/	Transmission FRONT
03905 7706	MH034146	50 x 68 x 9	FUSO BUS MJ, MK, ME MK516	88/1~93/	Transmission FRONT
03905 4106	MH034146	50 x 68 x 9	FUSO BUS MJ, MK, ME MK517 JF,JR	87/10~93/	Transmission FRONT
03905 6920	MH034148	58 x 75 x 9	FUSO BUS MJ, MK, ME MK102,116,117,126	79/2~93/	Transmission REAR
03905 1526	MC827472	60 x 103 x 10 x 33.5	FUSO BUS MJ, MK, ME MK618 FM,FME,FP,JF,JM,JME,J P,JR,JUR,FY,JY	93/7~95/	Final Drive PINION
03905 3989	MH034147	40 x 58 x 8	FUSO BUS MJ, MK, ME ME17D	02/3~	Transmission FRONT
03905 7061	MH034147	40 x 58 x 8	FUSO BUS MJ, MK, ME MJ117,527	87/10~93/	Transmission FRONT
03905 1775	MH034146	50 x 68 x 9	FUSO BUS MJ, MK, ME MK525,526,595	87/10~96/	Transmission FRONT
03905 1934	MH034148	58 x 75 x 9	FUSO BUS MJ, MK, ME MK115	84/~87/	Transmission REAR
03905 1502	MH034148	58 x 75 x 9	FUSO BUS MJ, MK, ME MK2#,5#,6#	84/5~	Transmission REAR
03905 5822	MH034035	60 x 82 x 13.5 x 20	FUSO BUS MJ, MK, ME MK#	74/~75/2	Final Drive PINION
03905 6980	MH034048	60 x 103 x 13.5 x 20	FUSO BUS MJ, MK, ME MK#	75/3~77/	Final Drive PINION
03905 6188	MC827472	60 x 103 x 10 x 33.5	FUSO BUS MJ, MK, ME MK218,219 EXC. JD	93/7~99/	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6263	MC827472	60 x 103 x 10 x 33.5	FUSO BUS MJ, MK, ME MK619 FM,FME,FUF,JF,JM,JME, JR,JUR,FF,FP,JP,FY,JY	95/4~99/	Final Drive PINION
03905 3959	MC827472	60 x 103 x 10 x 33.5	FUSO BUS MJ, MK, ME MK23H FM,FME,JM,JME	99/5~	Final Drive PINION
03905 5345	MH034147	40 x 58 x 8	FUSO BUS MJ, MK, ME MK527	87/10~96/	Transmission FRONT
03905 4652	MH034175	130 x 146 x 14	FUSO BUS MJ, MK, ME MK2#	93/7~	Wheel Hub REAR INNER
03905 3929	MC827472	60 x 103 x 10 x 33.5	FUSO BUS MJ, MK, ME MK25H FM,FME,FY,JM,JME,JV	99/5~	Final Drive PINION
03905 3131	MC827472	60 x 103 x 10 x 33.5	FUSO BUS MJ, MK, ME MK1#,5#	77/~96/	Final Drive PINION
03905 7151	MH034110	45 x 53 x 6.5 x 8	FUSO BUS MJ, MK, ME MJ117,527	87/10~93/	Wheel Hub REAR OUTER
03905 1445	MH034172	65 x 113 x 10 x 30	FUSO BUS MJ, MK, ME MK618,619 FD,FH,JD,JH	93/7~99/	Final Drive PINION
03905 2747	MH034172	65 x 113 x 10 x 30	FUSO BUS MJ, MK, ME MK218,219 JD	93/7~99/	Final Drive PINION
03905 6542	MH034091	102 x 116 x 14	FUSO BUS MJ, MK, ME MJ#,MK#	79/9~	Wheel Hub FRONT
03905 8564	MB025295	72 x 94 x 10	FUSO BUS MJ, MK, ME ME17D	02/3~	Wheel Hub FRONT
03905 6182	MH034092	130 x 150 x 14	FUSO BUS MJ, MK, ME MJ117,527	87/10~93/	Wheel Hub REAR INNER
03905 4142	MH034092	130 x 150 x 14	FUSO BUS MJ, MK, ME MK1#	79/9~93/	Wheel Hub REAR INNER
03905 6908	MH034092	130 x 150 x 14	FUSO BUS MJ, MK, ME MK5#	84/5~94/1 1	Wheel Hub REAR INNER
03905 8465	MH034175	130 x 146 x 14	FUSO BUS MJ, MK, ME MJ2#,6#	93/7~	Wheel Hub REAR INNER
03905 8552	MH034175	130 x 146 x 14	FUSO BUS MJ, MK, ME MK526,527	94/12~96/	Wheel Hub REAR INNER
03905 5243	MH034175	130 x 146 x 14	FUSO BUS MJ, MK, ME MK6#	93/7~	Wheel Hub REAR INNER
03905 8237	MH034006	65 x 120.5 x 10	FUSO BUS MJ, MK, ME MK116,126,516	79/9~86/6	Wheel Hub REAR OUTER
03905 3830	MH034147	40 x 58 x 8	FUSO BUS MJ, MK, ME MK517 FD,FG,FH,JD,JG,JH	87/10~93/	Transmission FRONT
03905 8495	MH034110	45 x 53 x 6.5 x 8	FUSO BUS MJ, MK, ME MK1#	86/7~93/	Wheel Hub REAR OUTER
03905 1217	MH034110	45 x 53 x 6.5 x 8	FUSO BUS MJ, MK, ME MK5#	86/7~96/	Wheel Hub REAR OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6305	MH034193	57 x 124 x 14.5 x 27	FUSO BUS MJ, MK, ME MJ2#,6#	93/7~	Wheel Hub REAR OUTER
03905 6467	MH034193	57 x 124 x 14.5 x 27	FUSO BUS MJ, MK, ME MK2#,6#	93/7~	Wheel Hub REAR OUTER
03905 5060	MB308966	56 x 114 x 10	FUSO BUS MJ, MK, ME ME17D	02/3~	Wheel Hub REAR OUTER
03905 9011	ME620713	34 x 50 x 7	FUSO BUS MJ, MK, ME MK115	79/~84/	Transmission FRONT
03905 7241	MH034147	40 x 58 x 8	FUSO BUS MJ, MK, ME MK102,116,126,515,516	79/12~87/12	Transmission FRONT
03905 8435	MH034147	40 x 58 x 8	FUSO BUS MJ, MK, ME MK115	84/~87/	Transmission FRONT
03905 2573	MH034147	40 x 58 x 8	FUSO BUS MJ, MK, ME MK117 FD,FG,FK,JD,JG,JK	87/10~93/	Transmission FRONT
03905 5381	MB308965	85 x 127 x 13	FUSO BUS MJ, MK, ME ME17D	02/3~	Wheel Hub REAR INNER
03905 7592	ME034976	108 x 140 x 180 x 17	FUSO BUS MJ, MK, ME 6D15 MK516,526,616,626	90/4~95/	Engine CRANK SHAFT REAR
03905 3683	MC827472	60 x 103 x 10 x 33.5	FUSO BUS MJ, MK, ME MJ117,527	87/10~93/	Final Drive PINION
03905 2090	ME241213		FUSO BUS MJ, MK, ME 6D1#,6M6#,4M50	95/4~	Engine VALVE STEM SEAL
03905 2081	ME215092		FUSO BUS MJ, MK, ME 6D1#	74/~95/4	Engine VALVE STEM SEAL
03905 8075	ME240010	101 x 123 x 13.5	FUSO BUS MJ, MK, ME 4M50 ME17D	02/3~	Engine CRANK SHAFT REAR
03905 1115	ME034976	108 x 140 x 180 x 17	FUSO BUS MJ, MK, ME 6M61 MK23H,25H,27H,MJ23H,25H,26H,27H	99/5~	Engine CRANK SHAFT REAR
03905 5735	ME034976	108 x 140 x 180 x 17	FUSO BUS MJ, MK, ME 6D17 MK218,219,618,619,628,629,MJ218,219,628,629	93/7~99/	Engine CRANK SHAFT REAR
03905 5222	ME034976	108 x 140 x 180 x 17	FUSO BUS MJ, MK, ME 6D16 MK117,517,527,612,622,MJ117,217,527	87/10~99/	Engine CRANK SHAFT REAR
03905 6044	ME034976	108 x 140 x 180 x 17	FUSO BUS MJ, MK, ME 6D14 MK525,595	87/10~90/	Engine CRANK SHAFT REAR
03905 2471	ME030856	107 x 140 x 180 x 17.5	FUSO BUS MJ, MK, ME 6D15 MK116,126,516	84/5~87/10	Engine CRANK SHAFT REAR
03905 5549	ME030856	107 x 140 x 180 x 17.5	FUSO BUS MJ, MK, ME 6D14 MK115,515	84/5~87/10	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6866	ME031584	105 x 125 x 11	FUSO BUS MJ, MK, ME 6D14 MK115	74/~84/5	Engine CRANK SHAFT REAR
03905 6200	ME031584	105 x 125 x 11	FUSO BUS MJ, MK, ME 6D10 MK103	74/~84/5	Engine CRANK SHAFT REAR
03905 1679	ME031548	100 x 125 x 12.5	FUSO BUS MJ, MK, ME 6D15 MK116	74/~84/	Engine CRANK SHAFT REAR
03905 2615	MH034172	65 x 113 x 10 x 30	FUSO BUS MJ, MK, ME MJ2#,6#	87/10~	Final Drive PINION
03905 5882	MH034172	65 x 113 x 10 x 30	FUSO BUS MJ, MK, ME MK612,616,622,626,628,629	93/7~99/	Final Drive PINION
03905 6086	ME034976	108 x 140 x 180 x 17	FUSO BUS MJ, MK, ME 6M60 MK25F,26F	99/5~	Engine CRANK SHAFT REAR
03905 8585	ME031548	100 x 125 x 12.5	FUSO BUS MJ, MK, ME 6DS7 MK102	74/~84/	Engine CRANK SHAFT REAR
03905 3083	MH034172	65 x 113 x 10 x 30	FUSO BUS MJ, MK, ME MK23H FF,FVF,HNVF,HVF,JF,JR	99/5~	Final Drive PINION
03905 4610	MH034172	65 x 113 x 10 x 30	FUSO BUS MJ, MK, ME MK25H FD,FF,JD,JF,JNVF,JR,JV F	99/5~	Final Drive PINION
03905 4409	MH034172	65 x 113 x 10 x 30	FUSO BUS MJ, MK, ME MK25F,26F,27H	99/5~	Final Drive PINION
03905 2243	MH034205	56 x 99 x 10 x 34	FUSO BUS MJ, MK, ME ME17D	02/3~	Final Drive PINION
03905 2162	ME034156	55 x 78 x 12	FUSO BUS MJ, MK, ME 6DS7 MK102	74/~84/	Engine CRANK SHAFT FRONT
03905 8165	ME031543	72 x 94 x 12	FUSO BUS MJ, MK, ME 6D1#...MK#,MJ#	74/~88/8	Engine CRANK SHAFT FRONT
03905 1427	ME071269	76 x 94 x 12	FUSO BUS MJ, MK, ME 6D1#...MK#,MJ#	88/9~95/	Engine CRANK SHAFT FRONT
03905 5153	ME074755	75 x 100 x 14.5 x 19.5	FUSO BUS MJ, MK, ME 6D1#...MK#,MJ#	95/4~	Engine CRANK SHAFT FRONT
03905 3335	ME074755	75 x 100 x 14.5 x 19.5	FUSO BUS MJ, MK, ME 6M60 MK25F,26F	99/5~	Engine CRANK SHAFT FRONT
03905 2348	ME074755	75 x 100 x 14.5 x 19.5	FUSO BUS MJ, MK, ME 6M61 MK23H,25H,27H,MJ23H,25H,26H,27H	99/5~	Engine CRANK SHAFT FRONT
03905 2642	ME240328	42 x 66 x 11.5 x 18.5	FUSO BUS MJ, MK, ME 4M50 ME17D	02/3~	Engine CRANK SHAFT FRONT
03905 3401	31212-33300	135 x 155.5 x 15	FUSO BUS MM, MP, MR, MS, MU 8M21 MS822,MU612	95/3~97/8	Engine CRANK SHAFT REAR
03905 5858	ME031543	72 x 94 x 12	FUSO BUS MM, MP, MR, MS, MU 6D1#...MM#	74/~88/8	Engine CRANK SHAFT FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7862	ME152584	132 x 179.5 x 12.5 x 22	FUSO BUS MM, MP, MR, MS, MU 6D24 MP##7	97/8~	Engine CRANK SHAFT REAR
03905 3473	31212-33300	135 x 155.5 x 15	FUSO BUS MM, MP, MR, MS, MU 6D24 MP##7	95/3~97/8	Engine CRANK SHAFT REAR
03905 1109	ME093335	132 x 171.5 x 13.5 x 22	FUSO BUS MM, MP, MR, MS, MU 8DC9 MS815	95/3~00/	Engine CRANK SHAFT REAR
03905 2861	ME093335	132 x 171.5 x 13.5 x 22	FUSO BUS MM, MP, MR, MS, MU 8DC11 MS819,829,85K	95/3~	Engine CRANK SHAFT REAR
03905 6887	ME152584	132 x 179.5 x 12.5 x 22	FUSO BUS MM, MP, MR, MS, MU 8M21 MS822,85M,86M,MU612	97/8~	Engine CRANK SHAFT REAR
03905 3599	31212-33300	135 x 155.5 x 15	FUSO BUS MM, MP, MR, MS, MU 6D22 MP518,618,628	80/1~96/	Engine CRANK SHAFT REAR
03905 2273	ME152584	132 x 179.5 x 12.5 x 22	FUSO BUS MM, MP, MR, MS, MU 6M70 MP33J,35J,37J	00/4~	Engine CRANK SHAFT REAR
03905 8654	ME215092		FUSO BUS MM, MP, MR, MS, MU 6D1#	74/~95/	Engine VALVE STEM SEAL
03905 8129	ME241213		FUSO BUS MM, MP, MR, MS, MU 6D16,6D17	95/4~99/	Engine VALVE STEM SEAL
03905 6569	ME241213		FUSO BUS MM, MP, MR, MS, MU 6M60,6M61	99/5~	Engine VALVE STEM SEAL
03905 5300	ME061574		FUSO BUS MM, MP, MR, MS, MU 8DC#,6D2#,8M20	79/~	Engine VALVE STEM SEAL
03905 3380	ME180113		FUSO BUS MM, MP, MR, MS, MU 6M70	00/4~	Engine VALVE STEM SEAL
03905 5150	ME071269	76 x 94 x 12	FUSO BUS MM, MP, MR, MS, MU 6D1#...MM#	88/9~95/	Engine CRANK SHAFT FRONT
03905 7517	31212-33300	135 x 155.5 x 15	FUSO BUS MM, MP, MR, MS, MU 8M20 MS821	92/8~95/	Engine CRANK SHAFT REAR
03905 4250	ME061853	95 x 120 x 13	FUSO BUS MM, MP, MR, MS, MU 6D2#...MP#	76/~85/	Engine CRANK SHAFT FRONT
03905 2321	ME180113		FUSO BUS MM, MP, MR, MS, MU 8M20,8M21	92/8~	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7364	ME030856	107 x 140 x 180 x 17.5	FUSO BUS MM, MP, MR, MS, MU 6D14,6D15 MM515,116	84/~87/10	Engine CRANK SHAFT REAR
03905 4184	ME074755	75 x 100 x 14.5 x 19.5	FUSO BUS MM, MP, MR, MS, MU 6M60,6M61 MM85F,86F,33H,35H	99/5~	Engine CRANK SHAFT FRONT
03905 4115	31107-06301	85 x 110 x 13	FUSO BUS MM, MP, MR, MS, MU 8DC#...MS#	75/~83/	Engine CRANK SHAFT FRONT
03905 8399	ME061853	95 x 120 x 13	FUSO BUS MM, MP, MR, MS, MU 8DC#...MS#,MU#	83/~85/	Engine CRANK SHAFT FRONT
03905 1142	MH034036	55 x 72 x 9	FUSO BUS MM, MP, MR, MS, MU MM515	76/~84/	Transmission REAR
03905 8702	ME060124	95 x 125 x 13.5 x 21.5	FUSO BUS MM, MP, MR, MS, MU 8DC#...MS#,MU#	85/~	Engine CRANK SHAFT FRONT
03905 6491	12020-39600	70 x 132 x 12 x 30	FUSO BUS MM, MP, MR, MS, MU MP627,628,747,37J	91/12~	Final Drive PINION
03905 5318	ME060124	95 x 125 x 13.5 x 21.5	FUSO BUS MM, MP, MR, MS, MU 6M70 MP33J,35J,37J	00/4~	Engine CRANK SHAFT FRONT
03905 6125	ME060124	95 x 125 x 13.5 x 21.5	FUSO BUS MM, MP, MR, MS, MU 6D2#...MP#	85/~	Engine CRANK SHAFT FRONT
03905 4454	ME060124	95 x 125 x 13.5 x 21.5	FUSO BUS MM, MP, MR, MS, MU 8M21 MS822,85M,86M,MU612	95/3~	Engine CRANK SHAFT FRONT
03905 5786	31212-33300	135 x 155.5 x 15	FUSO BUS MM, MP, MR, MS, MU 8DC11 MS729	88/7~94/	Engine CRANK SHAFT REAR
03905 3263	ME034976	108 x 140 x 180 x 17	FUSO BUS MM, MP, MR, MS, MU 6D1#...MM#	87/10~99/	Engine CRANK SHAFT REAR
03905 8405	MH034155	75 x 100 x 13	FUSO BUS MM, MP, MR, MS, MU MS8#	92/8~	Transmission REAR
03905 4325	ME034976	108 x 140 x 180 x 17	FUSO BUS MM, MP, MR, MS, MU 6M60,6M61 MM85F,86F,33H,35H	99/5~	Engine CRANK SHAFT REAR
03905 7373	31112-05701	130 x 160 x 14	FUSO BUS MM, MP, MR, MS, MU 8DC#,,,MS#	75/~80/	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5102	31112-05701	130 x 160 x 14	FUSO BUS MM, MP, MR, MS, MU 6D2#...MP#	76/~80/	Engine CRANK SHAFT REAR
03905 7976	31212-33300	135 x 155.5 x 15	FUSO BUS MM, MP, MR, MS, MU 8DC8 MS613,713	80/1~90/	Engine CRANK SHAFT REAR
03905 2549	31212-33300	135 x 155.5 x 15	FUSO BUS MM, MP, MR, MS, MU 8DC9 MS615,715,725,815	80/1~95/2	Engine CRANK SHAFT REAR
03905 9050	31212-33300	135 x 155.5 x 15	FUSO BUS MM, MP, MR, MS, MU 8DC10 MS716,726,826	90/4~95/	Engine CRANK SHAFT REAR
03905 8327	ME060124	95 x 125 x 13.5 x 21.5	FUSO BUS MM, MP, MR, MS, MU 8M20 MS821	92/8~95/	Engine CRANK SHAFT FRONT
03905 7469	MC807438	154 x 172 x 14	FUSO BUS MM, MP, MR, MS, MU MP#,MS#,MM#	84/8~	Wheel Hub REAR INNER
03905 4685	MH034148	58 x 75 x 9	FUSO BUS MM, MP, MR, MS, MU MM#	84/~	Transmission REAR
03905 8480	MH034147	40 x 58 x 8	FUSO BUS MM, MP, MR, MS, MU MM116,516	80/1~87/	Transmission FRONT
03905 7574	MH034147	40 x 58 x 8	FUSO BUS MM, MP, MR, MS, MU MM515	84/~87/	Transmission FRONT
03905 5309	ME620713	34 x 50 x 7	FUSO BUS MM, MP, MR, MS, MU MM515	79/~84/	Transmission FRONT
03905 7919	MC835508	76 x 157 x 164 x 15	FUSO BUS MM, MP, MR, MS, MU MP627,628,747,37J	91/12~	Wheel Hub REAR OUTER
03905 2177	MH034134	60 x 72 x 12	FUSO BUS MM, MP, MR, MS, MU MP#,MS#,MM#,MU#	80/1~	Wheel Hub REAR OUTER
03905 5267	MH034136	130 x 150 x 12	FUSO BUS MM, MP, MR, MS, MU MU#	89/12~	Wheel Hub REAR INNER(REARWARD)
03905 5753	44514-51681	45 x 60 x 9	FUSO BUS MM, MP, MR, MS, MU MP107,117,MS513	77/~79/9	Transmission FRONT
03905 7262	MC807438	154 x 172 x 14	FUSO BUS MM, MP, MR, MS, MU MU#	84/12~	Wheel Hub REAR INNER(FORWARD)
03905 5888	MH034151	52 x 65 x 9	FUSO BUS MM, MP, MR, MS, MU MP118,218,517,518,618	76/~79/9	Transmission FRONT
03905 6392	MH034082	155 x 180 x 17	FUSO BUS MM, MP, MR, MS, MU MM#,MP#,MR#,MS#	80/1~84/8	Wheel Hub REAR INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1871	MH034180	139 x 158 x 11	FUSO BUS MM, MP, MR, MS, MU MS826,829,86M HIGH DECKER	92/8~	Wheel Hub FRONT
03905 3734	MH034136	130 x 150 x 12	FUSO BUS MM, MP, MR, MS, MU MS826,829,86M STANDARD DECKER	92/8~	Wheel Hub FRONT
03905 8339	MH034136	130 x 150 x 12	FUSO BUS MM, MP, MR, MS, MU MS821,822	92/8~00/	Wheel Hub FRONT
03905 2399	MH034136	130 x 150 x 12	FUSO BUS MM, MP, MR, MS, MU MS7#,815,819,85K,85M	90/1~	Wheel Hub FRONT
03905 6185	MH034136	130 x 150 x 12	FUSO BUS MM, MP, MR, MS, MU MM#,MP#,MU#	90/1~	Wheel Hub FRONT
03905 3743	MH034092	130 x 150 x 14	FUSO BUS MM, MP, MR, MS, MU MM#,MP#,MR#,MS#,MU #	80/1~89/12	Wheel Hub FRONT
03905 6764	MH034092	130 x 150 x 14	FUSO BUS MM, MP, MR, MS, MU MU#	84/12~89/12	Wheel Hub REAR INNER(REARWARD)
03905 1937	MH034153	70 x 92 x 12	FUSO BUS MM, MP, MR, MS, MU MS715	82/12~90/4	Transmission REAR
03905 7487	MC827475	70 x 142 x 12 x 36	FUSO BUS MM, MP, MR, MS, MU MU#	90/3~	Final Drive PINION
03905 3950	12020-59600	70 x 142 x 12 x 36	FUSO BUS MM, MP, MR, MS, MU MU#	84/12~90/2	Final Drive PINION
03905 8198	MH034178	70 x 122 x 12 x 30	FUSO BUS MM, MP, MR, MS, MU MS815,826	92/8~95/	Final Drive PINION
03905 7145	MH034178	70 x 122 x 12 x 30	FUSO BUS MM, MP, MR, MS, MU MS5#,6#,7#	76/10~	Final Drive PINION
03905 8276	MH034178	70 x 122 x 12 x 30	FUSO BUS MM, MP, MR, MS, MU MP#...EXC. 627,628,747,37J	76/10~	Final Drive PINION
03905 4304	MH034178	70 x 122 x 12 x 30	FUSO BUS MM, MP, MR, MS, MU MM#	76/10~	Final Drive PINION
03905 3440	03434-07051	70 x 92 x 13.5 x 20.5	FUSO BUS MM, MP, MR, MS, MU MP#,MS#	76/~76/9	Final Drive PINION
03905 3284	MH034146	50 x 68 x 9	FUSO BUS MM, MP, MR, MS, MU MM#	87/10~	Transmission FRONT
03905 1718	MH034155	75 x 100 x 13	FUSO BUS MM, MP, MR, MS, MU MS729	88/7~94/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1700	MC827475	70 x 142 x 12 x 36	FUSO BUS MM, MP, MR, MS, MU MS819,821,822,829,85K,85M,86M	92/8~	Final Drive PINION
03905 2141	MH034153	70 x 92 x 12	FUSO BUS MM, MP, MR, MS, MU MS513,613,615,713,716,725,725,726	75/~94/	Transmission REAR
03905 4181	MH034153	70 x 92 x 12	FUSO BUS MM, MP, MR, MS, MU MP#	76/~	Transmission REAR
03905 1337	MH034148	58 x 75 x 9	FUSO BUS MM, MP, MR, MS, MU MM116,117,5#(EXC.515)	80/1~84/	Transmission REAR
03905 9041	ME074755	75 x 100 x 14.5 x 19.5	FUSO BUS MM, MP, MR, MS, MU 6D16,6D17 MM812,822,219,319,619,719	95/4~99/	Engine CRANK SHAFT FRONT
03905 8942	MH034151	52 x 65 x 9	FUSO BUS MM, MP, MR, MS, MU MU#	84/12~	Transmission FRONT
03905 4976	MH034151	52 x 65 x 9	FUSO BUS MM, MP, MR, MS, MU MS#	80/1~	Transmission FRONT
03905 5777	MH034151	52 x 65 x 9	FUSO BUS MM, MP, MR, MS, MU MP#	79/10~	Transmission FRONT
03905 3644	MH034155	75 x 100 x 13	FUSO BUS MM, MP, MR, MS, MU MU#	84/12~	Transmission REAR
03905 4058	MH034155	75 x 100 x 13	FUSO BUS MM, MP, MR, MS, MU MS715	90/4~94/	Transmission REAR
03905 1688	MB161152	70 x 112 x 10 x 18.5	FUSO BUS ROSA BE, BH, BG, BK BE#,BH#,BG#	79/3~	Wheel Hub REAR INNER
03905 7430	MH034181	50 x 65 x 9	FUSO BUS ROSA BE, BH, BG, BK BE4##,6##	95/4~	Transmission REAR
03905 5768	MH034177	48 x 65 x 9	FUSO BUS ROSA BE, BH, BG, BK BE2##,4##,BH2##	79/3~95/3	Transmission REAR
03905 4898	MH034147	40 x 58 x 8	FUSO BUS ROSA BE, BH, BG, BK BE6##,BG6##	97/8~	Transmission FRONT
03905 1430	MH034147	40 x 58 x 8	FUSO BUS ROSA BE, BH, BG, BK BE438,439,449,459	89/10~97/	Transmission FRONT
03905 7646	MH034147	40 x 58 x 8	FUSO BUS ROSA BE, BH, BG, BK BE436,BG438	95/4~97/	Transmission FRONT
03905 2873	MH034147	40 x 58 x 8	FUSO BUS ROSA BE, BH, BG, BK BK215F	81/2~86/	Transmission FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3371	ME620713	34 x 50 x 7	FUSO BUS ROSA BE, BH, BG, BK BE434,435,436,437,BG437	86/1~95/3	Transmission FRONT
03905 3629	ME620713	34 x 50 x 7	FUSO BUS ROSA BE, BH, BG, BK BE201D,211D,BH212F,214F	79/3~86/	Transmission FRONT
03905 3164	MH034006	65 x 120.5 x 10	FUSO BUS ROSA BE, BH, BG, BK BK215F	81/2~86/	Wheel Hub REAR OUTER
03905 7163	MB308933	46 x 102 x 10 x 16	FUSO BUS ROSA BE, BH, BG, BK BE#,BG#	86/1~	Wheel Hub REAR OUTER
03905 1715	MT327029	56 x 81 x 8	FUSO BUS ROSA BE, BH, BG, BK BE435E#(SHORT BODY)	86/1~91/9	Wheel Hub FRONT
03905 5609	MH034092	130 x 150 x 14	FUSO BUS ROSA BE, BH, BG, BK BK215F	81/2~86/	Wheel Hub REAR INNER
03905 8621	MH034213	52 x 84 x 14	FUSO BUS ROSA BE, BH, BG, BK BE438,632,642 ATM	95/4~99/	Final Drive PINION
03905 1907	MB420112	36 x 50 x 8	FUSO BUS ROSA BE, BH, BG, BK BG437,438	89/10~97/	Wheel Hub FRONT AXLE SHAFT
03905 5456	MB420155	72 x 96 x 8 x 12	FUSO BUS ROSA BE, BH, BG, BK BG437,438	89/10~97/	Wheel Hub FRONT
03905 8372	MH034091	102 x 116 x 14	FUSO BUS ROSA BE, BH, BG, BK BK215F	81/2~86/	Wheel Hub FRONT
03905 4223	MT119305	68 x 90 x 12	FUSO BUS ROSA BE, BH, BG, BK BG642,64E	97/8~	Wheel Hub FRONT
03905 7991	MT119305	68 x 90 x 12	FUSO BUS ROSA BE, BH, BG, BK BE63C,63E,64D,64E,66D	99/4~	Wheel Hub FRONT
03905 4310	MT119305	68 x 90 x 12	FUSO BUS ROSA BE, BH, BG, BK BE632,636,642,644,654	97/8~99/	Wheel Hub FRONT
03905 8999	MT119305	68 x 90 x 12	FUSO BUS ROSA BE, BH, BG, BK BE435#	91/10~95/	Wheel Hub FRONT
03905 2168	MT119305	68 x 90 x 12	FUSO BUS ROSA BE, BH, BG, BK BE434,437,439,449,459	86/1~97/	Wheel Hub FRONT
03905 3863	MT119305	68 x 90 x 12	FUSO BUS ROSA BE, BH, BG, BK BE435F#(LONG BODY)	86/1~91/9	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1880	MT119305	68 x 90 x 12	FUSO BUS ROSA BE, BH, BG, BK BE211D,BH212F,214F	79/3~86/	Wheel Hub FRONT
03905 7007	MB161134	74.4 x 99.5 x 7.7	FUSO BUS ROSA BE, BH, BG, BK BE201D,211D,BH212F,214F	79/3~86/	Wheel Hub REAR OUTER
03905 3476	ME017208	57 x 78 x 10 x 16.5	FUSO BUS ROSA BE, BH, BG, BK 4D3#...BE4##	93/10~97/	Engine CRANK SHAFT FRONT
03905 5465	ME241213		FUSO BUS ROSA BE, BH, BG, BK 4M5#	97/8~	Engine VALVE STEM SEAL
03905 4592	ME215092		FUSO BUS ROSA BE, BH, BG, BK 4D3#	79/3~	Engine VALVE STEM SEAL
03905 4235	ME031548	100 x 125 x 12.5	FUSO BUS ROSA BE, BH, BG, BK 6D14 BK215F	81/2~86/	Engine CRANK SHAFT REAR
03905 8300	ME001196	96 x 113 x 16	FUSO BUS ROSA BE, BH, BG, BK 6DR5 BH212F	79/3~86/	Engine CRANK SHAFT REAR
03905 5042	ME140010	101 x 123 x 13.5	FUSO BUS ROSA BE, BH, BG, BK 4D3#,4M5#...BE6##	97/8~	Engine CRANK SHAFT REAR
03905 1709	ME140010	101 x 123 x 13.5	FUSO BUS ROSA BE, BH, BG, BK 4D3#...BE4##	93/9~97/	Engine CRANK SHAFT REAR
03905 4958	ME011867	100 x 124 x 15	FUSO BUS ROSA BE, BH, BG, BK 4D3#...BE4##	86/1~93/8	Engine CRANK SHAFT REAR
03905 7913	ME011754	100 x 120 x 16	FUSO BUS ROSA BE, BH, BG, BK 4D3#...BF201D,211D,BH 214F	79/3~86/	Engine CRANK SHAFT REAR
03905 8894	ME031543	72 x 94 x 12	FUSO BUS ROSA BE, BH, BG, BK 6D14 BK215F	81/2~86/	Engine CRANK SHAFT FRONT
03905 5840	31311-06101	48 x 70 x 12	FUSO BUS ROSA BE, BH, BG, BK 6DR5 BH212F	79/3~86/	Engine CRANK SHAFT FRONT
03905 6167	MH034148	58 x 75 x 9	FUSO BUS ROSA BE, BH, BG, BK BK215F	81/2~86/	Transmission REAR
03905 6677	ME017208	57 x 78 x 10 x 16.5	FUSO BUS ROSA BE, BH, BG, BK 4D3#...BE636,63C	97/8~	Engine CRANK SHAFT FRONT
03905 2627	MH034213	52 x 84 x 14	FUSO BUS ROSA BE, BH, BG, BK BE2##,434,435,436,437,B G437	79/3~97/	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8750	ME013384	55 x 78 x 8	FUSO BUS ROSA BE, BH, BG, BK 4D3#...BE4##	89/10~93/10	Engine CRANK SHAFT FRONT
03905 8501	ME024156	55 x 78 x 12	FUSO BUS ROSA BE, BH, BG, BK 4D3#...BE2##,BE4##,BH2 14F	79/3~89/9	Engine CRANK SHAFT FRONT
03905 6638	MC827472	60 x 103 x 10 x 33.5	FUSO BUS ROSA BE, BH, BG, BK BK215F	81/2~86/	Final Drive PINION
03905 1883	MH034205	56 x 99 x 10 x 34	FUSO BUS ROSA BE, BH, BG, BK BE644,654,63E,64D,64E,6 6D	97/8~	Final Drive PINION
03905 8918	MH034205	56 x 99 x 10 x 34	FUSO BUS ROSA BE, BH, BG, BK BE439,449,459,BG438	95/4~97/	Final Drive PINION
03905 3155	MH034205	56 x 99 x 10 x 34	FUSO BUS ROSA BE, BH, BG, BK BE438,632,642 MTM	95/4~99/	Final Drive PINION
03905 2396	MH034205	56 x 99 x 10 x 34	FUSO BUS ROSA BE, BH, BG, BK BE439,449,459,BG438	95/4~97/	Final Drive PINION
03905 2423	MH034205	56 x 99 x 10 x 34	FUSO BUS ROSA BE, BH, BG, BK BE438 MTM	95/4~97/	Final Drive PINION
03905 7445	MH034213	52 x 84 x 14	FUSO BUS ROSA BE, BH, BG, BK BE636,63C,BG642,64E	97/8~	Final Drive PINION
03905 7484	MH034213	52 x 84 x 14	FUSO BUS ROSA BE, BH, BG, BK BE439,449,459	89/10~95/3	Final Drive PINION
03905 6161	MT327029	56 x 81 x 8	FUSO BUS ROSA BE, BH, BG, BK BE201D	79/3~86/	Wheel Hub FRONT
03905 2456	ME240328	42 x 66 x 11.5 x 18.5	FUSO BUS ROSA BE, BH, BG, BK 4M5#...BE632,642,644,65 4,63E,64D,E,66D	97/8~	Engine CRANK SHAFT FRONT
03905 3956	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP54L	00/2~	Wheel Hub REAR INNER
03905 4619	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP418 DRS3A,B,C,D,E,F	83/6~95/	Wheel Hub REAR OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 9056	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP415 DR#(EXC. DRS2A,DRS2B#,DRS2C, 90.10~99.)	83/6~99/	Wheel Hub REAR OUTER
03905 8849	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP410,411,416,419,440,441,449	83/6~97/	Wheel Hub REAR OUTER
03905 8555	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP2##,3##...TRACTOR	74/~83/	Wheel Hub REAR OUTER
03905 6722	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP103,113,119	74/~79/	Wheel Hub REAR OUTER
03905 8069	MH034134	60 x 72 x 12	FUSO TRUCK / TRACTOR FP FP50K EXC. NX41	00/2~	Wheel Hub REAR OUTER
03905 3428	MH034134	60 x 72 x 12	FUSO TRUCK / TRACTOR FP FP515 EXC. DK#,DR# EXC. NX41	96/4~00/	Wheel Hub REAR OUTER
03905 5027	MH034134	60 x 72 x 12	FUSO TRUCK / TRACTOR FP FP418 EXC.DRS3A,DRS3B,DRS3D,DRS3E,DRS3C,DRS3F	83/6~95/	Wheel Hub REAR OUTER
03905 3194	MH034134	60 x 72 x 12	FUSO TRUCK / TRACTOR FP FP415 EXC. DR#	89/11~99/	Wheel Hub REAR OUTER
03905 3926	MH034134	60 x 72 x 12	FUSO TRUCK / TRACTOR FP FP413	83/6~89/	Wheel Hub REAR OUTER
03905 3911	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP50J DR3#,DR4#,GR4#	00/2~	Wheel Hub REAR OUTER
03905 8240	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP54M DR3#,GR3#	00/2~	Wheel Hub REAR INNER
03905 3944	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP515 NX41	96/4~00/	Wheel Hub REAR OUTER
03905 2045	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP54J DR5#	00/2~	Wheel Hub REAR INNER
03905 6209	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP50M DR3#,GR3#	00/2~	Wheel Hub REAR INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6608	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP50L	00/2~	Wheel Hub REAR INNER
03905 3221	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP50J DR5#	00/2~	Wheel Hub REAR INNER
03905 7115	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP515 DK#,DR#	96/4~00/	Wheel Hub REAR INNER
03905 6509	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP512,514,542,543,544,54 5	96/7~00/	Wheel Hub REAR INNER
03905 5708	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP445 DRS2A,DRS2B,DRS2C	85/9~97/	Wheel Hub REAR INNER
03905 4991	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP424,442,444,446	91/9~96/	Wheel Hub REAR INNER
03905 7058	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP415 DRS2A,DRS2B#,DRS2C	90/10~99/	Wheel Hub REAR INNER
03905 2756	MH034084	160 x 182 x 17	FUSO TRUCK / TRACTOR FP FP412,414	89/3~95/	Wheel Hub REAR INNER
03905 4700	MH034134	60 x 72 x 12	FUSO TRUCK / TRACTOR FP FP101,102,112,117,217,21 8	74/~88/	Wheel Hub REAR OUTER
03905 2105	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 8M21 FP412,442,512,542,50M,5 4M	95/2~	Engine TIMING GEAR CASE
03905 1298	31107-06301	85 x 110 x 13	FUSO TRUCK / TRACTOR FP 8DC#	74/~83/	Engine TIMING GEAR CASE
03905 3008	ME061853	95 x 120 x 13	FUSO TRUCK / TRACTOR FP 8DC8 FP413	83/6~85/8	Engine TIMING GEAR CASE
03905 1601	ME061853	95 x 120 x 13	FUSO TRUCK / TRACTOR FP 8DC9 FP415	83/6~85/8	Engine TIMING GEAR CASE
03905 4706	ME061853	95 x 120 x 13	FUSO TRUCK / TRACTOR FP 6DC2#...FP418	79/~85/8	Engine TIMING GEAR CASE
03905 6323	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 8DC8 FP413	85/9~89/	Engine TIMING GEAR CASE
03905 5852	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 8DC9 FP415,445,515,545	85/9~00/	Engine TIMING GEAR CASE

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5537	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 8DC10 FP416,446	90/10~96/	Engine TIMING GEAR CASE
03905 5249	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 8DC11 FP419,449,519,549,50K	85/9~	Engine TIMING GEAR CASE
03905 1061	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 10DC11 FP414	89/3~95/	Engine TIMING GEAR CASE
03905 7109	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 6D22 FP418	85/9~95/	Engine TIMING GEAR CASE
03905 5897	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP445 EXC. DRS2A,DRS2B,DRS2C	85/9~97/	Wheel Hub REAR OUTER
03905 7358	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 8M20 FP411,441,511,541	91/9~00/	Engine TIMING GEAR CASE
03905 1319	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP510,511,519,540,541,549	96/7~00/	Wheel Hub REAR OUTER
03905 4703	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 8M22 FP543,50L,54L	96/7~	Engine TIMING GEAR CASE
03905 2780	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 10M20 FP424,444,514,544	94/12~00/	Engine TIMING GEAR CASE
03905 3107	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 6M70 FP50J,54J,55J,50K(NX41)	00/2~	Engine TIMING GEAR CASE
03905 4094	31112-05701	130 x 160 x 14	FUSO TRUCK / TRACTOR FP 8DC#,6D2#	74/~79/	Engine CRANK SHAFT REAR
03905 1088	31212-33300	135 x 155.5 x 15	FUSO TRUCK / TRACTOR FP 8DC#,10DC11,6D22	79/10~95/ 4	Engine CRANK SHAFT REAR
03905 1781	31212-33300	135 x 155.5 x 15	FUSO TRUCK / TRACTOR FP 6D40,8M20,21,22,10M20	91/9~97/8	Engine CRANK SHAFT REAR
03905 4853	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK / TRACTOR FP 8DC#	95/4~	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8471	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK / TRACTOR FP 6D40,8M20,21,22,10M20, 6M70	97/8~	Engine CRANK SHAFT REAR
03905 4559	ME061574		FUSO TRUCK / TRACTOR FP 8DC#,10DC11,6D2#	79/10~	Engine VALVE STEM SEAL
03905 2792	ME120154		FUSO TRUCK / TRACTOR FP 6D40,8M20,21,22,10M20, 6M70	91/9~	Engine VALVE STEM SEAL
03905 6233	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP50M DR1#,DR2#	00/2~	Wheel Hub REAR INNER
03905 1943	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK / TRACTOR FP 6D40 FP410,440,510,540	90/8~00/	Engine TIMING GEAR CASE
03905 1481	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP415 DR#(EXC.DRC,DRF,DRS C,DRSF,DRS7C,DRS7F)	89/10~99/	Wheel Hub FRONT
03905 2390	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP54M DR1#,DR2#,GR2#	00/2~	Wheel Hub REAR INNER
03905 2996	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP410 DRS1C,DRS1T,DRS3C,GRS1C,GRS3C	90/8~96/	Wheel Hub FRONT
03905 3497	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP449 DRA,DRB,DRD,DRE	89/10~97/	Wheel Hub FRONT
03905 8087	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP446 DRB	91/9~96/	Wheel Hub FRONT
03905 5579	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP445 DRS2A,DRS2B	90/10~97/	Wheel Hub FRONT
03905 3329	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP445 DRSA,DRSB,DRSD,DRSE,DRS7A,DRS7B#	89/10~97/	Wheel Hub FRONT
03905 3578	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP442 DRB	95/2~97/	Wheel Hub FRONT
03905 3557	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP441 DRB,DRCB	91/9~97/	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5198	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP440 DRS3B	91/10~97/	Wheel Hub FRONT
03905 6002	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP419 DRA#,DRB#,DRD#,DRE #	89/10~97/	Wheel Hub FRONT
03905 6875	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP412 DRS,DRF	95/2~96/	Wheel Hub FRONT
03905 3746	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP416 DRA,DRB	90/10~95/	Wheel Hub FRONT
03905 2372	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP414 DRB,DRE	89/3~90/1 0	Wheel Hub FRONT
03905 2306	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP415 EXC. DR#	89/11~99/	Wheel Hub FRONT
03905 2981	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP414 DRB,DRE	90/10~95/	Wheel Hub FRONT
03905 3923	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP414 DRA,DRD	89/11~95/	Wheel Hub FRONT
03905 1682	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP411 DRA,DRB,DRCA,DRCB, DRD,DRE	91/9~96/	Wheel Hub FRONT
03905 3266	MH034092	130 x 150 x 14	FUSO TRUCK / TRACTOR FP FP449 DRA,DRB,DRD,DRE	85/9~89/1 0	Wheel Hub FRONT
03905 3881	MH034092	130 x 150 x 14	FUSO TRUCK / TRACTOR FP FP445 DRSA,DRSB,DRSD,DRS E,DRS7A,DRS7B#	85/9~89/1 0	Wheel Hub FRONT
03905 5972	MH034092	130 x 150 x 14	FUSO TRUCK / TRACTOR FP FP419 DRA#,DRB#,DRD#,DRE #	85/9~89/1 0	Wheel Hub FRONT
03905 8966	MH034092	130 x 150 x 14	FUSO TRUCK / TRACTOR FP FP418 EXC. DRS3C#,DRS3F	83/6~89/1 0	Wheel Hub FRONT
03905 2651	MH034092	130 x 150 x 14	FUSO TRUCK / TRACTOR FP FP415 DR#(EXC.DRC,DRF,DRS C,DRSF,DRS7S,DRS7F	83/6~89/1 0	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3443	MH034092	130 x 150 x 14	FUSO TRUCK / TRACTOR FP FP414 DRA,DRD	89/3~89/1 0	Wheel Hub FRONT
03905 5885	MH034092	130 x 150 x 14	FUSO TRUCK / TRACTOR FP FP TRACTOR ALL	74/~85/8	Wheel Hub FRONT
03905 7178	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP418 EXC. DRS3C#,DRS3F	89/10~95/	Wheel Hub FRONT
03905 7181	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP445 DRSC,DRS2C,DRS7C	85/9~97/	Wheel Hub FRONT
03905 6755	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP50J,50L,54J,54L,55J	00/2~	Final Drive PINION
03905 5306	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP50K	00/2~	Wheel Hub REAR INNER
03905 4076	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP50J DR3#,DR4#,GR4#	00/2~	Wheel Hub REAR INNER
03905 6374	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP515 EXC. DK#,DR#	96/4~00/	Wheel Hub REAR INNER
03905 2633	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP510,511,519,540,541,54 9	96/7~00/	Wheel Hub REAR INNER
03905 6563	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP445 EXC. DRS2A,DRS2B,DRS2C	85/9~97/	Wheel Hub REAR INNER
03905 5492	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP415 DRS2A,DRS2B#,DRS2C(90.10~99.)	83/6~99/	Wheel Hub REAR INNER
03905 8843	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP410,411,413,416,418,41 9,440,441,449	83/9~97/	Wheel Hub REAR INNER
03905 7082	MH034082	155 x 180 x 17	FUSO TRUCK / TRACTOR FP FP2##,3##	74/~83/	Wheel Hub REAR INNER
03905 9023	MH034180	139 x 158 x 11	FUSO TRUCK / TRACTOR FP FP5##	96/4~	Wheel Hub FRONT
03905 8423	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP411 DRC,DRCC,DRF	91/9~96/	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8303	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP446 DRC	91/9~96/	Wheel Hub FRONT
03905 4718	MC807438	154 x 172 x 14	FUSO TRUCK / TRACTOR FP FP54J DR3#,DR4#,GR4#	00/2~	Wheel Hub REAR INNER
03905 3767	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP444	85/2~97/	Wheel Hub FRONT
03905 1049	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP442 DRC	95/2~97/	Wheel Hub FRONT
03905 6482	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP441 DRCB02,DRCC	91/9~97/	Wheel Hub FRONT
03905 6992	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP440 DRS1#,DRS3C	91/10~97/	Wheel Hub FRONT
03905 4925	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP424	94/12~97/	Wheel Hub FRONT
03905 4967	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP419 DRC#,DRF#,DRT	83/6~97/	Wheel Hub FRONT
03905 8051	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP418 DRS3C#,DRS3F	83/6~95/	Wheel Hub FRONT
03905 3125	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP416 DRC	90/10~95/	Wheel Hub FRONT
03905 6854	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP415 DRC,DRF,DRSC,DRSF,D RS7C,DRS7F	83/6~99/	Wheel Hub FRONT
03905 1118	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP415 DRA02	88/9~90	Wheel Hub FRONT
03905 7691	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP414 DRC,DRF	89/3~95/	Wheel Hub FRONT
03905 7025	MH034089	134 x 152 x 11	FUSO TRUCK / TRACTOR FP FP449 DRC,DRE	85/9~97/	Wheel Hub FRONT
03905 6809	ME677501	55 x 75 x 8	FUSO TRUCK / TRACTOR FP FP543	00/2~	Transmission FRONT
03905 7079	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP50K EXC. NX41	00/2~	Transmission FRONT
03905 1184	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP418 DRS3D,DRS3E,DRS3F	83/6~88/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4373	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP416	90/10~95/	Transmission REAR
03905 6635	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP415 DRD,DRE,DRF,DRS(EX C.DRS7D,E,F)	83/6~96/	Transmission REAR
03905 8264	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP411,412,414,419 EXC.DRD,DRE,DRF	85/9~96/	Transmission REAR
03905 7046	MH034153	70 x 92 x 12	FUSO TRUCK / TRACTOR FP FP515 EXC. DKR#,DR2#,NX41	96/7~00/	Transmission REAR
03905 4430	MH034153	70 x 92 x 12	FUSO TRUCK / TRACTOR FP FP418 EXC. DRS3D,DRS3E,DRS3F	83/6~93/	Transmission REAR
03905 2492	MH034153	70 x 92 x 12	FUSO TRUCK / TRACTOR FP FP418 DRS3A,DRS3B,DRS3C	83/6~84/8	Transmission REAR
03905 6836	MH034153	70 x 92 x 12	FUSO TRUCK / TRACTOR FP FP415 FD,HT,J,L,N,T	89/11~96/	Transmission REAR
03905 4673	MH034153	70 x 92 x 12	FUSO TRUCK / TRACTOR FP FP415 DRA,DRB,DRC	83/6~88/	Transmission REAR
03905 5846	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP424 M130S7 T/M	95/2~96/	Transmission REAR
03905 6461	MH034153	70 x 92 x 12	FUSO TRUCK / TRACTOR FP FP#	74/~83/	Transmission REAR
03905 8189	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP441,442,444,445,446,44 9	85/9~97/	Transmission REAR
03905 3173	MH034146	50 x 68 x 9	FUSO TRUCK / TRACTOR FP FP424	94/12~97/	Transmission FRONT
03905 8978	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP50M,54M DR2#,3#,GR2#,3#	00/2~	Transmission FRONT
03905 7271	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP50K NX41	00/2~	Transmission FRONT
03905 6260	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP50J,50L,54J,54L,55J	00/2~	Transmission FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8090	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP515 DR#	96/7~00/	Transmission FRONT
03905 1892	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP510,511,512,514,540,54 1,542,544,545	96/7~00/	Transmission FRONT
03905 5717	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP419 DRD,DRDQ,DRE,DRF	90/10~91/ 8	Transmission FRONT
03905 5621	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP415 DR#	90/10~99/	Transmission FRONT
03905 1031	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP414,445	90/10~96/	Transmission FRONT
03905 2606	MH034233	57 x 70 x 9	FUSO TRUCK / TRACTOR FP FP410,411,412,440,441,44 2,444	90/8~96/	Transmission FRONT
03905 2234	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP50M,54M DR3#,GR3C	00/2~	Final Drive PINION
03905 7184	MH034153	70 x 92 x 12	FUSO TRUCK / TRACTOR FP FP413	83/6~89/	Transmission REAR
03905 4370	MH034234	83 x 105 x 13	FUSO TRUCK / TRACTOR FP FP50J,54J DR3#,DR4#,GR4#	00/2~	Transmission REAR
03905 3887	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP2#...TRUCK	75/~88/	Final Drive PINION
03905 6248	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP103,113,119 DR,DRA,DRC	76/10~79/	Final Drive PINION
03905 2786	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK / TRACTOR FP FP313,315 DUMP,MIXER	79/12~83/	Final Drive PINION
03905 1538	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK / TRACTOR FP FP102,112 DRDRA,DRC	76/10~79/	Final Drive PINION
03905 5186	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK / TRACTOR FP FP1#...DUMP,MIXER	76/10~79/	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1379	MH034178	70 x 122 x 12 x 30	FUSO TRUCK / TRACTOR FP FP418 H,HT,J,L,N,R,T	83/6~93/	Final Drive PINION
03905 8795	MH034178	70 x 122 x 12 x 30	FUSO TRUCK / TRACTOR FP FP318 CARGO,TANK LORRY	79/10~83/	Final Drive PINION
03905 5576	MH034178	70 x 122 x 12 x 30	FUSO TRUCK / TRACTOR FP FP1#...CARGO,FP217 T	76/10~79/	Final Drive PINION
03905 3653	03434-07051	70 x 92 x 13.5 x 20.5	FUSO TRUCK / TRACTOR FP FP1#	74/~76/9	Final Drive PINION
03905 4502	MH034245	115 x 145 x 13	FUSO TRUCK / TRACTOR FP FP50J,54J DR5#,GR5#	00/2~	Transmission REAR
03905 8030	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP418 DRS3A,DRS3B,DRS3C	84/9~90/	Transmission REAR
03905 6338	ME515135	105 x 130 x 13	FUSO TRUCK / TRACTOR FP FP514 DRE,DRF	96/7~00/	Transmission REAR
03905 4418	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP515 EXC. DR#	96/4~00/	Transmission FRONT
03905 5075	MH034234	83 x 105 x 13	FUSO TRUCK / TRACTOR FP FP50L,54L,55J	00/2~	Transmission REAR
03905 6728	MH034234	83 x 105 x 13	FUSO TRUCK / TRACTOR FP FP515 NX41	96/7~00/	Transmission REAR
03905 1064	MH034234	83 x 105 x 13	FUSO TRUCK / TRACTOR FP FP410,440,510,540	90/8~00/	Transmission REAR
03905 7967	MH034157	80 x 105 x 13	FUSO TRUCK / TRACTOR FP FP512 DRE,DRF	96/7~00/	Transmission REAR
03905 3764	MH034157	80 x 105 x 13	FUSO TRUCK / TRACTOR FP FP424 M130S0 T/M	95/2~96/	Transmission REAR
03905 5501	MH034157	80 x 105 x 13	FUSO TRUCK / TRACTOR FP FP415 DRS7D,DRS7E,DRS7F	90/10~95/	Transmission REAR
03905 8792	MH034157	80 x 105 x 13	FUSO TRUCK / TRACTOR FP FP411,412,414,419 DRD,DRE,DRF	90/10~96/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1631	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP50K,50M,54M	00/2~	Transmission REAR
03905 1070	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP515 DKR#,DR2#	96/7~00/	Transmission REAR
03905 6179	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP512,514 EXC. DRE,DRF	96/7~00/	Transmission REAR
03905 4805	MH034155	75 x 100 x 13	FUSO TRUCK / TRACTOR FP FP511,519,541,542,544,54 5,549	96/7~00/	Transmission REAR
03905 8174	ME515135	105 x 130 x 13	FUSO TRUCK / TRACTOR FP FP543	96/7~00/	Transmission REAR
03905 8441	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP415 DRS7A,B,C,D,E,F,DRS2 A,B,C	90/10~95/	Final Drive PINION
03905 3527	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP50M,54M DR1#	00/2~	Transmission FRONT
03905 1382	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP413,415,419,445,449	83/6~90/2	Final Drive PINION
03905 8258	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP418 FDQ,FM,DRS#,GRS#,JC X	83/6~90/2	Final Drive PINION
03905 1373	MC827475	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP415	90/2~90/1 0	Final Drive PINION
03905 2093	MC827475	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP415 EXC. DRS7A,B,C,D,E,F,DRS2 A,B,C	90/10~99/	Final Drive PINION
03905 7229	MC827475	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP418 FD,RDS#,GRS#	90/2~93/	Final Drive PINION
03905 3062	MC827475	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP419 DRA,DRB,DRC,DRD,DR E,DRF	90/2~90/1 0	Final Drive PINION
03905 7016	MC827475	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP445,449	90/2~90/1 0	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6254	MC827475	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP515 FX,HX,JX,LX,NX,TX	96/4~00/	Final Drive PINION
03905 4676	MC827475	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP50K EXC. NX41	00/2~	Final Drive PINION
03905 5699	MH034092	130 x 150 x 14	FUSO TRUCK / TRACTOR FP FP TRUCK ALL	74/~89/10	Wheel Hub FRONT
03905 4157	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP410,440	90/8~95/2	Final Drive PINION
03905 1967	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP218 ERS	83/2~88/	Final Drive PINION
03905 3317	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP419 DRA,DRB,DRC,DRD,DR E,DRF	90/10~96/	Final Drive PINION
03905 3179	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP445	90/10~95/ 4	Final Drive PINION
03905 6452	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP449	90/10~96/	Final Drive PINION
03905 6626	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP511,519,541,549	96/7~00/	Final Drive PINION
03905 4820	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP50M,54M DR1#,DR2#,GR2#	00/2~	Final Drive PINION
03905 3803	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP412,424,442,444	95/2~97/	Final Drive PINION
03905 2486	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP410,440	95/2~97/	Final Drive PINION
03905 2804	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP445	95/5~97/	Final Drive PINION
03905 1811	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP510,512,514,540,542,45 3,544,545	96/7~00/	Final Drive PINION
03905 3467	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP515 DKR,DR2,NX41	96/7~00/	Final Drive PINION
03905 4880	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP215 DRS	76/10~79/	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2438	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP411,414,416,441,446	89/3~96/	Final Drive PINION
03905 5069	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP50J DR5#	00/2~	Wheel Hub REAR OUTER
03905 6428	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP519,549	96/7~00/	Transmission FRONT
03905 4139	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP419 EXC.DRD,DRDQ,DRE,D RF	85/9~96/	Transmission FRONT
03905 8450	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP415 EXC. DR#	90/10~99/	Transmission FRONT
03905 2741	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP414,415,445	83/6~90/1 0	Transmission FRONT
03905 3779	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP413,416,418,446,449	83/6~96/	Transmission FRONT
03905 8291	MH034151	52 x 65 x 9	FUSO TRUCK / TRACTOR FP FP1##,2##,3##	79/10~83/	Transmission FRONT
03905 2702	44514-51681	45 x 60 x 9	FUSO TRUCK / TRACTOR FP FP#	74/~79/	Transmission FRONT
03905 3908	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP54M DR3#,GR3#	00/2~	Wheel Hub REAR OUTER
03905 7010	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP54L	00/2~	Wheel Hub REAR OUTER
03905 1844	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP54J DR5#	00/2~	Wheel Hub REAR OUTER
03905 4163	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK / TRACTOR FP FP313,315 DRA	79/12~83/	Final Drive PINION
03905 4301	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP50L	00/2~	Wheel Hub REAR OUTER
03905 1604	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK / TRACTOR FP FP50K NX41	00/2~	Final Drive PINION
03905 6395	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP515 DK#,DR#	96/4~00/	Wheel Hub REAR OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7898	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP512,514,542,543,544,545	96/7~00/	Wheel Hub REAR OUTER
03905 7778	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP445 DRS2A,DRS2B,DRS2C	85/9~97/	Wheel Hub REAR OUTER
03905 3344	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP424,442,444,446	94/12~97/	Wheel Hub REAR OUTER
03905 2678	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP415 DRS2A,DRS2B#,DRS2C	90/10~99/	Wheel Hub REAR OUTER
03905 8786	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP412,414	89/3~96/	Wheel Hub REAR OUTER
03905 2885	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP54M DR1#,DR2#,GR2#	00/2~	Wheel Hub REAR OUTER
03905 2726	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP54J DR3#,DR4#,GR4#	00/2~	Wheel Hub REAR OUTER
03905 1664	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP50M DR1#,DR2#	00/2~	Wheel Hub REAR OUTER
03905 3302	MH034135	65 x 77 x 12	FUSO TRUCK / TRACTOR FP FP50K NX41	00/2~	Wheel Hub REAR OUTER
03905 4316	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP410 DRS1A,DRS1B,DRS3B	90/8~96/	Wheel Hub FRONT
03905 2000	MH034133	70 x 82 x 12.5	FUSO TRUCK / TRACTOR FP FP50M DR3#,GR3#	00/2~	Wheel Hub REAR OUTER
03905 1490	MH034136	130 x 150 x 12	FUSO TRUCK / TRACTOR FP FP412 DRB,DRBQ,DRE	95/2~96/	Wheel Hub FRONT
03905 1331	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK74H G2#,H2#,J2#	02/2~	Final Drive PINION
03905 6488	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK64F HZ2#,JZ2#,KZ2#,LZ2#,M Z2E	99/1~	Final Drive PINION
03905 6713	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK61H D2D,D3#,EX2#,EY3#,EZ 3,GX2,GY3#,GZ3#	99/1~	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6653	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK61F GY2,GZ2,HY2#,HZ#,H2# ,JY2	99/1~	Final Drive PINION
03905 3461	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK728 CD3,C3,C3J	98/3~99/	Final Drive PINION
03905 8249	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK629 D3#,EY3#,EZ3#,GY3,GZ3#,HY3#,HZ3#	96/11~99/	Final Drive PINION
03905 5237	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK628 DD3,D3,EZ3,GZ3,HZ3,JZ3,KZ3#,LZ3#	96/11~99/	Final Drive PINION
03905 2915	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK622 GZ#,G5#,HZ#,H5#	96/11~99/	Final Drive PINION
03905 3788	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK619 D3#,EZ3#,GZ3#,HZ3#,JZ3#	94/12~99/	Final Drive PINION
03905 8039	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK618 D#,EZ#,GZ#,HZ#,JZ#,KZ#	92/6~99/	Final Drive PINION
03905 1517	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK612 GZ5#,G#,HZ5#,H6#	94/12~99/	Final Drive PINION
03905 8396	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FL417,638,639,63H	87/12~	Final Drive PINION
03905 3866	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FH21H C2D34,C2M,D2,E2,G2#	99/3~	Final Drive PINION
03905 3998	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK612 G6#,H6#,J6#	94/12~99/	Final Drive PINION
03905 6977	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FH217,227,21G	95/10~	Final Drive PINION
03905 7277	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK74H GZ3#,HZ3#,JZ3#,KZ3#	02/2~	Final Drive PINION
03905 4640	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK71H C2M,D2,E2,G2#,H2#	99/1~	Final Drive PINION
03905 3095	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK64H H2#,H3#,J2#,J3#,K2#,K3# ,L2#,L3	99/1~	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2528	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK64F HZ1,H1#,JZ1#,J1#,KZ1#,K1#,LZ1#,L1#	99/1~	Final Drive PINION
03905 4268	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK61H E2#,E3,G2#,G3#,H2#,E3W#,G2W,G3W	99/1~	Final Drive PINION
03905 1484	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK61F G1#,H1#,J1#	99/1~	Final Drive PINION
03905 1280	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK728 C3M,D3,E3,G3#,H3#	98/3~99/	Final Drive PINION
03905 3590	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK629 E3#,G3#,H3#,J3#	96/11~99/	Final Drive PINION
03905 8855	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK628 EY3,E3#,GY3,G3#,HY3,H3#	96/11~99/	Final Drive PINION
03905 4760	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK622 G6#,H6#,J6#	96/11~99/	Final Drive PINION
03905 3017	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK619 E3#,G3#,H3#	94/12~99/	Final Drive PINION
03905 6575	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK618 E#,G#,H#(EXC.EZ,GZ,HZ)	92/6~99/	Final Drive PINION
03905 8279	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK617 E#,G#,H#,D3#,E3#,G3#,H3#	92/6~99/	Final Drive PINION
03905 5096	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FH218,228 EXC. C,CD,CDN,CJ,CN	95/10~99/	Final Drive PINION
03905 7457	ME017208	57 x 78 x 10 x 16.5	FUSO TRUCK FK, FH, FL 4D34T FK603	95/11~99/	Engine CRANK SHAFT FRONT
03905 5168	ME241213		FUSO TRUCK FK, FH, FL 6M60,6M61,4M50	99/1~	Engine VALVE STEM SEAL
03905 5993	ME215092		FUSO TRUCK FK, FH, FL 4D34T	95/11~99/	Engine VALVE STEM SEAL
03905 5000	ME215092		FUSO TRUCK FK, FH, FL 6D10,14,15,16,17	76/4~99/	Engine VALVE STEM SEAL
03905 1037	ME240010	101 x 123 x 13.5	FUSO TRUCK FK, FH, FL 4M50 FK71D	99/7~	Engine CRANK SHAFT REAR
03905 1205	ME240010	101 x 123 x 13.5	FUSO TRUCK FK, FH, FL 4D34T FK603	95/11~99/	Engine CRANK SHAFT REAR
03905 6629	ME011867	100 x 124 x 15	FUSO TRUCK FK, FH, FL 6D31 FK330	88/10~96/	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8105	ME034976	108 x 140 x 180 x 17	FUSO TRUCK FK, FH, FL 6M60,6M61	99/1~	Engine CRANK SHAFT REAR
03905 8060	ME034976	108 x 140 x 180 x 17	FUSO TRUCK FK, FH, FL 6D14,15,16,17 MIXER(CM,DM)	89/2~99/	Engine CRANK SHAFT REAR
03905 4385	ME034976	108 x 140 x 180 x 17	FUSO TRUCK FK, FH, FL 6D14,15,16,17 EXCEPT MIXER (CM,DM)	87/7~99/	Engine CRANK SHAFT REAR
03905 6806	ME030856	107 x 140 x 180 x 17.5	FUSO TRUCK FK, FH, FL 6D14,15 EXCEPT MIXER (CM,CD)	84/2~87/6	Engine CRANK SHAFT REAR
03905 5915	ME031584	105 x 125 x 11	FUSO TRUCK FK, FH, FL 6D10,14,15,16 MIXER (CM,DM)	76/4~89/1	Engine CRANK SHAFT REAR
03905 6743	ME031548	100 x 125 x 12.5	FUSO TRUCK FK, FH, FL 6D10,14,15 EXCEPT MIXER (CM,DM)	76/4~84/1	Engine CRANK SHAFT REAR
03905 1532	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK64H HZ3#,JZ3#,KZ3#,LZ3#,M Z3E	99/1~	Final Drive PINION
03905 2888	ME240328	42 x 66 x 11.5 x 18.5	FUSO TRUCK FK, FH, FL 4M50 FK71D	99/7~	Engine CRANK SHAFT FRONT
03905 6242	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK71H EX. C2M,D2,E2,G2#,H2#	99/1~	Final Drive PINION
03905 4190	ME074755	75 x 100 x 14.5 x 19.5	FUSO TRUCK FK, FH, FL 6M60,6M61	99/1~	Engine CRANK SHAFT FRONT
03905 1778	ME074755	75 x 100 x 14.5 x 19.5	FUSO TRUCK FK, FH, FL 6D16,17	95/1~99/	Engine CRANK SHAFT FRONT
03905 7481	ME071269	76 x 94 x 12	FUSO TRUCK FK, FH, FL 6D14,15,16,17	88/9~94/1 2	Engine CRANK SHAFT FRONT
03905 5555	ME031543	72 x 94 x 12	FUSO TRUCK FK, FH, FL 6D10,14,15,16	76/4~88/8	Engine CRANK SHAFT FRONT
03905 8027	ME013384	55 x 78 x 8	FUSO TRUCK FK, FH, FL 6D31 FK330	90/1~95/	Engine CRANK SHAFT FRONT
03905 1988	ME024156	55 x 78 x 12	FUSO TRUCK FK, FH, FL 6D31 FK330	88/10~90/1	Engine CRANK SHAFT FRONT
03905 8066	ME024156	55 x 78 x 12	FUSO TRUCK FK, FH, FL 6DS7 FK102	76/4~84/	Engine CRANK SHAFT FRONT
03905 1625	MH034205	56 x 99 x 10 x 34	FUSO TRUCK FK, FH, FL FK603	95/11~99/	Final Drive PINION
03905 7508	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FL618,628,61H	92/10~	Final Drive PINION
03905 4238	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FH21H CD2,C2J	99/3~	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7682	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FH218,228 C,CD,CDN,CJ,CN	95/10~99/	Final Drive PINION
03905 6518	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK616,662,666,672	92/6~99/	Final Drive PINION
03905 8015	ME031548	100 x 125 x 12.5	FUSO TRUCK FK, FH, FL 6DS7 FK102	76/4~84/	Engine CRANK SHAFT REAR
03905 4532	MH034175	130 x 146 x 14	FUSO TRUCK FK, FH, FL FK7##	98/3~	Wheel Hub REAR INNER
03905 1589	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK515 EXC.FSQA,HKSA,HSQA,HUSA,JKSA,JSQA))	83/12~96/	Transmission FRONT
03905 6047	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK417 EXC.EFW,FFW,FZFWA,HZFWA	87/9~96/	Transmission FRONT
03905 2195	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK416 EXC.M6S6 T/M	84/2~96/	Transmission FRONT
03905 5801	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK415 EXC.ESA,HKSA,HUSA,JKSA,JUSA,KKSA))	84/2~96/	Transmission FRONT
03905 2264	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK1##,2##,3##	79/8~95/	Transmission FRONT
03905 6011	ME620713	34 x 50 x 7	FUSO TRUCK FK, FH, FL FK1##	76/4~79/8	Transmission FRONT
03905 1253	MH034193	57 x 124 x 14.5 x 27	FUSO TRUCK FK, FH, FL FL6##	92/10~	Wheel Hub REAR OUTER
03905 2540	MH034193	57 x 124 x 14.5 x 27	FUSO TRUCK FK, FH, FL FH2##	95/10~	Wheel Hub REAR OUTER
03905 2909	MH034193	57 x 124 x 14.5 x 27	FUSO TRUCK FK, FH, FL FK6##,7##	94/12~	Wheel Hub REAR OUTER
03905 3965	MH034110	45 x 53 x 6.5 x 8	FUSO TRUCK FK, FH, FL FL417	87/12~95/	Wheel Hub REAR OUTER
03905 7511	MH034110	45 x 53 x 6.5 x 8	FUSO TRUCK FK, FH, FL FK3##,4##,5##	85/6~96/	Wheel Hub REAR OUTER
03905 8678	MH034006	65 x 120.5 x 10	FUSO TRUCK FK, FH, FL FK1##,2##,3##,4##,5##	76/4~85/5	Wheel Hub REAR OUTER
03905 3701	MH034175	130 x 146 x 14	FUSO TRUCK FK, FH, FL FL628	98/6~99/	Wheel Hub REAR INNER
03905 4166	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK516 EXC.M6S6 T/M	83/12~96/	Transmission FRONT
03905 1529	MH034092	130 x 150 x 14	FUSO TRUCK FK, FH, FL FK1##,2##,3##,4##,5##	76/4~94/11	Wheel Hub REAR INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8003	MH034091	102 x 116 x 14	FUSO TRUCK FK, FH, FL FK1##,2##,3##,4##,5##	76/4~96/	Wheel Hub FRONT
03905 5141	MH034091	102 x 116 x 14	FUSO TRUCK FK, FH, FL FK6##...EXC. FK61F,H#Z#,64F,H#Z#	92/6~	Wheel Hub FRONT
03905 3044	MH034091	102 x 116 x 14	FUSO TRUCK FK, FH, FL FK7##...EXC. FK71H#Z#,74H#Z#	98/3~	Wheel Hub FRONT
03905 3026	MH034091	102 x 116 x 14	FUSO TRUCK FK, FH, FL FH2##	95/10~	Wheel Hub FRONT
03905 4205	MH034086	125 x 150 x 14	FUSO TRUCK FK, FH, FL FK61F,H#Z#,64F,H#Z#,71H#Z#,74H#Z#	99/1~	Wheel Hub FRONT
03905 8597	MH034175	130 x 146 x 14	FUSO TRUCK FK, FH, FL FL638,639,61H,63H	96/11~	Wheel Hub REAR INNER
03905 1148	MC891701	106 x 122 x 10	FUSO TRUCK FK, FH, FL FL638,639,63H	96/11~	Wheel Hub FRONT
03905 7586	MH034175	130 x 146 x 14	FUSO TRUCK FK, FH, FL FH2##	95/10~	Wheel Hub REAR INNER
03905 4694	MH034092	130 x 150 x 14	FUSO TRUCK FK, FH, FL FK622,628,629 #Z#	96/11~98/5	Wheel Hub REAR INNER
03905 1400	MH034092	130 x 150 x 14	FUSO TRUCK FK, FH, FL FL417,618	87/12~97/	Wheel Hub REAR INNER
03905 3458	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FK, FH, FL FK617 D,DD,DG	92/6~99/	Final Drive PINION
03905 6311	MH034175	130 x 146 x 14	FUSO TRUCK FK, FH, FL FK3##,4##,5##	94/12~96/	Wheel Hub REAR INNER
03905 4085	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK61G,71D,G	99/1~	Final Drive PINION
03905 6269	MH034175	130 x 146 x 14	FUSO TRUCK FK, FH, FL FK6##...EXC.FK622,628,629#Z#(96.11~98.5)	92/6~	Wheel Hub REAR INNER
03905 4400	MH034089	134 x 152 x 11	FUSO TRUCK FK, FH, FL FL417,618,628,61H	87/12~	Wheel Hub FRONT
03905 8606	MH034148	58 x 75 x 9	FUSO TRUCK FK, FH, FL FK612,616,622,61F,64F M050S6,M060S6 T/M	92/6~	Transmission REAR
03905 3635	MH034092	130 x 150 x 14	FUSO TRUCK FK, FH, FL FL628	96/11~98/5	Wheel Hub REAR INNER
03905 9044	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK425,427,435,445,467,517,545,567	84/2~96/	Transmission FRONT
03905 5747	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK615,627,667,668,678,727	92/6~99/	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6842	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FK, FH, FL FK1##,2##,3##,4##,5##	77/9~96/	Final Drive PINION
03905 3176	MH034048	60 x 103 x 13.5 x 20	FUSO TRUCK FK, FH, FL FK1###	76/4~77/8	Final Drive PINION
03905 1454	MH034181	50 x 65 x 9	FUSO TRUCK FK, FH, FL FK603,71D	95/11~	Transmission REAR
03905 1550	MH034148	58 x 75 x 9	FUSO TRUCK FK, FH, FL FH2##	95/10~	Transmission REAR
03905 4046	MH034148	58 x 75 x 9	FUSO TRUCK FK, FH, FL FK61G,H,64H,71G,H,74H	99/1~	Transmission REAR
03905 2279	MH034148	58 x 75 x 9	FUSO TRUCK FK, FH, FL FK615,617,618,619,627,628,629,667,668,678,727,728	92/6~99/	Transmission REAR
03905 4253	MH034148	58 x 75 x 9	FUSO TRUCK FK, FH, FL FK1##,2##,3##,4##,5##	79/8~96/	Transmission REAR
03905 7877	MH034036	55 x 72 x 9	FUSO TRUCK FK, FH, FL FK1###	76/4~79/8	Transmission REAR
03905 2240	MH034122	43 x 58 x 8	FUSO TRUCK FK, FH, FL FL417 EFA,EFWA,FFWA,FZFWA	90/3~93/	Transmission FRONT
03905 6941	MH034122	43 x 58 x 8	FUSO TRUCK FK, FH, FL FK417 EFW,FFW,FZFWA,HZF WA	87/9~93/	Transmission FRONT
03905 2624	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FL6##	92/10~	Transmission FRONT
03905 4787	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FK415 FSA,FSQA,HAS,HSQA,JSQA,JSQA))	87/10~93/	Transmission FRONT
03905 2669	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK603,615,627,727,710	92/6~	Transmission FRONT
03905 2078	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FK617#3#	94/12~96/12	Transmission FRONT
03905 6926	MH034173	64 x 78 x 9	FUSO TRUCK FK, FH, FL FK612,616,622,662,666,672,61F,64F M070S6 T/M	92/6~	Transmission REAR
03905 5810	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FH218,228,21G,21H	95/10~	Transmission FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1541	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FL417 EXC.EFWA,EZFWA,FZFWA	87/12~95/	Transmission FRONT
03905 1295	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FK415 ESA,HKSA,HUSA,JKSA, JUSA,KKSA))	85/6~93/	Transmission FRONT
03905 1322	MH034147	40 x 58 x 8	FUSO TRUCK FK, FH, FL FH217,227	95/10~99/	Transmission FRONT
03905 8936	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FK416 M6S6 T/M	85/6~93/	Transmission FRONT
03905 8519	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FK515 FSQA,HKSA,HSQA,HUS A,JKSA,JSQA))	85/6~93/	Transmission FRONT
03905 4484	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FK516 M6S6 T/M	85/6~93/	Transmission FRONT
03905 5387	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FK418,518,612,616,618,619,622,628,629,66#,67#,728	91/5~99/	Transmission FRONT
03905 3602	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FK617 EXC.#3#	92/6~95/4	Transmission FRONT
03905 8225	MH034146	50 x 68 x 9	FUSO TRUCK FK, FH, FL FK61F,G,H,64F,H,71G,H,74H	99/1~	Transmission FRONT
03905 5177	ME031543	72 x 94 x 12	FUSO TRUCK FM 6D11,14,15 FM1##,2##,3##,515	74/~88/8	Engine CRANK SHAFT FRONT
03905 3623	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FM FM652	94/12~96/	Final Drive PINION
03905 8960	ME031584	105 x 125 x 11	FUSO TRUCK FM 6D14,16 FM515,51(MIXER)	84/2~89/1	Engine CRANK SHAFT REAR
03905 1976	ME071269	76 x 94 x 12	FUSO TRUCK FM 6D15,17 FM616,618,656	92/7~95/	Engine CRANK SHAFT FRONT
03905 3419	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FM FM6##...EXC. FM652	86/9~	Final Drive PINION
03905 5828	ME074755	75 x 100 x 14.5 x 19.5	FUSO TRUCK FM 6D16,17 FM612,619,628,629,652,658	94/12~99/	Engine CRANK SHAFT FRONT
03905 1928	ME074755	75 x 100 x 14.5 x 19.5	FUSO TRUCK FM 6M60,61 FM62F,H	99/4~	Engine CRANK SHAFT FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6818	ME031584	105 x 125 x 11	FUSO TRUCK FM 5D11,14 FM104,205	84/~77/10	Engine CRANK SHAFT REAR
03905 4835	ME071269	76 x 94 x 12	FUSO TRUCK FM 6D15,16 FM516,517	88/9~93/	Engine CRANK SHAFT FRONT
03905 4208	ME031548	100 x 125 x 12.5	FUSO TRUCK FM 6D14,15 FM215,315,316	77/11~84/	Engine CRANK SHAFT REAR
03905 3962	ME030856	107 x 140 x 180 x 17.5	FUSO TRUCK FM 6D14,16 FM515,517(EXCEPT MIXER)	84/2~87/6	Engine CRANK SHAFT REAR
03905 6914	ME030856	107 x 140 x 180 x 17.5	FUSO TRUCK FM 6D15 FM516	86/9~87/6	Engine CRANK SHAFT REAR
03905 5636	ME034976	108 x 140 x 180 x 17	FUSO TRUCK FM 6D16 FM517(MIXER)	89/2~93/	Engine CRANK SHAFT REAR
03905 5252	ME034976	108 x 140 x 180 x 17	FUSO TRUCK FM 6D15,16,17 FM6##	92/7~99/	Engine CRANK SHAFT REAR
03905 3224	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FM FM215,315,316,515,516,5 17	76/10~93/	Final Drive PINION
03905 2579	MH034136	130 x 150 x 12	FUSO TRUCK FM FM62F,62H	99/4~	Wheel Hub FRONT
03905 6602	ME215092		FUSO TRUCK FM 6D11,14,15,16,17	74/~99/	Engine VALVE STEM SEAL
03905 4913	ME034976	108 x 140 x 180 x 17	FUSO TRUCK FM 6M60,61 FM62F,H	99/4~	Engine CRANK SHAFT REAR
03905 3086	ME034976	108 x 140 x 180 x 17	FUSO TRUCK FM 6D14,15 FM515,516,517(EXCEPT MIXER)	87/7~93/	Engine CRANK SHAFT REAR
03905 1193	MH034147	40 x 58 x 8	FUSO TRUCK FM FM516 F,H,J,L,M,S	86/9~90/	Transmission FRONT
03905 8615	ME241213		FUSO TRUCK FM 6D15,16	99/4~	Engine VALVE STEM SEAL
03905 8378	MH034136	130 x 150 x 12	FUSO TRUCK FM FM628,652,656,658	94/12~99/	Wheel Hub FRONT
03905 7040	MH034086	125 x 150 x 14	FUSO TRUCK FM FM1##,2##,3##,5##	74/~93/	Wheel Hub FRONT
03905 5432	MH034086	125 x 150 x 14	FUSO TRUCK FM FM612,616,618,619,629	92/7~99/	Wheel Hub FRONT
03905 1556	MH034136	130 x 150 x 12	FUSO TRUCK FM FM622 HZ5#,JZ5#,LZ5#,MZ5#,S Z5#	96/11~99/	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8915	MH034082	155 x 180 x 17	FUSO TRUCK FM FM1##,2##,3##	74/~84/	Wheel Hub REAR INNER
03905 1523	MH034134	60 x 72 x 12	FUSO TRUCK FM FM1##,2##,3##,5##,6##	74/~	Wheel Hub REAR OUTER
03905 5663	MC807438	154 x 172 x 14	FUSO TRUCK FM FM5##,6##	84/2~	Wheel Hub REAR INNER
03905 1820	MH034147	40 x 58 x 8	FUSO TRUCK FM FM315,316,515	80/3~88/	Transmission FRONT
03905 9035	03434-07051	70 x 92 x 13.5 x 20,5	FUSO TRUCK FM FM104,215	74/~76/9	Final Drive PINION
03905 5264	MH034147	40 x 58 x 8	FUSO TRUCK FM FM517 EXC. HF,JF	87/12~93/	Transmission FRONT
03905 8252	MH034146	50 x 68 x 9	FUSO TRUCK FM FM516 FS2#,HS2#,JS2#,LS2#,MS 2#,SS2#	86/9~93/	Transmission FRONT
03905 3290	MH034146	50 x 68 x 9	FUSO TRUCK FM FM6##	92/7~	Transmission FRONT
03905 8330	MH034122	43 x 58 x 8	FUSO TRUCK FM FM517 HF,JF	90/3~93/	Transmission FRONT
03905 1112	MH034036	55 x 72 x 9	FUSO TRUCK FM FM104,215	74/~80/	Transmission REAR
03905 6257	MH034148	58 x 75 x 9	FUSO TRUCK FM FM315,316,515,516,517	80/3~	Transmission REAR
03905 1286	MH034148	58 x 75 x 9	FUSO TRUCK FM FM612,616,618,619,622,6 29,652,656,62H	92/7~	Transmission REAR
03905 6644	MH034173	64 x 78 x 9	FUSO TRUCK FM FM62F	99/4~	Transmission REAR
03905 8669	ME620713	34 x 50 x 7	FUSO TRUCK FM FM104,215	74/~80/	Transmission FRONT
03905 8645	MH034086	125 x 150 x 14	FUSO TRUCK FM FM622 F5,H5,J5,L5,M5,S5	96/11~99/	Wheel Hub FRONT
03905 2072	ME061853	95 x 120 x 13	FUSO TRUCK FN, FQ 6D22 FN428	83/6~85/8	Engine CRANK SHAFT FRONT
03905 2765	MH034153	70 x 92 x 12	FUSO TRUCK FN, FQ FN428,622	83/6~99/	Transmission REAR
03905 2531	MC095475	154 x 185 x 19	FUSO TRUCK FN, FQ FN622,FQ61F	96/11~	Rear Suspension TRUNNION
03905 7388	12857-16700	165 x 195 x 19	FUSO TRUCK FN, FQ FN427,428	83/6~96/	Rear Suspension TRUNNION
03905 8828	ME241213		FUSO TRUCK FN, FQ 6D16,6M60	96/11~	Engine VALVE STEM SEAL
03905 3596	ME061574		FUSO TRUCK FN, FQ 6D22,6D24	83/6~96/	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8345	ME034976	108 x 140 x 180 x 17	FUSO TRUCK FN, FQ 6D16,6M60	96/11~	Engine CRANK SHAFT REAR
03905 7037	31212-33300	135 x 155.5 x 15	FUSO TRUCK FN, FQ 6D22,6D24	83/6~96/	Engine CRANK SHAFT REAR
03905 1238	ME074755	75 x 100 x 14.5 x 19.5	FUSO TRUCK FN, FQ 6M60 FN61F,FQ61F	99/4~	Engine CRANK SHAFT FRONT
03905 7844	ME074755	75 x 100 x 14.5 x 19.5	FUSO TRUCK FN, FQ 6D16 FN612,622	96/11~99/	Engine CRANK SHAFT FRONT
03905 1691	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FN, FQ 6D22 FN428	85/9~95/	Engine CRANK SHAFT FRONT
03905 4808	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FN, FQ FN427,428,612,622,61F,FQ61F	91/8~	Final Drive PINION
03905 5417	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FN, FQ FN428	83/6~91/8	Final Drive PINION
03905 2387	MH034173	64 x 78 x 9	FUSO TRUCK FN, FQ FN61F,FQ61F	99/4~	Transmission REAR
03905 3914	MH034006	65 x 120.5 x 10	FUSO TRUCK FN, FQ FN418	83/6~84/8	Wheel Hub REAR OUTER (F & R)
03905 3842	MH034146	50 x 68 x 9	FUSO TRUCK FN, FQ FN612,622,61F,FQ61F	96/11~	Transmission FRONT
03905 7535	MH034151	52 x 65 x 9	FUSO TRUCK FN, FQ FN427,428	83/6~96/	Transmission FRONT
03905 8102	MH034193	57 x 124 x 14.5 x 27	FUSO TRUCK FN, FQ FN612,61F	96/11~	Wheel Hub REAR OUTER (F)
03905 7886	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FN, FQ 6D24 FN427	95/4~96/	Engine CRANK SHAFT FRONT
03905 5396	MH034110	45 x 53 x 6.5 x 8	FUSO TRUCK FN, FQ FN428	84/9~93/5	Wheel Hub REAR OUTER (F & R)
03905 4679	MH034148	58 x 75 x 9	FUSO TRUCK FN, FQ FN612	96/11~99/	Transmission REAR
03905 4028	MH034175	130 x 146 x 14	FUSO TRUCK FN, FQ FN427,428,612,622,61F,FQ61F	93/5~	Wheel Hub REAR INNER (F & R)
03905 5354	MH034092	130 x 150 x 14	FUSO TRUCK FN, FQ FN428	83/6~93/5	Wheel Hub REAR INNER (F & R)
03905 6299	MH034086	125 x 150 x 14	FUSO TRUCK FN, FQ FN622,FQ61F	96/11~	Wheel Hub FRONT
03905 3896	MH034091	102 x 116 x 14	FUSO TRUCK FN, FQ FN612,61F	96/11~	Wheel Hub FRONT
03905 2135	MH034136	130 x 150 x 12	FUSO TRUCK FN, FQ FN427,428	89/11~96/	Wheel Hub FRONT
03905 5006	MH034092	130 x 150 x 14	FUSO TRUCK FN, FQ FN428	83/6~89/10	Wheel Hub FRONT
03905 6410	MH034155	75 x 100 x 13	FUSO TRUCK FN, FQ FN427	95/4~96/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4742	MH034193	57 x 124 x 14.5 x 27	FUSO TRUCK FN, FQ FN427,428,622,FQ61F	93/5~	Wheel Hub REAR OUTER (F & R)
03905 4298	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FR 8DC9 FR415	86/11~99/	Engine TIMING GEAR CASE
03905 5750	MH034072	70 x 92 x 14	FUSO TRUCK FR FR#	86/11~	Transmission REAR
03905 7379	ME120154		FUSO TRUCK FR 8M21	00/3~	Engine VALVE STEM SEAL
03905 4751	ME061574		FUSO TRUCK FR 8DC9,8DC11	86/11~00/	Engine VALVE STEM SEAL
03905 4712	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FR 8M21	00/3~	Engine CRANK SHAFT REAR
03905 2684	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FR 8DC9,8DC11	97/8~00/	Engine CRANK SHAFT REAR
03905 2324	31212-33300	135 x 155.5 x 15	FUSO TRUCK FR 8DC9,8DC11	86/11~97/ 8	Engine CRANK SHAFT REAR
03905 4457	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FR 8M21 FR50M	00/3~	Engine TIMING GEAR CASE
03905 1703	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FR 8DC11 FR529	97/3~00/	Engine TIMING GEAR CASE
03905 1646	MH034233	57 x 70 x 9	FUSO TRUCK FR FR50M	00/3~	Transmission FRONT
03905 7433	MH034151	52 x 65 x 9	FUSO TRUCK FR FR415,529	86/11~00/	Transmission FRONT
03905 8123	MH034134	60 x 72 x 12	FUSO TRUCK FR FR#	86/11~	Wheel Hub REAR OUTER
03905 1535	MC807438	154 x 172 x 14	FUSO TRUCK FR FR#	86/11~	Wheel Hub REAR INNER
03905 6530	MC818294	180 x 210 x 16	FUSO TRUCK FR FR50M EXC. JXJ168	00/3~	Wheel Hub FRONT
03905 3251	MC818294	180 x 210 x 16	FUSO TRUCK FR FR529	97/3~00/	Wheel Hub FRONT
03905 8054	03434-09300	150 x 174 x 14	FUSO TRUCK FR FR50M JXJ168	00/3~	Wheel Hub FRONT
03905 5759	03434-09300	150 x 174 x 14	FUSO TRUCK FR FR415	86/11~99/	Wheel Hub FRONT
03905 7796	MH034234	83 x 105 x 13	FUSO TRUCK FS FS519 VX#,VY#,VZ#	96/4~00/	Transmission REAR
03905 3212	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FS FS50KVZA66	00/2~	Final Drive PINION
03905 5258	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FS FS50M,54K	00/2~	Final Drive PINION
03905 2267	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FS FS5#...EXC. FS525	96/4~00/	Final Drive PINION
03905 7964	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FS FS4#...EXC. FS425	91/9~96/	Final Drive PINION
03905 1229	MC827472	60 x 103 x 10 x 33.5	FUSO TRUCK FS FS4#...EXC. FS425	83/6~91/8	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1574	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FS FS50J,54J,55J	00/2~	Final Drive PINION
03905 7544	MH034234	83 x 105 x 13	FUSO TRUCK FS FS50J,54J,55J	00/2~	Transmission REAR
03905 1808	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 6D22 FS418,478	85/8~96/	Engine TIMING GEAR CASE
03905 3704	MH034234	83 x 105 x 13	FUSO TRUCK FS FS511 VZ,VZQ5A	96/4~00/	Transmission REAR
03905 1208	MH034234	83 x 105 x 13	FUSO TRUCK FS FS510,517,540,570	96/4~00/	Transmission REAR
03905 3755	MH034234	83 x 105 x 13	FUSO TRUCK FS FS419 T,TZ,U	94/11~96/	Transmission REAR
03905 7283	MH034234	83 x 105 x 13	FUSO TRUCK FS FS50M VX1,VY1,VZ1,VZ2#	00/2~	Transmission REAR
03905 3470	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 8M21 FS512,50M	96/4~	Engine TIMING GEAR CASE
03905 6668	MH034234	83 x 105 x 13	FUSO TRUCK FS FS418 US2	91/9~95/	Transmission REAR
03905 2657	31212-33300	135 x 155.5 x 15	FUSO TRUCK FS 8M20,8M21	93/5~97/8	Engine CRANK SHAFT REAR
03905 1616	31212-33300	135 x 155.5 x 15	FUSO TRUCK FS 6D24,6D40	95/4~97/8	Engine CRANK SHAFT REAR
03905 3524	31212-33300	135 x 155.5 x 15	FUSO TRUCK FS 6D22	83/6~96/	Engine CRANK SHAFT REAR
03905 4382	31212-33300	135 x 155.5 x 15	FUSO TRUCK FS 8DC10	89/11~96/	Engine CRANK SHAFT REAR
03905 3452	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 8DC10 FS416	89/11~96/	Engine TIMING GEAR CASE
03905 3209	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 6M70 FS50J,54J,55J	00/2~	Engine TIMING GEAR CASE
03905 5159	ME061853	95 x 120 x 13	FUSO TRUCK FS 8DC9,6D22 FS415,418	83/6~85/8	Engine TIMING GEAR CASE
03905 1178	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 8M20 FS411,511	93/5~00/	Engine TIMING GEAR CASE
03905 4811	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 6D40 FS410,510,540,570	93/5~00/	Engine TIMING GEAR CASE
03905 5690	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 6D24 FS417,477,517	95/4~00/	Engine TIMING GEAR CASE
03905 3488	MH034233	57 x 70 x 9	FUSO TRUCK FS FS418 US2	91/9~95/	Transmission FRONT
03905 4541	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 8DC11 FS419,519,50K,54K	94/11~	Engine TIMING GEAR CASE
03905 4433	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FS 8DC9 FS415,425,515,525	85/8~0//	Engine TIMING GEAR CASE
03905 8063	31212-33300	135 x 155.5 x 15	FUSO TRUCK FS 8DC9	83/6~95/4	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8288	MH034233	57 x 70 x 9	FUSO TRUCK FS FS416 U,UQ,T	91/9~95/	Transmission FRONT
03905 2789	MH034233	57 x 70 x 9	FUSO TRUCK FS FS510,511,512,517,540,570	96/4~00/	Transmission FRONT
03905 3296	MH034233	57 x 70 x 9	FUSO TRUCK FS FS50M EXC. RYK1,RY1,TZK1,TZ1	00/2~	Transmission FRONT
03905 4613	MH034233	57 x 70 x 9	FUSO TRUCK FS FS50J,54J,55J	00/2~	Transmission FRONT
03905 2039	MH034233	57 x 70 x 9	FUSO TRUCK FS FS519 VX#,VY#,VZ#	96/4~00/	Transmission FRONT
03905 5573	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FS 8DC9	95/4~00/	Engine CRANK SHAFT REAR
03905 7448	MH034153	70 x 92 x 12	FUSO TRUCK FS FS418 EXC. US2(89.11-)	83/6~93/	Transmission REAR
03905 8765	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FS FS425,525	89/11~00/	Final Drive PINION
03905 7322	MH034153	70 x 92 x 12	FUSO TRUCK FS FS515,525	96/4~00/	Transmission REAR
03905 1940	MH034233	57 x 70 x 9	FUSO TRUCK FS FS410,411,417,477,478	91/9~96/	Transmission FRONT
03905 7205	MH034151	52 x 65 x 9	FUSO TRUCK FS FS50M RYK1,RY1,TZK1,TZ1	00/2~	Transmission FRONT
03905 8510	MH034151	52 x 65 x 9	FUSO TRUCK FS FS50K,54K	00/2~	Transmission FRONT
03905 1859	MH034151	52 x 65 x 9	FUSO TRUCK FS FS519 RY(K),TZ(K)	96/4~00/	Transmission FRONT
03905 8927	MH034151	52 x 65 x 9	FUSO TRUCK FS FS515,525	96/4~00/	Transmission FRONT
03905 3035	MH034151	52 x 65 x 9	FUSO TRUCK FS FS419 N,R,RZ	94/11~96/	Transmission FRONT
03905 7658	MH034233	57 x 70 x 9	FUSO TRUCK FS FS419 T,TZ,U	94/11~96/	Transmission FRONT
03905 4979	MH034155	75 x 100 x 13	FUSO TRUCK FS FS511 EXC. VZ,VZQ5A	96/4~00/	Transmission REAR
03905 1505	MH034234	83 x 105 x 13	FUSO TRUCK FS FS411 TC(Q),UC(Q),TZC(Q)	93/5~96/	Transmission REAR
03905 4994	MH034234	83 x 105 x 13	FUSO TRUCK FS FS410,417,477,478	91/9~96/	Transmission REAR
03905 7376	MH034155	75 x 100 x 13	FUSO TRUCK FS FS54K	00/2~	Transmission REAR
03905 6005	MH034155	75 x 100 x 13	FUSO TRUCK FS FS50M EXC. VX1,VY1,VZ1,VZ2#	00/2~	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1124	MH034155	75 x 100 x 13	FUSO TRUCK FS FS50K UZS,VX	00/2~03/3	Transmission REAR
03905 8033	MH034153	70 x 92 x 12	FUSO TRUCK FS FS415,425	83/6~99/	Transmission REAR
03905 4538	MH034155	75 x 100 x 13	FUSO TRUCK FS FS512	96/4~00/	Transmission REAR
03905 2108	MH034234	83 x 105 x 13	FUSO TRUCK FS FS416 U,UQ,T	91/9~95/	Transmission REAR
03905 8735	MH034155	75 x 100 x 13	FUSO TRUCK FS FS419 N,R,RZ	94/11~96/	Transmission REAR
03905 6386	MH034155	75 x 100 x 13	FUSO TRUCK FS FS418 U32	89/11~91/ 8	Transmission REAR
03905 4148	MH034155	75 x 100 x 13	FUSO TRUCK FS FS416 U,UQ	89/11~91/ 8	Transmission REAR
03905 2366	MH034155	75 x 100 x 13	FUSO TRUCK FS FS416 N,NQ,R,RQ	89/11~95/	Transmission REAR
03905 8477	MH034155	75 x 100 x 13	FUSO TRUCK FS FS411 NC(Q),RC(Q),RZC(Q)	93/5~96/	Transmission REAR
03905 2315	MH034153	70 x 92 x 12	FUSO TRUCK FS FS50K VZA66	00/2~	Transmission REAR
03905 5798	MH034155	75 x 100 x 13	FUSO TRUCK FS FS519 RY(K),TZ(K)	96/4~00/	Transmission REAR
03905 6506	MH034092	130 x 150 x 14	FUSO TRUCK FS FS410 TZS1,TZS1Q	94/11~96/	Wheel Hub REAR INNER (F & R)
03905 3077	MH034092	130 x 150 x 14	FUSO TRUCK FS FS511,512,540,570	96/4~98/4	Wheel Hub REAR INNER (F & R)
03905 5315	MH034136	130 x 150 x 12	FUSO TRUCK FS FS50KVZA66	00/2~	Wheel Hub FRONT (REARWARD)
03905 4442	MH034086	125 x 150 x 14	FUSO TRUCK FS FS410 TZS1,TZS1Q	94/11~96/	Wheel Hub FRONT (REARWARD)
03905 8336	MH034086	125 x 150 x 14	FUSO TRUCK FS FS411 RZ#,TZ#	94/11~96/	Wheel Hub FRONT (REARWARD)
03905 3227	MH034086	125 x 150 x 14	FUSO TRUCK FS FS419 RZ,TZ	94/11~96/	Wheel Hub FRONT (REARWARD)
03905 3326	MH034092	130 x 150 x 14	FUSO TRUCK FS FS425	89/11~89/ 12	Wheel Hub FRONT (REARWARD)
03905 8159	MH034092	130 x 150 x 14	FUSO TRUCK FS FS3#	79/8~83/	Wheel Hub REAR INNER (F & R)
03905 7859	MH034091	102 x 116 x 14	FUSO TRUCK FS FS419 N,R,T,U	95/4~96/	Wheel Hub FRONT (REARWARD)
03905 7370	MH034092	130 x 150 x 14	FUSO TRUCK FS FS411 RZ#,TZ#	94/11~96/	Wheel Hub REAR INNER (F & R)
03905 8417	MH034092	130 x 150 x 14	FUSO TRUCK FS FS419 RZ,TZ	94/11~96/	Wheel Hub REAR INNER (F & R)
03905 7139	MH034092	130 x 150 x 14	FUSO TRUCK FS FS415,416,418,478	83/6~93/5	Wheel Hub REAR INNER (F & R)
03905 2546	MH034092	130 x 150 x 14	FUSO TRUCK FS FS510 VY#,VZ#	96/4~98/4	Wheel Hub REAR INNER (F & R)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8351	MH034092	130 x 150 x 14	FUSO TRUCK FS FS517 VY#,VZ#	96/4~98/4	Wheel Hub REAR INNER (F & R)
03905 5792	MH034092	130 x 150 x 14	FUSO TRUCK FS FS519 RY#,TZ#,VY#,VZ#	96/4~98/4	Wheel Hub REAR INNER (F & R)
03905 4877	MH034086	125 x 150 x 14	FUSO TRUCK FS FS5#...EXC. FS525,FS50KVZA66	96/4~	Wheel Hub FRONT (REARWARD)
03905 6371	MH034136	130 x 150 x 12	FUSO TRUCK FS FS425	89/12~99/	Wheel Hub FRONT (FORWARD)
03905 1946	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FS FS50K UZS,VX	00/2~	Final Drive PINION
03905 1163	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FS 8DC11	94/11~	Engine CRANK SHAFT REAR
03905 3188	MH034086	125 x 150 x 14	FUSO TRUCK FS FS3#	79/8~83/	Wheel Hub FRONT (FORWARD)
03905 8429	MH034086	125 x 150 x 14	FUSO TRUCK FS FS4#...EXC. FS425	83/6~96/	Wheel Hub FRONT (FORWARD)
03905 6026	MH034151	52 x 65 x 9	FUSO TRUCK FS FS418 EXC. U62(91.9-)	83/6~93/	Transmission FRONT
03905 3902	MH034136	130 x 150 x 12	FUSO TRUCK FS FS425,525	89/12~00/	Wheel Hub FRONT (REARWARD)
03905 7232	MH034092	130 x 150 x 14	FUSO TRUCK FS FS425	89/11~89/ 12	Wheel Hub FRONT (FORWARD)
03905 6905	MH034091	102 x 116 x 14	FUSO TRUCK FS FS411 ALL	93/5~94/1 1	Wheel Hub FRONT (REARWARD)
03905 6317	MH034136	130 x 150 x 12	FUSO TRUCK FS FS525	98/4~00/	Wheel Hub FRONT (FORWARD)
03905 1841	MH034136	130 x 150 x 12	FUSO TRUCK FS FS50KVZA66	00/2~	Wheel Hub FRONT (FORWARD)
03905 7745	MH034091	102 x 116 x 14	FUSO TRUCK FS FS3#	79/8~83/	Wheel Hub FRONT (REARWARD)
03905 1985	MH034091	102 x 116 x 14	FUSO TRUCK FS FS410 TS1,US1	94/11~96/	Wheel Hub FRONT (REARWARD)
03905 3170	MH034091	102 x 116 x 14	FUSO TRUCK FS FS411 NC#,RC#MTC#,UC#	94/11~96/	Wheel Hub FRONT (REARWARD)
03905 3281	MH034091	102 x 116 x 14	FUSO TRUCK FS FS415,416,417,418,477,47 8	83/6~96/	Wheel Hub FRONT (REARWARD)
03905 8642	MH034086	125 x 150 x 14	FUSO TRUCK FS FS5#...EXC. FS525,FS50KVZA66	96/4~	Wheel Hub FRONT (FORWARD)
03905 6749	MH034134	60 x 72 x 12	FUSO TRUCK FS FS50KVZA66	00/2~	Wheel Hub REAR OUTER(F & R)
03905 6680	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FS 6D24,6D40	97/8~00/	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4895	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FS 8M20,8M21	97/8~	Engine CRANK SHAFT REAR
03905 8780	MH034091	102 x 116 x 14	FUSO TRUCK FS FS410 ALL	93/5~94/11	Wheel Hub FRONT (REARWARD)
03905 2681	MH034175	130 x 146 x 14	FUSO TRUCK FS FS410 ALL	93/5~94/11	Wheel Hub REAR INNER (F & R)
03905 2648	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FS 6M70	00/2~	Engine CRANK SHAFT REAR
03905 3968	ME061574		FUSO TRUCK FS 8DC#,6DC2#	83/6~	Engine VALVE STEM SEAL
03905 2030	ME120154		FUSO TRUCK FS 8M2#,6D40,6M70	93/5~	Engine VALVE STEM SEAL
03905 3695	MH034151	52 x 65 x 9	FUSO TRUCK FS FS416 U,UQ	89/11~91/8	Transmission FRONT
03905 4448	MH034151	52 x 65 x 9	FUSO TRUCK FS FS415,425	83/6~99/	Transmission FRONT
03905 3827	MH034134	60 x 72 x 12	FUSO TRUCK FS FS425,525	89/11~00/	Wheel Hub REAR OUTER(F & R)
03905 7703	MH034193	57 x 124 x 14.5 x 27	FUSO TRUCK FS FS5#...EXC. FS525,FS50KVZA66	96/4~	Wheel Hub REAR OUTER(F & R)
03905 8963	MH034193	57 x 124 x 14.5 x 27	FUSO TRUCK FS FS4#...EXC. FS425	93/5~96/	Wheel Hub REAR OUTER(F & R)
03905 6137	MH034110	45 x 53 x 6.5 x 8	FUSO TRUCK FS FS415,416,418,478	85/9~93/5	Wheel Hub REAR OUTER(F & R)
03905 2183	MH034006	65 x 120.5 x 10	FUSO TRUCK FS FS415,418	83/6~85/8	Wheel Hub REAR OUTER(F & R)
03905 6731	MH034175	130 x 146 x 14	FUSO TRUCK FS FS510,517 EXC.VY#,VZ#(96.4~98.4)	96/4~00/	Wheel Hub REAR INNER (F & R)
03905 2393	MH034175	130 x 146 x 14	FUSO TRUCK FS FS411 NC#,RC#,TC#,UC#	94/11~96/	Wheel Hub REAR INNER (F & R)
03905 1343	MH034175	130 x 146 x 14	FUSO TRUCK FS FS411 ALL	93/5~94/11	Wheel Hub REAR INNER (F & R)
03905 2330	MH034175	130 x 146 x 14	FUSO TRUCK FS FS419 N,R,T,U	95/4~96/	Wheel Hub REAR INNER (F & R)
03905 6560	MH034151	52 x 65 x 9	FUSO TRUCK FS FS416 N,NQ,R,RQ	89/11~95/	Transmission FRONT
03905 4832	MH034175	130 x 146 x 14	FUSO TRUCK FS FS410 TS1,US1	94/11~96/	Wheel Hub REAR INNER (F & R)
03905 5057	MH034175	130 x 146 x 14	FUSO TRUCK FS FS415,416,417,418,477,478	93/5~96/	Wheel Hub REAR INNER (F & R)
03905 2840	MH034175	130 x 146 x 14	FUSO TRUCK FS FS511,512,540,570	98/4~00/	Wheel Hub REAR INNER (F & R)
03905 2459	MH034175	130 x 146 x 14	FUSO TRUCK FS FS515	96/4~00/	Wheel Hub REAR INNER (F & R)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5036	MH034175	130 x 146 x 14	FUSO TRUCK FS FS519 EXC.RY#,TZ#,VY#,VZ#(96.4~98.4)	96/4~00/	Wheel Hub REAR INNER (F & R)
03905 2897	MH034175	130 x 146 x 14	FUSO TRUCK FS FS50J,50M,54J,54K,55J	00/2~	Wheel Hub REAR INNER (F & R)
03905 3869	MH034175	130 x 146 x 14	FUSO TRUCK FS FS50K UZS,VX	00/2~	Wheel Hub REAR INNER (F & R)
03905 7166	MC807438	154 x 172 x 14	FUSO TRUCK FS FS425,525	89/11~00/	Wheel Hub REAR INNER (F & R)
03905 3407	MC807438	154 x 172 x 14	FUSO TRUCK FS FS50KVZA66	00/2~	Wheel Hub REAR INNER (F & R)
03905 6155	MH034006	65 x 120.5 x 10	FUSO TRUCK FS FS3#	79/8~83/	Wheel Hub REAR OUTER(F & R)
03905 5642	MH034233	57 x 70 x 9	FUSO TRUCK FT FT517 VX2#,WY2#	96/4~00/	Transmission FRONT
03905 6140	MH034151	52 x 65 x 9	FUSO TRUCK FT FT517 LXT#,NXT#,NYT#,RXT# ,RYT#,WY1#,TY#	96/4~00/	Transmission FRONT
03905 3038	MH034233	57 x 70 x 9	FUSO TRUCK FT FT417 VZS2,WZS2,TS2,VS2	94/11~96/	Transmission FRONT
03905 3713	MH034233	57 x 70 x 9	FUSO TRUCK FT FT510,520,527	96/4~00/	Transmission FRONT
03905 1802	MH034233	57 x 70 x 9	FUSO TRUCK FT FT50J LXT2,NYT2#,RYT2,VX1 #,2#,3,WY2#,WZ2	00/1~	Transmission FRONT
03905 8834	MH034233	57 x 70 x 9	FUSO TRUCK FT FT418 TS2,VS2	89/11~95/	Transmission FRONT
03905 7784	MH034233	57 x 70 x 9	FUSO TRUCK FT FT54J EXC. NYT1	03/3~	Transmission FRONT
03905 7835	ME655359	97 x 110 x 4.5	FUSO TRUCK FT FT4##,5##	83/6~	Transmission MAIN SHAFT
03905 1925	MH034233	57 x 70 x 9	FUSO TRUCK FT FT515 TYP2,WYP2	96/7~00/	Transmission FRONT
03905 7031	MH034233	57 x 70 x 9	FUSO TRUCK FT FT415 NPS7,TPS2,TPS7,VPS2,V PS7	90/9~96/	Transmission FRONT
03905 5234	MH034233	57 x 70 x 9	FUSO TRUCK FT FT410,416	89/11~96/	Transmission FRONT
03905 5204	MH034151	52 x 65 x 9	FUSO TRUCK FT FT54J NYT1	03/3~	Transmission FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6065	MH034151	52 x 65 x 9	FUSO TRUCK FT FT50J LXT1#,NXT1,NYT#,RXG 1,RXT1,RYT1	00/1~	Transmission FRONT
03905 3983	MH034151	52 x 65 x 9	FUSO TRUCK FT FT413	83/6~93/	Transmission FRONT
03905 2252	MH034151	52 x 65 x 9	FUSO TRUCK FT FT515 LXT#,NYT#,RYT#	96/4~00/	Transmission FRONT
03905 2603	MH034153	70 x 92 x 12	FUSO TRUCK FT FT1#	74/~79/	Transmission REAR
03905 4526	MH034155	75 x 100 x 13	FUSO TRUCK FT FT415 NPS#,TPS#,VPS#	83/6~96/	Transmission REAR
03905 2609	MH034151	52 x 65 x 9	FUSO TRUCK FT FT418 EXCEPT TS2,VS2(89.11-)	83/6~95/	Transmission FRONT
03905 5804	MH034151	52 x 65 x 9	FUSO TRUCK FT FT417 EXC. VZS2,WZS2,TS2,VS2	94/11~96/	Transmission FRONT
03905 6851	MH034151	52 x 65 x 9	FUSO TRUCK FT FT415 EXC. NPS7,TPS2,7,VPS2,7(90.9 -)	83/6~96/	Transmission FRONT
03905 1487	MH034151	52 x 65 x 9	FUSO TRUCK FT FT50K	00/1~	Transmission FRONT
03905 2783	MH034153	70 x 92 x 12	FUSO TRUCK FT FT50J LXT1#,NXT1#,NYT#,RX G1,RXT1,RYT1	00/1~	Transmission REAR
03905 7238	MH034155	75 x 100 x 13	FUSO TRUCK FT FT517 LXT2#,NYT2#,RYT2#,T Y1#,2#,WY1#,WX1#	96/4~00/	Transmission REAR
03905 8243	MH034155	75 x 100 x 13	FUSO TRUCK FT FT50J LXT2,NYF2,NYT2#,RYT 2	00/1~	Transmission REAR
03905 2189	MH034180	139 x 158 x 11	FUSO TRUCK FT FT50J NYT1#,2,RYT1,2,TY#,W Y#,WZ#(22T,25T)	00/1~	Wheel Hub FRONT (F & R)
03905 4550	MH034151	52 x 65 x 9	FUSO TRUCK FT FT313,315,318	89/10~83/	Transmission FRONT
03905 2495	MH034155	75 x 100 x 13	FUSO TRUCK FT FT418 TS2,VS2	88/9~89/1 0	Transmission REAR
03905 1097	MH034155	75 x 100 x 13	FUSO TRUCK FT FT417 LTS2,NS1,2,TS1,VS1	95/4~96/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4631	MH034155	75 x 100 x 13	FUSO TRUCK FT FT417 VZS1,WZS1,NZTS2,RZS 1,2	94/11~96/	Transmission REAR
03905 4109	MH034155	75 x 100 x 13	FUSO TRUCK FT FT415 V	88/9~89/1 0	Transmission REAR
03905 7808	MH034153	70 x 92 x 12	FUSO TRUCK FT FT50J NYT1	03/3~	Transmission REAR
03905 7403	MH034153	70 x 92 x 12	FUSO TRUCK FT FT50K LXT,NYTS,RYTS,NYF	00/1~	Transmission REAR
03905 3692	MH034153	70 x 92 x 12	FUSO TRUCK FT FT313,318	79/10~83/	Transmission REAR
03905 2249	MH034153	70 x 92 x 12	FUSO TRUCK FT FT517 LXT1#,NXT1#,NYT1#,R XT1#,RYT1#	96/4~00/	Transmission REAR
03905 2138	MH034153	70 x 92 x 12	FUSO TRUCK FT FT515 EXC. TYP2,WYP2	96/4~00/	Transmission REAR
03905 7895	MH034153	70 x 92 x 12	FUSO TRUCK FT FT418 EXC. #S4#,#S3#,VS7	83/6~95/	Transmission REAR
03905 5471	MH034153	70 x 92 x 12	FUSO TRUCK FT FT418 TS2,VS2	83/6~88/8	Transmission REAR
03905 1157	MH034153	70 x 92 x 12	FUSO TRUCK FT FT417 NZTS1,KTS1,LTS1,RGS1 ,RTS1	94/11~96/	Transmission REAR
03905 2336	MH034153	70 x 92 x 12	FUSO TRUCK FT FT415 T,L,LT,N,RT	83/6~96/	Transmission REAR
03905 9017	MH034153	70 x 92 x 12	FUSO TRUCK FT FT415 V	83/6~88/8	Transmission REAR
03905 7472	MH034153	70 x 92 x 12	FUSO TRUCK FT FT413	83/7~	Transmission REAR
03905 5483	MH034153	70 x 92 x 12	FUSO TRUCK FT FT315 T,V,SP	79/10~83/	Transmission REAR
03905 6797	MH034155	75 x 100 x 13	FUSO TRUCK FT FT315 SPM	79/10~83/	Transmission REAR
03905 1451	MH034180	139 x 158 x 11	FUSO TRUCK FT FT510 NY#,TY#,WY#(22T)	96/4~00/	Wheel Hub FRONT (F & R)
03905 6272	MH034082	155 x 180 x 17	FUSO TRUCK FT FT1#,3#	74/~83/	Wheel Hub REAR INNER
03905 4343	MH034134	60 x 72 x 12	FUSO TRUCK FT FT119 L,N,S,U,RG	76/~79/	Wheel Hub REAR OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5585	MH034134	60 x 72 x 12	FUSO TRUCK FT FT113 EXCEPT S,U,N,RP	74/~79/	Wheel Hub REAR OUTER
03905 7265	MH034134	60 x 72 x 12	FUSO TRUCK FT FT102,103,112,117	74/~79/	Wheel Hub REAR OUTER
03905 3794	MC807438	154 x 172 x 14	FUSO TRUCK FT FT5#	96/4~	Wheel Hub REAR INNER
03905 7415	MC807438	154 x 172 x 14	FUSO TRUCK FT FT4#	83/6~99/	Wheel Hub REAR INNER
03905 2381	MH034180	139 x 158 x 11	FUSO TRUCK FT FT50K NY#,RY#,WZ#(22T,25T)	00/1~	Wheel Hub FRONT (F & R)
03905 2843	MH034180	139 x 158 x 11	FUSO TRUCK FT FT520,527	96/4~00/	Wheel Hub FRONT (F & R)
03905 1271	MH034134	60 x 72 x 12	FUSO TRUCK FT FT413	83/6~94/	Wheel Hub REAR OUTER
03905 6878	MH034180	139 x 158 x 11	FUSO TRUCK FT FT515 NY#,RY#,TY#,WY#(22T)	96/4~00/	Wheel Hub FRONT (F & R)
03905 3953	MH034134	60 x 72 x 12	FUSO TRUCK FT FT415 L,LT,N,NFX,RT,T,V	93/5~99/	Wheel Hub REAR OUTER
03905 4643	MH034136	130 x 150 x 12	FUSO TRUCK FT FT50K LX#,VX#(20T)	00/1~	Wheel Hub FRONT (F & R)
03905 1010	MH034136	130 x 150 x 12	FUSO TRUCK FT FT50J LX1#,2,NXT1,RX#,VX#(20T)	00/1~	Wheel Hub FRONT (F & R)
03905 4112	MH034136	130 x 150 x 12	FUSO TRUCK FT FT517 LX1#,2#,NXT1#,RX#,VX1#,2#(20T)	96/4~00/	Wheel Hub FRONT (F & R)
03905 1607	MH034136	130 x 150 x 12	FUSO TRUCK FT FT515 LX#(20T)	96/4~00/	Wheel Hub FRONT (F & R)
03905 8507	MH034136	130 x 150 x 12	FUSO TRUCK FT FT510 VX#(20T)	96/4~00/	Wheel Hub FRONT (F & R)
03905 1865	MH034136	130 x 150 x 12	FUSO TRUCK FT FT4#	89/11~99/	Wheel Hub FRONT (F & R)
03905 1649	MH034092	130 x 150 x 14	FUSO TRUCK FT FT#	74/~89/10~	Wheel Hub FRONT (F & R)
03905 6830	MH034155	75 x 100 x 13	FUSO TRUCK FT FT50K VXS,WZS	00/1~	Transmission REAR
03905 3707	MH034155	75 x 100 x 13	FUSO TRUCK FT FT418 NS2	89/11~95/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7841	MH034180	139 x 158 x 11	FUSO TRUCK FT FT517 NYT1#,2#,RYT1#,2#,TY1 #,2#,WY1#,2#(22T)	96/4~00/	Wheel Hub FRONT (F & R)
03905 1394	MH034135	65 x 77 x 12	FUSO TRUCK FT FT315	79/10~83/	Wheel Hub REAR OUTER
03905 8348	MH034135	65 x 77 x 12	FUSO TRUCK FT FT50J LXT2,VX#,NYT2,RYT2, TY#,WY#,WZ#	00/1~	Wheel Hub REAR OUTER
03905 7064	MH034135	65 x 77 x 12	FUSO TRUCK FT FT517 LXT2,VX2#,NYT2#,RYT 2#,TY2#,WY2#	96/4~00/	Wheel Hub REAR OUTER
03905 8168	MH034135	65 x 77 x 12	FUSO TRUCK FT FT515 TY#,WY#	96/4~00/	Wheel Hub REAR OUTER
03905 8921	MH034135	65 x 77 x 12	FUSO TRUCK FT FT510,520,527	96/4~00/	Wheel Hub REAR OUTER
03905 8846	MH034135	65 x 77 x 12	FUSO TRUCK FT FT418 #S3(V),#S30#,#S4(V),#S7	85/9~89/1 0	Wheel Hub REAR OUTER
03905 6290	MH034135	65 x 77 x 12	FUSO TRUCK FT FT417 #S2	94/11~	Wheel Hub REAR OUTER
03905 2762	MH034135	65 x 77 x 12	FUSO TRUCK FT FT416	89/11~95/	Wheel Hub REAR OUTER
03905 7637	MH034135	65 x 77 x 12	FUSO TRUCK FT FT415 NP#,TP#,VP#	93/5~96/	Wheel Hub REAR OUTER
03905 4709	MH034134	60 x 72 x 12	FUSO TRUCK FT FT313,318	79/10~83/	Wheel Hub REAR OUTER
03905 2831	MH034135	65 x 77 x 12	FUSO TRUCK FT FT410	89/11~97/	Wheel Hub REAR OUTER
03905 6860	44514-51681	45 x 60 x 9	FUSO TRUCK FT FT112,113,117,119	74/~79/	Transmission FRONT
03905 6077	MH034135	65 x 77 x 12	FUSO TRUCK FT FT119 HD,HM,RP	76/~79/	Wheel Hub REAR OUTER
03905 2447	MH034135	65 x 77 x 12	FUSO TRUCK FT FT113 S,U,N,RP	74/~79/	Wheel Hub REAR OUTER
03905 2591	MH034134	60 x 72 x 12	FUSO TRUCK FT FU50K	00/1~	Wheel Hub REAR OUTER
03905 5342	MH034134	60 x 72 x 12	FUSO TRUCK FT FT50J LXT1#,NXT1,RX#,NYT1 #,RYT1	00/1~	Wheel Hub REAR OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8273	MH034134	60 x 72 x 12	FUSO TRUCK FT FT517 LXT1#,NXT1#,RX#,VX1 #,NYT1#MRYT1#,TY1#, WY1#	96/4~00/	Wheel Hub REAR OUTER
03905 6050	MH034134	60 x 72 x 12	FUSO TRUCK FT FT515 LX#,NY#,RY#	96/4~00/	Wheel Hub REAR OUTER
03905 7793	MH034134	60 x 72 x 12	FUSO TRUCK FT FT418 ALL	89/11~93/	Wheel Hub REAR OUTER
03905 5087	MH034134	60 x 72 x 12	FUSO TRUCK FT FT418 #S,#S01,#S2,#S2V,#S6	83/6~89/1 0	Wheel Hub REAR OUTER
03905 8111	MH034134	60 x 72 x 12	FUSO TRUCK FT FT417 #S1	94/11~96/	Wheel Hub REAR OUTER
03905 8036	MH034135	65 x 77 x 12	FUSO TRUCK FT FT415 ALL	83/6~93/5	Wheel Hub REAR OUTER
03905 1340	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT417 NZS2,NZTS2,RZS2,LTS2, NS2	94/11~96/	Final Drive PINION
03905 5351	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT515 LXT#,NYT#,RYT#	96/4~00/	Final Drive PINION
03905 3875	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FT FT517 VX2(A),WY2(A)	96/4~00/	Final Drive PINION
03905 5891	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FT FT510,520,527	96/4~00/	Final Drive PINION
03905 1655	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FT FT410 TS1,VS1	95/4~96/	Final Drive PINION
03905 2639	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FT FT410 VZS1,WZS1,TPS3,NPS3, VPS3	94/11~96/	Final Drive PINION
03905 3404	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT54J NYT2,NYT2X	03/3~	Final Drive PINION
03905 3611	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT50J LXT2,NYT2,RYT2,NYT2 (X)	00/1~	Final Drive PINION
03905 2384	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT517 LXT2(A),NYT2(A),RYT2 (A),TY2(A)	96/4~00/	Final Drive PINION
03905 7226	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FT FT54J NYT2V,VX1#,#2#,WZ2#	03/3~	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8474	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT418 TS2,VS2	89/11~95/	Final Drive PINION
03905 7406	31107-06301	85 x 110 x 13	FUSO TRUCK FT 8DC#	74/~83/	Engine TIMING GEAR CASE
03905 5627	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT416	89/11~95/	Final Drive PINION
03905 5930	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT415 NPS7,TPS2,TPS7,VPS2,V PS7	90/9~96/	Final Drive PINION
03905 7214	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT410 TS1,TS2,VS1,VS2	89/11~95/	Final Drive PINION
03905 2714	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT54J NYT1	03/3~	Final Drive PINION
03905 6332	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT50K	00/1~	Final Drive PINION
03905 1922	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT50J LXT1(A),NXT1,NYT1(A) ,RXG1,RXT1,RYT1	00/1~	Final Drive PINION
03905 6800	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT517 RYT1(A),TY1(A),VX1(A) ,WY1(A)	96/4~00/	Final Drive PINION
03905 6350	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT517 LXT1(A),NXT1(A),NYT1 (A),RXT1(A)	96/4~00/	Final Drive PINION
03905 5291	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FT FT515 TYP2,WYP2	96/7~00/	Final Drive PINION
03905 5468	31112-05701	130 x 160 x 14	FUSO TRUCK FT 6D20	76/~79/	Engine CRANK SHAFT REAR
03905 3314	MH034155	75 x 100 x 13	FUSO TRUCK FT FT54J NYT2,NYT2X	03/3~	Transmission REAR
03905 5591	MH034155	75 x 100 x 13	FUSO TRUCK FT FT418 TS3#,4#,VS3#,4#,7	83/6~89/10	Transmission REAR
03905 2597	ME120154		FUSO TRUCK FT 6D40,6M70	89/11~	Engine VALVE STEM SEAL
03905 2957	ME061574		FUSO TRUCK FT 8DC#,6D2#	79/10~	Engine VALVE STEM SEAL
03905 8012	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FT 6M70	00/1~	Engine CRANK SHAFT REAR
03905 1259	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FT 6D24,40	97/8~	Engine CRANK SHAFT REAR
03905 6095	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FT 8DC#	95/4~	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2552	31212-33300	135 x 155.5 x 15	FUSO TRUCK FT 6D40	89/11~97/8	Engine CRANK SHAFT REAR
03905 1349	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FT FT50J VX1#,2#,3,WY2#,WZ2#, WZ3(V),TYP4,WYP4	00/1~	Final Drive PINION
03905 8549	31212-33300	135 x 155.5 x 15	FUSO TRUCK FT 8DC#	79/10~95/4	Engine CRANK SHAFT REAR
03905 2246	ME061853	95 x 120 x 13	FUSO TRUCK FT 8DC8,9 FT413,415	83/6~85/8	Engine TIMING GEAR CASE
03905 1226	31112-05701	130 x 160 x 14	FUSO TRUCK FT 8DC#	74/~79/	Engine CRANK SHAFT REAR
03905 5705	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FT 6M70 FT50J	00/1~	Engine TIMING GEAR CASE
03905 1439	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FT 6D40 FT410,510,520	89/11~00/	Engine TIMING GEAR CASE
03905 8117	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FT 6D24 FT417,517,527	94/11~00/	Engine TIMING GEAR CASE
03905 7496	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FT 6D22 FT418	85/9~93/	Engine TIMING GEAR CASE
03905 2153	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FT 8DC11 FT50K		Engine TIMING GEAR CASE
03905 2966	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FT 8DC10 FT416	89/11~95/	Engine TIMING GEAR CASE
03905 3185	ME061853	95 x 120 x 13	FUSO TRUCK FT 6D20,22 FT418	79/10~85/8	Engine TIMING GEAR CASE
03905 8852	31212-33300	135 x 155.5 x 15	FUSO TRUCK FT 6D2#	79/10~97/8	Engine CRANK SHAFT REAR
03905 6032	MH034234	83 x 105 x 13	FUSO TRUCK FT FT54J NYT2V,VX1#,2#,WZ2#	03/3~	Transmission REAR
03905 6365	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FT FT418 LT,LS,NTS	83/6~88/8	Final Drive PINION
03905 8324	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FT FT413 KT	88/9~89/10	Final Drive PINION
03905 1139	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FT FT413 .LT,RT	83/6~93/	Final Drive PINION
03905 8024	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FT FT112 L	76/10~79/	Final Drive PINION
03905 5990	03434-07051	70 x 92 x 13.5 x 20.5	FUSO TRUCK FT FT#	74/~76/9	Final Drive PINION
03905 5504	MH034119	84 x 110 x 13	FUSO TRUCK FT FT4#,5#	94/11~	Propeller Shaft CENTER BEARING
03905 7310	MC833624	80 x 100 x 13	FUSO TRUCK FT FT4#,5#	89/11~	Propeller Shaft CENTER BEARING

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6455	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FT FT418 KTS,KTS6,LTS,LTS6,RT S6,NTS6,RGS6	85/9~95/	Final Drive PINION
03905 7766	03437-07052	70 x 90 x 10	FUSO TRUCK FT FT1#	74/~78/5	Propeller Shaft CENTER BEARING
03905 3143	MH034065	70 x 100 x 13	FUSO TRUCK FT FT4#,5#	89/11~	Propeller Shaft CENTER BEARING
03905 8954	MH034234	83 x 105 x 13	FUSO TRUCK FT FT50J NYT2V,VX1#,2#,3,WY2# ,WZ2#,3#,TYP4,WYP4	00/1~	Transmission REAR
03905 9020	MH034234	83 x 105 x 13	FUSO TRUCK FT FT517 VX2#,WY2#	96/4~00/	Transmission REAR
03905 7781	MH034234	83 x 105 x 13	FUSO TRUCK FT FT510,520,527	96/4~00/	Transmission REAR
03905 4802	MH034234	83 x 105 x 13	FUSO TRUCK FT FT418 TS2,VS2	89/11~95/	Transmission REAR
03905 5321	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT418 LTS2,NS2,NS6,TS6,VS6	90/2~95/	Final Drive PINION
03905 8393	MH034234	83 x 105 x 13	FUSO TRUCK FT FT410,416	89/11~96/	Transmission REAR
03905 3884	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FT 8DC8,9 FT413,415,515	85/9~00/	Engine TIMING GEAR CASE
03905 7733	MH034234	83 x 105 x 13	FUSO TRUCK FT FT417 VZS2,WZS2,TS2,VS2	94/11~96/	Transmission REAR
03905 1829	MH034065	70 x 100 x 13	FUSO TRUCK FT FT4#	83/7~89/10	Propeller Shaft CENTER BEARING
03905 4178	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT418 KTS,LTS,NS,TS,TS2V,TS4(V),VS,VS2V,VS4(V)	83/6~85/8	Final Drive PINION
03905 4127	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT417 KTS1,LTS1,NS1,RGS1,RTS1,TS1,VS1	95/4~96/	Final Drive PINION
03905 1823	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT417 NZS1,NZTS1,RZS1,VZS1 ,WZS1	94/11~96/	Final Drive PINION
03905 8708	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT415 L,LT,N,RT	93/5~96/	Final Drive PINION
03905 7937	MH034065	70 x 100 x 13	FUSO TRUCK FT FT1#,3#	78/6~83/	Propeller Shaft CENTER BEARING

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4271	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FT FT112 EXCEPT L	76/10~79/	Final Drive PINION
03905 4625	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT413 L,N	90/2~93/5	Final Drive PINION
03905 5081	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT418 LTS2,NS2,NS6,TS6,VS6	85/9~90/2	Final Drive PINION
03905 1817	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT418 TS2V,TS3V,TS4(V),VS2 V,VS3V,VS4MVS4S	85/9~88/8	Final Drive PINION
03905 1028	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FT FT415 NPS7,TPS2,TPS7,VPS2,V PS7	90/2~90/8	Final Drive PINION
03905 6737	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT418 KTS2,NS2,TS2,VS2	83/6~85/8	Final Drive PINION
03905 3431	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT415 ALL	83/6~90/2	Final Drive PINION
03905 2690	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FT FT313,318 ALL	79/10~83/	Final Drive PINION
03905 8624	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT413 KT	83/6~88/8	Final Drive PINION
03905 7853	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT413 L,N	83/6~90/2	Final Drive PINION
03905 4844	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT315 ALL	79/10~83/	Final Drive PINION
03905 5330	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT119 HD,HM,RP	76/10~79/	Final Drive PINION
03905 4481	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT113 S,U,N,RP	76/10~79/	Final Drive PINION
03905 2852	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FT FT117 ALL	76/10~79/	Final Drive PINION
03905 7883	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FT FT418 KTS2,NS,TS2,TS3,VS,VS 2,VS3,VS7	85/9~89/10	Final Drive PINION
03905 6956	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FT FT119 L,N,S,U	76/10~79/	Final Drive PINION
03905 4757	MH034234	83 x 105 x 13	FUSO TRUCK FU FU419 S,SQ,T,TQ,U,UQ	89/11~96/	Transmission REAR
03905 5174	MH034234	83 x 105 x 13	FUSO TRUCK FU FU419 SZ,YZ	94/11~96/	Transmission REAR
03905 1670	MH034234	83 x 105 x 13	FUSO TRUCK FU FU440,470	91/9~97/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1262	MH034234	83 x 105 x 13	FUSO TRUCK FU FU477,478 SS2,TS2,US2	83/6~97/	Transmission REAR
03905 3023	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FU 6D40,8M20,21	97/8~	Engine CRANK SHAFT REAR
03905 8138	MH034234	83 x 105 x 13	FUSO TRUCK FU FU510,512,540,549	96/4~00/	Transmission REAR
03905 3698	ME061574		FUSO TRUCK FU 8DC#,6D2#	79/10~	Engine VALVE STEM SEAL
03905 6128	MH034234	83 x 105 x 13	FUSO TRUCK FU FU511 XEC.NY	96/4~00/	Transmission REAR
03905 6656	MH034234	83 x 105 x 13	FUSO TRUCK FU FU418 S2,TS2,US2	89/11~95/	Transmission REAR
03905 6974	ME120154		FUSO TRUCK FU 6D40,8M20,21,6M70	91/9~	Engine VALVE STEM SEAL
03905 1577	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FU 6M70	00/1~	Engine CRANK SHAFT REAR
03905 4283	MH034234	83 x 105 x 13	FUSO TRUCK FU FU417...SZS2,YZS2,SS2, TS2,US2	94/11~96/	Transmission REAR
03905 2768	MH034234	83 x 105 x 13	FUSO TRUCK FU FU416 S,SQ,T,TQ,U,UQ	89/11~95/	Transmission REAR
03905 6761	MH034234	83 x 105 x 13	FUSO TRUCK FU FU411 EXC. MZC,NC(94.11~)	91/9~96/	Transmission REAR
03905 8381	MH034234	83 x 105 x 13	FUSO TRUCK FU FU410 EXC. NS2,PS2(91.9~95.4)	89/11~96/	Transmission REAR
03905 2921	MH034155	75 x 100 x 13	FUSO TRUCK FU FU54J NY2,NY2X,TZT2A	03/3~	Transmission REAR
03905 4928	MH034155	75 x 100 x 13	FUSO TRUCK FU FU50M NYF1,NY1,2,PYF1,PY1	00/1~	Transmission REAR
03905 2933	MH034155	75 x 100 x 13	FUSO TRUCK FU FU50K SX,SY,TX,TY,TZS,JXD, NX,NY,PX,PY	00/1~	Transmission REAR
03905 5279	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FU 6D24 EXC. FU517 JXM1,JXMA1A	97/8~00/	Engine CRANK SHAFT REAR
03905 4175	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 6D22 FU418,478	85/9~96/	Engine TIMING GEAR CASE
03905 8783	MH034155	75 x 100 x 13	FUSO TRUCK FU FU50J JXD1,NX1,NY2,PX1,PY2 ,TZT2A	00/1~03/3	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2582	MH034155	75 x 100 x 13	FUSO TRUCK FU FU577 LXT2, NYT2, PX1, PY2, UX1	96/4~00/	Transmission REAR
03905 2987	MH034155	75 x 100 x 13	FUSO TRUCK FU FU54J UZ239	00/1~03/3	Transmission REAR
03905 3854	31212-33300	135 x 155.5 x 15	FUSO TRUCK FU 8DC9 FU515, JXM, JXMA	96/4~97/4	Engine CRANK SHAFT REAR
03905 4019	MH034233	57 x 70 x 9	FUSO TRUCK FU FU50M EXC. NYF1, NY1, PYF1, PY1	00/1~	Transmission FRONT
03905 7613	MH034155	75 x 100 x 13	FUSO TRUCK FU FU519 NY, PY	96/4~00/	Transmission REAR
03905 5960	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 8DC9 FU415, 515	85/9~00/	Engine TIMING GEAR CASE
03905 7826	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 8DC10 FU416	89/11~96/	Engine TIMING GEAR CASE
03905 5297	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 8DC11 FU419, 519, 549, 50K	85/9~	Engine TIMING GEAR CASE
03905 8777	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 6D24 FU417, 477, 517, 577	94/11~00/	Engine TIMING GEAR CASE
03905 5288	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 8M20 FU411, 511	91/9~00/	Engine TIMING GEAR CASE
03905 7922	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 8M21 FU512, 50M, 54M	96/4~	Engine TIMING GEAR CASE
03905 2270	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 6M70 FU50J, 54J, 55J	00/1~	Engine TIMING GEAR CASE
03905 7355	31112-05701	130 x 160 x 14	FUSO TRUCK FU 8DC#	74/~79/	Engine CRANK SHAFT REAR
03905 5633	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 6D40 FU410, 440, 470, 510, 540	89/11~00/	Engine TIMING GEAR CASE
03905 4766	31212-33300	135 x 155.5 x 15	FUSO TRUCK FU 8DC8, 9, 10	79/10~96/	Engine CRANK SHAFT REAR
03905 4010	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FU 8DC11 FU50K JXM	00/1~	Engine CRANK SHAFT REAR
03905 2999	31212-33300	135 x 155.5 x 15	FUSO TRUCK FU 8DC11 FU419 EXC. MZ, PZ, SZ, YZ (94.11-)	85/9~95/4	Engine CRANK SHAFT REAR
03905 5765	31212-33300	135 x 155.5 x 15	FUSO TRUCK FU 6D22, 24	83/6~97/8	Engine CRANK SHAFT REAR
03905 7334	31212-33300	135 x 155.5 x 15	FUSO TRUCK FU 6D24 FU517 JXM1, JXM1A	96/4~98/4	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4472	31212-33300	135 x 155.5 x 15	FUSO TRUCK FU 6D40	89/11~97/8	Engine CRANK SHAFT REAR
03905 5156	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FU 8DC9 EXC. FU515 JXM,JXMA	96/4~00/	Engine CRANK SHAFT REAR
03905 3167	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FU 8DC11 FU419	95/4~99/	Engine CRANK SHAFT REAR
03905 7814	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FU 8DC11 FU419 MZ,PZ,SZ,YZ	94/11~99/	Engine CRANK SHAFT REAR
03905 2219	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FU 8DC11 FU519,549	96/4~00/	Engine CRANK SHAFT REAR
03905 4349	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FU 8DC11 FU50K EXC. JXM	00/1~	Engine CRANK SHAFT REAR
03905 8870	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FU 8DC9 FU515 JXM,JXMA	97/5~00/	Engine CRANK SHAFT REAR
03905 2672	31112-05701	130 x 160 x 14	FUSO TRUCK FU 6D20	76/~79/	Engine CRANK SHAFT REAR
03905 1835	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FU 8DC8 FU413	85/9~94/	Engine TIMING GEAR CASE
03905 7928	MH034153	70 x 92 x 12	FUSO TRUCK FU FU418,478 JDS1,LTS,LTS2,NS,PS	85/9~89/3	Transmission REAR
03905 5528	MH034153	70 x 92 x 12	FUSO TRUCK FU FU418,478 NS2,PS2,SS,SS6,TS,TS6, US,US6	85/9~89/3	Transmission REAR
03905 8162	MH034153	70 x 92 x 12	FUSO TRUCK FU FU418,478 SS2#,TS2,US2#	85/9~88/8	Transmission REAR
03905 8084	MH034153	70 x 92 x 12	FUSO TRUCK FU FU418,478 JDS1,LTS,NS,PS,SS,SS2 V,TS,US,US2V	83/6~85/8	Transmission REAR
03905 4169	MH034153	70 x 92 x 12	FUSO TRUCK FU FU418,478 LTS2,NS2,PS2,SS2,TS2,U S2	83/6~85/8	Transmission REAR
03905 2990	MH034153	70 x 92 x 12	FUSO TRUCK FU FU417 LTS1	95/4~96/	Transmission REAR
03905 3521	MH034153	70 x 92 x 12	FUSO TRUCK FU FU415 EXC.S,SQ,T,TQ,U,UQ(88 9~89.10)	83/6~96/	Transmission REAR
03905 5687	MH034153	70 x 92 x 12	FUSO TRUCK FU FU413	83/7~94/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1472	MH034153	70 x 92 x 12	FUSO TRUCK FU FU313,315,318,353,358	79/10~83/	Transmission REAR
03905 2708	MH034153	70 x 92 x 12	FUSO TRUCK FU FU177,119	76/~79/	Transmission REAR
03905 6584	MH034233	57 x 70 x 9	FUSO TRUCK FU FU54M,55J	00/1~	Transmission FRONT
03905 4103	ME655359	97 x 110 x 4.5	FUSO TRUCK FU FU4##,5##	83/9~	Transmission MAIN SHAFT
03905 2102	MH034153	70 x 92 x 12	FUSO TRUCK FU FU418,478 SS6,TS6,US6	89/3~95/	Transmission REAR
03905 5531	MH034233	57 x 70 x 9	FUSO TRUCK FU FU54J EXC.TZT1A	00/1~	Transmission FRONT
03905 5864	MH034136	130 x 150 x 12	FUSO TRUCK FU FU413,415,416,440,470,477,478	94/11~97/	Wheel Hub FRONT
03905 7169	MH034233	57 x 70 x 9	FUSO TRUCK FU FU50J EXC.JXD1,LXT1,NXT1,PX1,TZT1A	00/1~	Transmission FRONT
03905 8216	MH034233	57 x 70 x 9	FUSO TRUCK FU FU577 UY2#	96/4~00/	Transmission FRONT
03905 8672	MH034233	57 x 70 x 9	FUSO TRUCK FU FU519 SY,TX#,TY#,TZ#,UZ#	96/4~00/	Transmission FRONT
03905 8747	MH034233	57 x 70 x 9	FUSO TRUCK FU FU517 SY2#,TX2#,TY2#,TZ2#,UZ2#	96/4~00/	Transmission FRONT
03905 4817	MH034233	57 x 70 x 9	FUSO TRUCK FU FU510,511,512,540,549	96/4~00/	Transmission FRONT
03905 7319	MH034233	57 x 70 x 9	FUSO TRUCK FU FU440,470	91/9~97/	Transmission FRONT
03905 5180	MH034233	57 x 70 x 9	FUSO TRUCK FU FU419 S,SQ,T,TQ,U,UQ,SZ,YZ	89/11~96/	Transmission FRONT
03905 2063	MH034233	57 x 70 x 9	FUSO TRUCK FU FU418,477,478 S2,TS2,US2	89/11~96/	Transmission FRONT
03905 6869	MH034153	70 x 92 x 12	FUSO TRUCK FU FU102,103,112,113(EXCEPT J,JD)	74/~79/	Transmission REAR
03905 1181	MH034155	75 x 100 x 13	FUSO TRUCK FU FU415 S,SQ,T,TQ,U,UQ	88/9~89/10	Transmission REAR
03905 4124	MH034155	75 x 100 x 13	FUSO TRUCK FU FU511 NY	96/4~00/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3506	MH034155	75 x 100 x 13	FUSO TRUCK FU FU477 LTS2,NS1,2,PS1,2,SS1,TS 1,US1	95/4~96/	Transmission REAR
03905 3971	MH034155	75 x 100 x 13	FUSO TRUCK FU FU419 MZ,PZ	94/11~96/	Transmission REAR
03905 5618	MH034155	75 x 100 x 13	FUSO TRUCK FU FU419 P,N	85/9~96/	Transmission REAR
03905 6935	MH034155	75 x 100 x 13	FUSO TRUCK FU F4116FU419 S,SQ,T,TQ,U,UQ	85/9~89/1 0	Transmission REAR
03905 5639	MH034155	75 x 100 x 13	FUSO TRUCK FU FU418,478 NS2,PS2	89/11~95/	Transmission REAR
03905 6587	MH034155	75 x 100 x 13	FUSO TRUCK FU FU418,478 SS2,3,TS2,3,7,US2,3,7	89/3~89/1 0	Transmission REAR
03905 8630	MH034155	75 x 100 x 13	FUSO TRUCK FU FU418,478 SS3,TS3#,7,US3#,7	85/9~89/3	Transmission REAR
03905 3053	MH034155	75 x 100 x 13	FUSO TRUCK FU FU418,478 SS2,TS2,US2	88/9~89/3	Transmission REAR
03905 6725	MH034155	75 x 100 x 13	FUSO TRUCK FU FU418,478 SS4#,TS4#,US4#	83/6~88/8	Transmission REAR
03905 6950	MH034153	70 x 92 x 12	FUSO TRUCK FU FU418,478 LTS6,NS6,PS6	85/9~95/	Transmission REAR
03905 7949	MH034155	75 x 100 x 13	FUSO TRUCK FU FU416 N,NQ,P,PQ,NFX,PFX	89/11~95/	Transmission REAR
03905 5675	MH034153	70 x 92 x 12	FUSO TRUCK FU FU418,478 NS2,PS2,SS,TS,US	89/3~89/1 0	Transmission REAR
03905 5723	MH034155	75 x 100 x 13	FUSO TRUCK FU FU411 MZC,NC	94/11~96/	Transmission REAR
03905 2864	MH034155	75 x 100 x 13	FUSO TRUCK FU FU410 NS2,PS2	91/9~95/	Transmission REAR
03905 3485	44514-46681	80 x 105 x 13	FUSO TRUCK FU FU113 J,JD	76/~79/	Transmission REAR
03905 6284	MH034153	70 x 92 x 12	FUSO TRUCK FU FU54J TZX1A	03/3~	Transmission REAR
03905 6035	MH034153	70 x 92 x 12	FUSO TRUCK FU FU50K JXM,LXTS,NYTS	00/1~	Transmission REAR
03905 4067	MH034153	70 x 92 x 12	FUSO TRUCK FU FU50J TZX1A,LXT1	00/1~	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8156	MH034153	70 x 92 x 12	FUSO TRUCK FU FU577 LXT1,NXT1	96/4~98/	Transmission REAR
03905 3809	MH034153	70 x 92 x 12	FUSO TRUCK FU FU517 TZT1A	96/4~00/	Transmission REAR
03905 1874	MH034153	70 x 92 x 12	FUSO TRUCK FU FU515	96/4~00/	Transmission REAR
03905 7493	MH034153	70 x 92 x 12	FUSO TRUCK FU FU477 LTS1,TGS1	95/4~96/	Transmission REAR
03905 2444	MH034155	75 x 100 x 13	FUSO TRUCK FU FU517 JXM1#,JX1#,NX1#,NY2, PX1#,PY2,TX1#	96/4~00/	Transmission REAR
03905 8951	MH034155	75 x 100 x 13	FUSO TRUCK FU FU417 MZS2,PZS2,NS1,2,PS1,2, SS1,TS1,US1	94/11~96/	Transmission REAR
03905 4220	MH034180	139 x 158 x 11	FUSO TRUCK FU FU54J,54M,55J	00/1~	Wheel Hub FRONT
03905 8567	MH034134	60 x 72 x 12	FUSO TRUCK FU FU418,478 ALL	89/11~96/	Wheel Hub REAR OUTER (F)
03905 4202	MH034134	60 x 72 x 12	FUSO TRUCK FU FU418,478 #S,#S2,#S6(T,T2,T6 ENGINE)	85/9~89/11	Wheel Hub REAR OUTER (F)
03905 2945	MH034134	60 x 72 x 12	FUSO TRUCK FU FU418,478 DRUM BREAK	83/6~85/8	Wheel Hub REAR OUTER (F)
03905 7091	MH034134	60 x 72 x 12	FUSO TRUCK FU FU417,477 #S1(T1 ENGINE)	94/11~97/	Wheel Hub REAR OUTER (F)
03905 3416	MH034134	60 x 72 x 12	FUSO TRUCK FU FU415 CARGO	89/11~97/	Wheel Hub REAR OUTER (F)
03905 6824	MH034134	60 x 72 x 12	FUSO TRUCK FU FU413 ALL	89/11~94/	Wheel Hub REAR OUTER (F)
03905 3320	MH034134	60 x 72 x 12	FUSO TRUCK FU FU413 CARGO	83/6~89/10	Wheel Hub REAR OUTER (F)
03905 7559	MH034134	60 x 72 x 12	FUSO TRUCK FU FU318,353,358	80/2~83/	Wheel Hub REAR OUTER (F)
03905 2033	MH034134	60 x 72 x 12	FUSO TRUCK FU FU313 EXC. J,JD,JM,JMA	79/10~83/	Wheel Hub REAR OUTER (F)
03905 8867	MC807438	154 x 172 x 14	FUSO TRUCK FU FU4##	83/7~	Wheel Hub REAR INNER (F & R)
03905 4289	MH034136	130 x 150 x 12	FUSO TRUCK FU FU50K JX#,LX#,NX#,PX#,SX#,TX#(20T)	00/1~	Wheel Hub FRONT
03905 1292	MH034082	155 x 180 x 17	FUSO TRUCK FU FU1##	74/~79/	Wheel Hub REAR INNER (F & R)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2468	MH034134	60 x 72 x 12	FUSO TRUCK FU FU577 LX#(EXC.LXT2),NX#,PX #,UX#	96/4~00/	Wheel Hub REAR OUTER (F)
03905 3158	MH034180	139 x 158 x 11	FUSO TRUCK FU FU50J,50K,50M NY#,PY#,SY#,TY#,TZ#, UZ#(22T,25T)	00/1~	Wheel Hub FRONT
03905 4850	MH034180	139 x 158 x 11	FUSO TRUCK FU FU577 NY#,PY#,UY#(22T)	96/4~00/	Wheel Hub FRONT
03905 4193	MH034180	139 x 158 x 11	FUSO TRUCK FU FU517,519 NY#,PY#,SY#,TY#,TZ#, UZ#(22T,25T)	96/4~00/	Wheel Hub FRONT
03905 6770	MH034180	139 x 158 x 11	FUSO TRUCK FU FU515 NY#,PY#,SY#,TY#(22T)	96/4~00/	Wheel Hub FRONT
03905 7346	MH034180	139 x 158 x 11	FUSO TRUCK FU FU511,512,540,549	96/4~00/	Wheel Hub FRONT
03905 6485	MH034180	139 x 158 x 11	FUSO TRUCK FU FU510 TY#,TZ#,UZ#(22T,25T)	96/4~00/	Wheel Hub FRONT
03905 5147	MH034180	139 x 158 x 11	FUSO TRUCK FU FU419 YZ	94/11~97/	Wheel Hub FRONT
03905 3836	MH034180	139 x 158 x 11	FUSO TRUCK FU FU417 YZS2	94/11~97/	Wheel Hub FRONT
03905 7034	MH034180	139 x 158 x 11	FUSO TRUCK FU FU410,411 TZ#,UZ#,YZ#	94/11~97/	Wheel Hub FRONT
03905 4172	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU416	89/11~96/	Final Drive PINION
03905 8675	MH034082	155 x 180 x 17	FUSO TRUCK FU FU3##	79/10~83/	Wheel Hub REAR INNER (F & R)
03905 7655	MH034135	65 x 77 x 12	FUSO TRUCK FU FU418 DISC BREAK	83/6~85/8	Wheel Hub REAR OUTER (F)
03905 4340	12857-16700	165 x 195 x 19	FUSO TRUCK FU FU1##,3##	74/~83/	Rear Suspension TRUNION
03905 2309	MH034135	65 x 77 x 12	FUSO TRUCK FU FU50M,54J,55J	00/1~	Wheel Hub REAR OUTER (F)
03905 1325	MH034135	65 x 77 x 12	FUSO TRUCK FU FU50K JXD	00/1~	Wheel Hub REAR OUTER (F)
03905 5996	MH034135	65 x 77 x 12	FUSO TRUCK FU FU50J EXC. T2T1A	00/1~	Wheel Hub REAR OUTER (F)
03905 3632	MH034135	65 x 77 x 12	FUSO TRUCK FU FU577 LXT2,NY#,PY#,UY#	96/4~00/	Wheel Hub REAR OUTER (F)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4052	MH034135	65 x 77 x 12	FUSO TRUCK FU FU517 JX#,TX2#,NY#,PY#,SY#, TY#,TZ#,UZ#	96/4~00/	Wheel Hub REAR OUTER (F)
03905 7892	MH034135	65 x 77 x 12	FUSO TRUCK FU FU515 JX#	96/4~00/	Wheel Hub REAR OUTER (F)
03905 4328	MH034135	65 x 77 x 12	FUSO TRUCK FU FU510,511,512,519,540,5 49	96/4~00/	Wheel Hub REAR OUTER (F)
03905 2825	MH034135	65 x 77 x 12	FUSO TRUCK FU FU478 #S4,#S7(T4,T7 ENGINE)	85/9~89/1 0	Wheel Hub REAR OUTER (F)
03905 8906	MH034135	65 x 77 x 12	FUSO TRUCK FU FU477 #S2(T2 ENGINE)	95/4~97/	Wheel Hub REAR OUTER (F)
03905 1496	MH034134	60 x 72 x 12	FUSO TRUCK FU FU515 EXC. JX#	96/4~00/	Wheel Hub REAR OUTER (F)
03905 1580	MH034135	65 x 77 x 12	FUSO TRUCK FU FU418 #S1,#S3,#S4,#S7(T1,T3,T 4,T7 ENGINE)	85/9~89/1 1	Wheel Hub REAR OUTER (F)
03905 6446	MH034134	60 x 72 x 12	FUSO TRUCK FU FU517 NX#,PX#,TX1#,TZ1A#,T ZT1A	96/4~00/	Wheel Hub REAR OUTER (F)
03905 5003	MH034135	65 x 77 x 12	FUSO TRUCK FU FU417 #S2(T2 ENGINE)	94/11~97/	Wheel Hub REAR OUTER (F)
03905 2084	MH034135	65 x 77 x 12	FUSO TRUCK FU FU416	89/11~96/	Wheel Hub REAR OUTER (F)
03905 2282	MH034135	65 x 77 x 12	FUSO TRUCK FU FU415 DUMP,MUXER	89/11~97/	Wheel Hub REAR OUTER (F)
03905 6932	MH034135	65 x 77 x 12	FUSO TRUCK FU FU415 ALL	83/7~89/1 0	Wheel Hub REAR OUTER (F)
03905 6221	MH034135	65 x 77 x 12	FUSO TRUCK FU FU413 DUMP,MIXER	83/7~89/1 0	Wheel Hub REAR OUTER (F)
03905 1973	MH034135	65 x 77 x 12	FUSO TRUCK FU FU410,411	89/11~97/	Wheel Hub REAR OUTER (F)
03905 3203	MH034135	65 x 77 x 12	FUSO TRUCK FU FU315	79/10~83/	Wheel Hub REAR OUTER (F)
03905 6335	MH034135	65 x 77 x 12	FUSO TRUCK FU FU313 J,JD,JM,JMA	79/10~83/	Wheel Hub REAR OUTER (F)
03905 8042	MH034134	60 x 72 x 12	FUSO TRUCK FU FU50K EXC. JXD	00/1~	Wheel Hub REAR OUTER (F)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8321	MH034134	60 x 72 x 12	FUSO TRUCK FU FU50J T2T1A(T1 EHNGINE)	00/1~	Wheel Hub REAR OUTER (F)
03905 3059	MH034136	130 x 150 x 12	FUSO TRUCK FU FU50J JX#,NX#,PX#,TX#(20T)	00/1~	Wheel Hub FRONT
03905 1364	MH034135	65 x 77 x 12	FUSO TRUCK FU FU419,440,470	85/9~99/	Wheel Hub REAR OUTER (F)
03905 2771	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU511 SY,TY,UZ#	96/4~00/	Final Drive PINION
03905 6578	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU50M NYF1,NY1,2,PYF1,PY2	00/1~	Final Drive PINION
03905 7337	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU54J UZ239,NY2,NY2X,T2T2 A	00/1~	Final Drive PINION
03905 5657	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU410 SS1,3,TS1,3,US1,3	95/4~96/	Final Drive PINION
03905 3383	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU410 SZ#,TZ#,UZ#,YZ#	94/11~96/	Final Drive PINION
03905 7643	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU411 SC,TC,UC	95/4~96/	Final Drive PINION
03905 7043	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU411 TZ#,UZ#,YZ#	94/11~96/	Final Drive PINION
03905 7160	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU417 SZS2,YZS2,SS2,TS2,US2	94/11~96/	Final Drive PINION
03905 6623	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU419 SZ,YZ	94/11~96/	Final Drive PINION
03905 4247	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU419 S,T,U	95/4~96/	Final Drive PINION
03905 1733	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU440	95/4~96/	Final Drive PINION
03905 4934	MH034136	130 x 150 x 12	FUSO TRUCK FU FU50M TX#(20T)	00/1~	Wheel Hub FRONT
03905 8891	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU510,512,540,549	96/4~00/	Final Drive PINION
03905 1361	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU577 LXT2,NT2,PY2	96/4~00/	Final Drive PINION
03905 1190	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU517 SY2,TX2#,TY2#,TZ2#,UZ 2#	96/4~00/	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1406	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU519 SY,TX#,TY#,TZ#,UZ#	96/4~00/	Final Drive PINION
03905 5720	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU577 UY2	96/4~00/	Final Drive PINION
03905 4901	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU50J EXC. JXD1,NX1,NY2,2X,PX1, PY2,TZT1A,2A,LXT1	00/1~	Final Drive PINION
03905 7502	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU50M SY1,2,TX1,TY1,2,TZ1,UZ 1,2,3	00/1~	Final Drive PINION
03905 5816	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU54M,55J	00/1~	Final Drive PINION
03905 4511	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU54J EXC.UZ239,NY2,NY2X, TZT1A,2A	00/1~	Final Drive PINION
03905 8561	31107-06301	85 x 110 x 13	FUSO TRUCK FU 8DC#	74/~83/	Engine TIMING GEAR CASE
03905 5975	ME061853	95 x 120 x 13	FUSO TRUCK FU 8DC8,9 FU413,415	83/6~85/8	Engine TIMING GEAR CASE
03905 4943	ME061853	95 x 120 x 13	FUSO TRUCK FU 6D2#	79/~83/	Engine TIMING GEAR CASE
03905 2687	MH034201	84 x 162 x 12 x 41.5	FUSO TRUCK FU FU477 SS2,TS2,US2	95/4~96/	Final Drive PINION
03905 3503	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU418,478 SS2,TS2,US2	89/11~95/	Final Drive PINION
03905 2600	MH034136	130 x 150 x 12	FUSO TRUCK FU FU577 LX#,NX#,PX#,UX#(20T)	96/4~00/	Wheel Hub FRONT
03905 6341	MH034136	130 x 150 x 12	FUSO TRUCK FU FU519 TX#(20T)	96/4~00/	Wheel Hub FRONT
03905 1127	MH034136	130 x 150 x 12	FUSO TRUCK FU FU517 NX#,PX#,TX1#,2#,JX#(20 T)	96/4~00/	Wheel Hub FRONT
03905 1136	MH034136	130 x 150 x 12	FUSO TRUCK FU FU515..NX#,LX#,PX#,SX #,TX#,JX#(20T)	96/4~00/	Wheel Hub FRONT
03905 7022	MH034136	130 x 150 x 12	FUSO TRUCK FU FU510 TX#(20T)	96/4~00/	Wheel Hub FRONT
03905 6641	MH034136	130 x 150 x 12	FUSO TRUCK FU FU419 EXC. YZ(94.11~)	85/9~99/	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5879	MH034136	130 x 150 x 12	FUSO TRUCK FU FU417 EXC. YZS2	94/11~97/	Wheel Hub FRONT
03905 4379	MH034136	130 x 150 x 12	FUSO TRUCK FU FU140,411 EXC. TZ#,UZ#,YZ#(94.11~)	89/11~97/	Wheel Hub FRONT
03905 5870	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU FU415 EXC. JD,JM(89.11~)	83/6~90/2	Final Drive PINION
03905 7940	MH034136	130 x 150 x 12	FUSO TRUCK FU FU4##	89/11~94/ 11	Wheel Hub FRONT
03905 7568	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU50K JXD	00/1~	Final Drive PINION
03905 4262	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU417 MZS2,PZS2,NS2,PS2	94/11~96/	Final Drive PINION
03905 6632	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU50J JXD1,NX1,NY2,PX1,PY2 ,TGT2A	00/1~	Final Drive PINION
03905 7958	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU419 N,S,SQ,T,TQ,U,UQ	89/11~95/ 4	Final Drive PINION
03905 6302	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU419 N,P	95/4~96/	Final Drive PINION
03905 4217	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU419 MZ,PZ	94/11~96/	Final Drive PINION
03905 1559	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU440	93/5~95/4	Final Drive PINION
03905 4292	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU470	91/9~96/	Final Drive PINION
03905 8210	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU477 LYS2,NS2,PS2	95/4~96/	Final Drive PINION
03905 4595	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU511 NY	96/4~00/	Final Drive PINION
03905 1916	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU515 JX#	96/4~00/	Final Drive PINION
03905 4574	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU517 JX#,NY2#,PY2#,TGT2A	96/4~00/	Final Drive PINION
03905 3791	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU519 NY,PY	96/4~00/	Final Drive PINION
03905 1277	ME061853	95 x 120 x 13	FUSO TRUCK FU 6D22 FU418,478	83/6~85/8	Engine TIMING GEAR CASE
03905 1793	MH034233	57 x 70 x 9	FUSO TRUCK FU FU417 SZS2,YZS2,SS2,TS2,US2	94/11~96/	Transmission FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7103	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU FU413	83/6~90/2	Final Drive PINION
03905 4523	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FU FU117 ALL	77/~79/	Final Drive PINION
03905 2258	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FU FU313 N,P,S,U	79/10~83/	Final Drive PINION
03905 3047	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FU FU318,353,358	80/2~83/	Final Drive PINION
03905 5945	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU FU112 J,JD,JM	76/10~79/	Final Drive PINION
03905 8219	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU FU113 J,JD,JM,N,P,R,S	76/10~79/	Final Drive PINION
03905 5285	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU FU119 J,JD,JM	76/10~79/	Final Drive PINION
03905 4916	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU418,478 EXC.SS2,TS2,US2	90/2~95/	Final Drive PINION
03905 6143	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU FU315 ALL	79/10~83/	Final Drive PINION
03905 1412	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FU FU112 EXCEPT J,JD,JM	76/10~79/	Final Drive PINION
03905 3392	MH034151	52 x 65 x 9	FUSO TRUCK FU FU54J T2T1A	03/3~	Transmission FRONT
03905 2969	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU FU418,478 EXC.SS2,TS2,US2(89.11-)	83/6~90/2	Final Drive PINION
03905 3323	12857-16700	165 x 195 x 19	FUSO TRUCK FU FU41#	83/7~99/	Rear Suspension TRUNION
03905 4061	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU413	90/2~93/	Final Drive PINION
03905 6329	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU415 EXC.JD,JM	90/2~96/	Final Drive PINION
03905 2312	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU F4197 LTS1,NS1,PS1,SS1,TS1,U S1	95/4~96/	Final Drive PINION
03905 7244	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU F4106FU313 J,JD,JM	79/10~83/	Final Drive PINION
03905 8096	MH034234	83 x 105 x 13	FUSO TRUCK FU FU54J EXC. UZ239,NY2,NY2X,T2T1 A,2A	00/1~	Transmission REAR
03905 2477	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK FU FU419 N,P,S,SQ,T,TQ,U,UQ	85/9~89/1 0	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6746	MH034233	57 x 70 x 9	FUSO TRUCK FU FU416 S,SQ,T,TQ,U,UQ	89/11~95/	Transmission FRONT
03905 6527	MH034092	130 x 150 x 14	FUSO TRUCK FU FU3##	79/10~89/ 10	Wheel Hub FRONT
03905 2024	MH034234	83 x 105 x 13	FUSO TRUCK FU FU519 SY,TX#,TY#,TZ#,UZ#	96/4~00/	Transmission REAR
03905 2411	MH034234	83 x 105 x 13	FUSO TRUCK FU FU577 UY2	96/4~00/	Transmission REAR
03905 3113	MH034234	83 x 105 x 13	FUSO TRUCK FU FU50J SY2,TX1,2,3,TY2,3,TZ2,3 ,UZ1,2,3,4	00/1~	Transmission REAR
03905 8462	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FU FU119 EXCEPT J,JD,JM	76/10~79/	Final Drive PINION
03905 1766	MH034234	83 x 105 x 13	FUSO TRUCK FU FU50M SY1,2,TX1,,TY1,2,TZ1,U Z1,2,3	00/1~	Transmission REAR
03905 2720	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK FU FU113 EXCEPT J,JD,JM,N,P,R,S	76/10~79/	Final Drive PINION
03905 5411	MH034234	83 x 105 x 13	FUSO TRUCK FU FU54M,55J	00/1~	Transmission REAR
03905 1307	03437-07052	70 x 90 x 10	FUSO TRUCK FU FU1#	74/~78/5	Propeller Shaft CENTER BEARING
03905 1826	MH034065	70 x 100 x 13	FUSO TRUCK FU FU1#,3#	78/6~83/	Propeller Shaft CENTER BEARING
03905 2900	MH034065	70 x 100 x 13	FUSO TRUCK FU FU4#	83/7~89/1 0	Propeller Shaft CENTER BEARING
03905 5030	MC833624	80 x 100 x 13	FUSO TRUCK FU FU4#,5#	89/11~	Propeller Shaft CENTER BEARING
03905 4322	03434-07051	70 x 92 x 13.5 x 20.5	FUSO TRUCK FU FU#	74/~76/9	Final Drive PINION
03905 8546	MH034119	84 x 110 x 13	FUSO TRUCK FU FU4#,5#	94/11~	Propeller Shaft CENTER BEARING
03905 5606	MH034234	83 x 105 x 13	FUSO TRUCK FU FU50J NY2V,TX2X,TY2X,UZ2 X,UZ3X,UZ4V42	03/3~	Transmission REAR
03905 3464	MH034151	52 x 65 x 9	FUSO TRUCK FU FU50J JXD1,LXT1,NX1,PX1,TZ T1A	00/1~	Transmission FRONT
03905 3005	MH034151	52 x 65 x 9	FUSO TRUCK FU FU410 NS2,PS2	91/9~95/4	Transmission FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6833	MH034151	52 x 65 x 9	FUSO TRUCK FU FU313,315,318,353,358	79/10~83/	Transmission FRONT
03905 5021	MH034151	52 x 65 x 9	FUSO TRUCK FU FU113 J,JD	76/~79/	Transmission FRONT
03905 1640	44514-51681	45 x 60 x 9	FUSO TRUCK FU FU117,199	76/~79/	Transmission FRONT
03905 3851	44514-51681	45 x 60 x 9	FUSO TRUCK FU FU102,103,112,113(EXCEPT J,JD)	74/~79/	Transmission FRONT
03905 2369	MH034234	83 x 105 x 13	FUSO TRUCK FU FU517 SY2,TX2#,TY2#,TZ2#,UZ 2#	96/4~00/	Transmission REAR
03905 6227	MH034151	52 x 65 x 9	FUSO TRUCK FU FU413,415	83/7~97/	Transmission FRONT
03905 3353	MH034151	52 x 65 x 9	FUSO TRUCK FU FU50K	00/1~	Transmission FRONT
03905 4133	MC095475	154 x 185 x 19	FUSO TRUCK FU FU50J,50K,50M	00/1~	Rear Suspension TRUNION
03905 4838	MH034151	52 x 65 x 9	FUSO TRUCK FU FU577 XEC. UY2#	96/4~00/	Transmission FRONT
03905 8357	MH034151	52 x 65 x 9	FUSO TRUCK FU FU519 NY,PY	96/4~00/	Transmission FRONT
03905 1421	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU477 LTS1,NS1,PS1,SS1,TGS1, TS1,US1	95/4~96/	Final Drive PINION
03905 6959	MH034065	70 x 100 x 13	FUSO TRUCK FU FU4#,5#	89/11~	Propeller Shaft CENTER BEARING
03905 2042	MH034233	57 x 70 x 9	FUSO TRUCK FU FU411	91/9~99/	Transmission FRONT
03905 2894	MH034233	57 x 70 x 9	FUSO TRUCK FU FU410 EXC. NS2,PS2(91.9~95.4)	89/11~97/	Transmission FRONT
03905 8774	MH034151	52 x 65 x 9	FUSO TRUCK FU FU50M NYF1,NY1,PYF1,PY1	00/1~	Transmission FRONT
03905 8732	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU411 MZC,NC	95/4~96/	Final Drive PINION
03905 5624	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU515 EXC. JX#	96/4~00/	Final Drive PINION
03905 6239	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU577 LXT1,NXT1,PX1,UX1	96/4~00/	Final Drive PINION
03905 5117	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU50J TZX1A,LXT1	00/1~	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7361	MC095475	154 x 185 x 19	FUSO TRUCK FU FU51#	96/4~00/	Rear Suspension TRUNION
03905 5009	MH034151	52 x 65 x 9	FUSO TRUCK FU FU416 N,NQ,P,PQ,NFX,PFX	89/11~95/	Transmission FRONT
03905 2675	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU50K EXC. JXD	00/1~	Final Drive PINION
03905 5333	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU54J TZT1A	03/3~	Final Drive PINION
03905 2729	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FU FU517 NX1#,PX1#,TX1#,TZT1A	96/4~00/	Final Drive PINION
03905 8120	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU411 SC#,TC#,UC#	91/9~95/4	Final Drive PINION
03905 5678	MH034151	52 x 65 x 9	FUSO TRUCK FU FU417 MZS2,PZS2,LTS1,NS1,PS1,SS1,TS1,US1	94/11~96/	Transmission FRONT
03905 1583	MH034151	52 x 65 x 9	FUSO TRUCK FU FU418,478 EXC.SS2,TS2,US2(89.11~)	83/6~95/	Transmission FRONT
03905 7088	MH034151	52 x 65 x 9	FUSO TRUCK FU FU517 EXC. SY2#,TX2#,TY2#,TZ2#,UZ2#	96/4~00/	Transmission FRONT
03905 4841	MH034151	52 x 65 x 9	FUSO TRUCK FU FU515	96/4~00/	Transmission FRONT
03905 6872	MH034151	52 x 65 x 9	FUSO TRUCK FU FU477 EXC. SS2,TS2,US2	95/4~96/	Transmission FRONT
03905 4616	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU415 JD,JM	89/11~96/	Final Drive PINION
03905 8390	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FU FU410 NS2,PS2,SS1,2,TS1,2,US1,2	89/11~95/4	Final Drive PINION
03905 2057	MH034151	52 x 65 x 9	FUSO TRUCK FU FU419 EXC.S,SQ,T,TQ,U,UQ,SZ,YZ(89.11~)	85/9~96/	Transmission FRONT
03905 4697	31212-33300	135 x 155.5 x 15	FUSO TRUCK FW, FX 10M20 FW464	90/8~95/7	Engine CRANK SHAFT REAR
03905 6176	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FW, FX 8DC11 FW419	95/9~	Engine CRANK SHAFT REAR
03905 7193	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FW, FX 8DC9 FW455,LRS2	95/7~99/	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 9008	31212-33300	135 x 155.5 x 15	FUSO TRUCK FW, FX 8DC11 FW419	87/7~95/8	Engine CRANK SHAFT REAR
03905 7880	31212-33300	135 x 155.5 x 15	FUSO TRUCK FW, FX 8DC111FW429,449,529	86/11~97/8	Engine CRANK SHAFT REAR
03905 8684	31212-33300	135 x 155.5 x 15	FUSO TRUCK FW, FX 8M20 FW451	93/9~97/8	Engine CRANK SHAFT REAR
03905 7385	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FW, FX 8M22 FX50L	00/7~	Engine CRANK SHAFT REAR
03905 6164	31212-33300	135 x 155.5 x 15	FUSO TRUCK FW, FX 10M20 FW444	90/6~97/8	Engine CRANK SHAFT REAR
03905 8099	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FW, FX 8DC9 FW455,MS2	95/12~00/	Engine CRANK SHAFT REAR
03905 7052	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FW, FX 8DC11 FW529,NY62	97/3~00/3	Engine CRANK SHAFT REAR
03905 7394	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FW, FX 8M21 FW422,522,50M	94/9~	Engine CRANK SHAFT REAR
03905 2405	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FW, FX 10M20 FW464	95/8~00/	Engine CRANK SHAFT REAR
03905 3491	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FW, FX 8DC11 FW429,529	97/8~	Engine CRANK SHAFT REAR
03905 6617	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FW, FX 8M21 FX50M	00/6~	Engine CRANK SHAFT REAR
03905 3398	ME152593	132 x 179.5 x 23 x 33	FUSO TRUCK FW, FX 8DC11 FW449	97/8~	Engine CRANK SHAFT REAR
03905 5189	31212-33300	135 x 155.5 x 15	FUSO TRUCK FW, FX 8DC9 FW455,LRS2	87/9~95/6	Engine CRANK SHAFT REAR
03905 2099	MH034155	75 x 100 x 13	FUSO TRUCK FW, FX FX50M EXC. LR2,LR3,LR29#	00/6~	Transmission REAR
03905 7715	ME152593	132 x 179.5 x 23 x 33	FUSO TRUCK FW, FX 10M20 FW444	97/8~	Engine CRANK SHAFT REAR
03905 8141	ME061574		FUSO TRUCK FW, FX 8DC#,10M20	86/11~	Engine VALVE STEM SEAL
03905 2870	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FW, FX 8M20 FW451	97/8~00/	Engine CRANK SHAFT REAR
03905 5357	MH034102	85 x 110 x 13	FUSO TRUCK FW, FX FW455	87/9~91/9	Transmission REAR
03905 5054	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FX50M LR2#,LR3#	00/6~	Wheel Hub FRONT
03905 4955	ME120154		FUSO TRUCK FW, FX 8M2#	93/9~	Engine VALVE STEM SEAL
03905 6698	MH034233	57 x 70 x 9	FUSO TRUCK FW, FX FW50M	00/3~	Transmission FRONT
03905 5129	MH034233	57 x 70 x 9	FUSO TRUCK FW, FX FX50L,50M	00/6~	Transmission FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2300	MH034155	75 x 100 x 13	FUSO TRUCK FW, FX FW419,445,449	87/7~	Transmission REAR
03905 5780	MH034155	75 x 100 x 13	FUSO TRUCK FW, FX FW50M NZ185	03/3~	Transmission REAR
03905 7127	MH034157	80 x 105 x 13	FUSO TRUCK FW, FX FW444,451	90/6~	Transmission REAR
03905 3752	MH034157	80 x 105 x 13	FUSO TRUCK FW, FX FX50M LR2,LR3,LR29#	00/10~	Transmission REAR
03905 8093	MH034157	80 x 105 x 13	FUSO TRUCK FW, FX FX50L	00/7~	Transmission REAR
03905 3041	MH034157	80 x 105 x 13	FUSO TRUCK FW, FX FW455	91/10~00/	Transmission REAR
03905 6407	MH034072	70 x 92 x 14	FUSO TRUCK FW, FX FW50M EXC. NZ185	00/3~	Transmission REAR
03905 5711	31212-33300	135 x 155.5 x 15	FUSO TRUCK FW, FX 8DC9 FW455,MS2	87/9~95/11	Engine CRANK SHAFT REAR
03905 5039	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FW, FX FW419,422,429,444,445,449,451,455	86/11~	Final Drive PINION
03905 7100	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FW, FX FW464	90/8~95/7	Final Drive PINION
03905 4571	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FW, FX FW522,529	97/3~01/	Final Drive PINION
03905 7409	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FW, FX FW50M,FX50M	00/3~	Final Drive PINION
03905 1019	MC827475	70 x 142 x 12 x 36	FUSO TRUCK FW, FX FX50L MYP2,LR	00/9~	Final Drive PINION
03905 2816	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FW, FX FW464	95/8~99/	Final Drive PINION
03905 3761	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK FW, FX FX50L LR1M	00/7~	Final Drive PINION
03905 2480	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FW, FX FW4#,#,FX5#	86/11~	Engine TIMING GEAR CASE
03905 5336	31212-33300	135 x 155.5 x 15	FUSO TRUCK FW, FX 8DC9 FW445	87/3~95/	Engine CRANK SHAFT REAR
03905 4715	MH034072	70 x 92 x 14	FUSO TRUCK FW, FX FW429,529	86/11~01/	Transmission REAR
03905 7904	MC823532	153 x 173 x 7.5 x 10.5	FUSO TRUCK FW, FX FW419	87/7~	Wheel Hub FRONT
03905 1787	MC823532	153 x 173 x 7.5 x 10.5	FUSO TRUCK FW, FX FW455 MS2	87/9~00/	Wheel Hub FRONT
03905 5519	MC818294	180 x 210 x 16	FUSO TRUCK FW, FX FW50M NZ#	00/3~	Wheel Hub FRONT
03905 3533	MC818294	180 x 210 x 16	FUSO TRUCK FW, FX FW529 NZ#	97/3~01/	Wheel Hub FRONT
03905 7520	MC818294	180 x 210 x 16	FUSO TRUCK FW, FX FW522	97/3~01/	Wheel Hub FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7997	MC818294	180 x 210 x 16	FUSO TRUCK FW, FX FW429 NZJ05,06,16,18	95/4~	Wheel Hub FRONT
03905 7748	MC818294	180 x 210 x 16	FUSO TRUCK FW, FX FW422	94/9~	Wheel Hub FRONT
03905 7817	06015-13400	184 x 215 x 18	FUSO TRUCK FW, FX FW444,445,449	90/6~	Wheel Hub FRONT
03905 4463	MC823532	153 x 173 x 7.5 x 10.5	FUSO TRUCK FW, FX FX50M LR1#,LR1,MY#	00/6~	Wheel Hub FRONT
03905 3824	MC807438	154 x 172 x 14	FUSO TRUCK FW, FX FX50L LR1,LR2	00/7~	Wheel Hub REAR INNER (F & R)
03905 7004	MH034233	57 x 70 x 9	FUSO TRUCK FW, FX FW455	91/10~00/	Transmission FRONT
03905 4445	MC807438	154 x 172 x 14	FUSO TRUCK FW, FX FX50M LR2#,LR3#	00/6~	Wheel Hub REAR INNER (F & R)
03905 8447	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FX50L LR1,LR2	00/7~	Wheel Hub FRONT
03905 6701	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FW50M	00/3~	Wheel Hub FRONT
03905 7343	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FW529 NY#	97/3~01/	Wheel Hub FRONT
03905 5270	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FW464	90/8~00/	Wheel Hub FRONT
03905 4973	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FW455 LR#	87/9~00/	Wheel Hub FRONT
03905 7757	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FW451	93/9~00/	Wheel Hub FRONT
03905 3815	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FW429 EXC. NJ05,06,16,18	95/4~	Wheel Hub FRONT
03905 3563	03434-09300	150 x 174 x 14	FUSO TRUCK FW, FX FW429 ALL	86/11~95/ 3	Wheel Hub FRONT
03905 7622	MC823532	153 x 173 x 7.5 x 10.5	FUSO TRUCK FW, FX FX50L MYP2	00/7~	Wheel Hub FRONT
03905 7523	MH034135	65 x 77 x 12	FUSO TRUCK FW, FX FW50L LR1	00/7~	Wheel Hub REAR OUTER (F & R)
03905 6752	MH034151	52 x 65 x 9	FUSO TRUCK FW, FX FW529	97/3~01/	Transmission FRONT
03905 4889	MH034151	52 x 65 x 9	FUSO TRUCK FW, FX FW455	87/9~91/9	Transmission FRONT
03905 4775	MH034151	52 x 65 x 9	FUSO TRUCK FW, FX FW419,429,445,449	86/11~	Transmission FRONT
03905 8171	12857-16700	165 x 195 x 19	FUSO TRUCK FW, FX FX50L,50M	00/6~	Rear Suspension TRUNNION
03905 2564	12857-16700	165 x 195 x 19	FUSO TRUCK FW, FX FW4#,5#	86/11~	Rear Suspension TRUNNION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1727	MC807121	160 x 182 x 10	FUSO TRUCK FW, FX FX50M LR1#,LX1,MY#	00/6~	Wheel Hub REAR OUTER (F & R)
03905 7634	MC807121	160 x 182 x 10	FUSO TRUCK FW, FX FX50L MYP22	00/7~	Wheel Hub REAR OUTER (F & R)
03905 5612	MC807121	160 x 182 x 10	FUSO TRUCK FW, FX FW455 MS2	87/9~00/	Wheel Hub REAR OUTER (F & R)
03905 1334	MC807438	154 x 172 x 14	FUSO TRUCK FW, FX FW422,429,451,455(LR#), 464,522,529,50M	86/11~	Wheel Hub REAR INNER (F & R)
03905 3347	MT141132	50 x 65 x 9	FUSO TRUCK FW, FX FW444,445,449	87/3~	Wheel Hub REAR OUTER (F & R)
03905 1094	MH034233	57 x 70 x 9	FUSO TRUCK FW, FX FW444,451	90/6~	Transmission FRONT
03905 3770	MH034135	65 x 77 x 12	FUSO TRUCK FW, FX FW464	90/8~00/	Wheel Hub REAR OUTER (F & R)
03905 1355	MH034134	60 x 72 x 12	FUSO TRUCK FW, FX FX50M LR2#,LR3#	00/6~	Wheel Hub REAR OUTER (F & R)
03905 1172	MH034134	60 x 72 x 12	FUSO TRUCK FW, FX FX50L LR2	00/7~	Wheel Hub REAR OUTER (F & R)
03905 4013	MH034134	60 x 72 x 12	FUSO TRUCK FW, FX FW422,429,451,455(LR#), 522,529,50M	86/11~	Wheel Hub REAR OUTER (F & R)
03905 2738	MC807121	160 x 182 x 10	FUSO TRUCK FW, FX FX50M LR1#,LX1#,MY#	00/8~	Wheel Hub REAR INNER (F & R)
03905 2942	MC807121	160 x 182 x 10	FUSO TRUCK FW, FX FX50L MYP2	00/7~	Wheel Hub REAR INNER (F & R)
03905 4406	MC807121	160 x 182 x 10	FUSO TRUCK FW, FX FW455 MS2	00/3~	Wheel Hub REAR INNER (F & R)
03905 8972	MC807121	160 x 182 x 10	FUSO TRUCK FW, FX FW419	87/7~	Wheel Hub REAR INNER (F & R)
03905 8402	16421-02101	184 x 210 x 15	FUSO TRUCK FW, FX FW444,445,449	87/3~	Wheel Hub REAR INNER (F & R)
03905 6479	MC807121	160 x 182 x 10	FUSO TRUCK FW, FX FW419	87/7~	Wheel Hub REAR OUTER (F & R)
03905 5645	MH034233	57 x 70 x 9	FUSO TRUCK FY FY50J RY2,TX1,TX157,TY2	00/1~	Transmission FRONT
03905 8000	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FY 8M21 FY50M	00/1~	Engine TIMING GEAR CASE
03905 2288	MH034233	57 x 70 x 9	FUSO TRUCK FY FY517 TY2	96/4~00/	Transmission FRONT
03905 8639	MH034234	83 x 105 x 13	FUSO TRUCK FY FY54J	00/1~	Transmission REAR
03905 4355	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FY FY5#...EXC. 50J	96/4~	Final Drive PINION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6911	MH034172	65 x 113 x 10 x 30	FUSO TRUCK FY FY50J NX1,RY2,TX1,TY2	00/1~	Final Drive PINION
03905 5594	MH034178	70 x 122 x 12 x 30	FUSO TRUCK FY FY50J TX157	00/1~03/	Final Drive PINION
03905 1121	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FY 8DC9 FY515	98/4~00/	Engine TIMING GEAR CASE
03905 3551	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FY 8DC11 FY519,50K	96/4~	Engine TIMING GEAR CASE
03905 5210	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FY 6D24 FY517	96/4~00/	Engine TIMING GEAR CASE
03905 7175	MH034234	83 x 105 x 13	FUSO TRUCK FY FY50J TX1,TX157,TY2	00/1~	Transmission REAR
03905 5438	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FY 6M70 FY50J,54J	00/1~	Engine TIMING GEAR CASE
03905 3362	MH034234	83 x 105 x 13	FUSO TRUCK FY FY519 TY	96/4~00/	Transmission REAR
03905 3011	31212-33300	135 x 155.5 x 15	FUSO TRUCK FY 6D24,6D40	96/4~97/8	Engine CRANK SHAFT REAR
03905 3890	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FY 6D24,6D40	97/8~00/	Engine CRANK SHAFT REAR
03905 5615	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FY 8DC9	98/4~00/	Engine CRANK SHAFT REAR
03905 7550	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FY 8DC11 FY519,JXM(FLYWHEEL PTO)	96/4~00/	Engine CRANK SHAFT REAR
03905 5474	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FY 8DC11 FY50K	00/1~	Engine CRANK SHAFT REAR
03905 2378	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK FY 6M70,8M21	00/1~	Engine CRANK SHAFT REAR
03905 4949	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK FY 8DC11 FY519,NY,NYK,RY,TY	96/4~00/	Engine CRANK SHAFT REAR
03905 5807	ME061574		FUSO TRUCK FY 8DC9,8DC11,6D24	96/4~	Engine VALVE STEM SEAL
03905 3494	ME120154		FUSO TRUCK FY 6D40,6M70,8M21	96/4~	Engine VALVE STEM SEAL
03905 2114	ME030124	95 x 125 x 13.5 x 21.5	FUSO TRUCK FY 6D40 FY510	96/4~00/	Engine TIMING GEAR CASE
03905 1052	MH034233	57 x 70 x 9	FUSO TRUCK FY FY519 TY	96/4~00/	Transmission FRONT
03905 6425	MH034092	130 x 150 x 14	FUSO TRUCK FY FY5#	96/4~	Wheel Hub REAR INNER
03905 3056	MH034175	130 x 146 x 14	FUSO TRUCK FY FY5#	98/4~	Wheel Hub REAR INNER
03905 1952	MH034193	57 x 124 x 14.5 x 27	FUSO TRUCK FY FY5#	96/4~	Wheel Hub REAR OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2069	MH034151	52 x 65 x 9	FUSO TRUCK FY FY515	98/4~00/	Transmission FRONT
03905 4145	MH034151	52 x 65 x 9	FUSO TRUCK FY FY517 NX1,TX1	96/4~00/	Transmission FRONT
03905 8801	MH034151	52 x 65 x 9	FUSO TRUCK FY FY519 JXM,NY,NYK,RY	96/4~00/	Transmission FRONT
03905 5219	MH034151	52 x 65 x 9	FUSO TRUCK FY FY50J NX1	00/1~	Transmission FRONT
03905 6413	MH034151	52 x 65 x 9	FUSO TRUCK FY FY50K	00/1~	Transmission FRONT
03905 8516	MH034234	83 x 105 x 13	FUSO TRUCK FY FY50M TY1	00/1~	Transmission REAR
03905 8819	MH034233	57 x 70 x 9	FUSO TRUCK FY FY510	96/4~00/	Transmission FRONT
03905 4739	MH034180	139 x 158 x 11	FUSO TRUCK FY FY5#	96/4~	Wheel Hub FRONT
03905 5453	MH034233	57 x 70 x 9	FUSO TRUCK FY FY50M NY132,TY1	00/1~	Transmission FRONT
03905 3530	MH034233	57 x 70 x 9	FUSO TRUCK FY FY54J	00/1~	Transmission FRONT
03905 7697	MH034153	70 x 92 x 12	FUSO TRUCK FY FY515	98/4~00/	Transmission REAR
03905 7856	MH034153	70 x 92 x 12	FUSO TRUCK FY FY50K	00/1~	Transmission REAR
03905 1154	MH034155	75 x 100 x 13	FUSO TRUCK FY FY517 NX1,TX1	96/4~00/	Transmission REAR
03905 6101	MH034155	75 x 100 x 13	FUSO TRUCK FY FY519 JXM,NY,NYK,RY	96/4~00/	Transmission REAR
03905 2960	MH034155	75 x 100 x 13	FUSO TRUCK FY FY50J NX1,RY2	00/1~	Transmission REAR
03905 2588	MH034155	75 x 100 x 13	FUSO TRUCK FY FY50M NY1,NY132,RY1	00/1~	Transmission REAR
03905 5195	MH034234	83 x 105 x 13	FUSO TRUCK FY FY510	96/4~00/	Transmission REAR
03905 6620	MH034234	83 x 105 x 13	FUSO TRUCK FY FY517 TY2	96/4~00/	Transmission REAR
03905 5981	MH034151	52 x 65 x 9	FUSO TRUCK FY FY50M NY1,RY1	00/1~	Transmission FRONT
03905 2426	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV414 JRK	90/2~90/10	Final Drive PINION REARWARD
03905 6113	31212-33300	135 x 155.5 x 15	FUSO TRUCK TRACTOR FV 8DC9 EXC. FV415,JRS2#(95.2-)	83/6~96/	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6557	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV410,411,413,416,419,439	90/2~99/	Final Drive PINION REARWARD
03905 4487	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 8DC11 FV419,439,509,519,50K	85/9~	Engine TIMING GEAR CASE
03905 3248	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 10DC11 FV414	89/3~96/	Engine TIMING GEAR CASE
03905 7253	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 6D22 FV418	85/9~90/	Engine TIMING GEAR CASE
03905 6767	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 6D40 FV410,500,510,540	94/11~00/	Engine TIMING GEAR CASE
03905 3275	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 8M20 FV411,501,511	91/9~00/	Engine TIMING GEAR CASE
03905 8699	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 8M21 FV412,502,512,50M	94/11~	Engine TIMING GEAR CASE
03905 7832	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 8M22 FV513,50L	96/7~	Engine TIMING GEAR CASE
03905 3509	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 10M20 FV424,514	95/2~00/	Engine TIMING GEAR CASE
03905 4682	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 10M21 FV50N	00/1~	Engine TIMING GEAR CASE
03905 1769	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 6M70 FV50J,54J	00/1~	Engine TIMING GEAR CASE
03905 2147	31112-05701	130 x 160 x 14	FUSO TRUCK TRACTOR FV 8DC#	74/~79/	Engine CRANK SHAFT REAR
03905 2777	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 8DC9 FV415,505,515	85/9~00/	Engine TIMING GEAR CASE
03905 6206	31212-33300	135 x 155.5 x 15	FUSO TRUCK TRACTOR FV 8DC#,6D2#	79/10~96/	Engine CRANK SHAFT REAR
03905 6503	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 8DC8 FV413	85/9~95/	Engine TIMING GEAR CASE

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7619	31212-33300	135 x 155.5 x 15	FUSO TRUCK TRACTOR FV 8DC11 EXC. FV419,PZ,RZ,TZ(94.11-)	85/9~95/4	Engine CRANK SHAFT REAR
03905 5570	31212-33300	135 x 155.5 x 15	FUSO TRUCK TRACTOR FV 10DC11	89/3~97/8	Engine CRANK SHAFT REAR
03905 4397	31212-33300	135 x 155.5 x 15	FUSO TRUCK TRACTOR FV 8M20,8M21,8M22	91/9~97/8	Engine CRANK SHAFT REAR
03905 3710	31212-33300	135 x 155.5 x 15	FUSO TRUCK TRACTOR FV 6D40	94/11~97/ 8	Engine CRANK SHAFT REAR
03905 8900	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK TRACTOR FV 8DC9 FV415,JRS2#	95/2~96/	Engine CRANK SHAFT REAR
03905 8990	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK TRACTOR FV 8DC11 EXC. FV419,PZ,RZ,TZ	95/4~96/	Engine CRANK SHAFT REAR
03905 6845	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK TRACTOR FV 8DC11 FV419,PZ,RZ,TZ	94/11~96/	Engine CRANK SHAFT REAR
03905 8633	ME093335	132 x 171.5 x 13.5 x 22	FUSO TRUCK TRACTOR FV 8DC9,11 T/M PTO	96/4~	Engine CRANK SHAFT REAR
03905 3560	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK TRACTOR FV 8DC9,11 FLY WHEEL PTO	96/4~	Engine CRANK SHAFT REAR
03905 3614	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK TRACTOR FV 8M20,8M21,8M22,10M20 ,10M21,6D40	97/8~	Engine CRANK SHAFT REAR
03905 5681	ME152584	132 x 179.5 x 12.5 x 22	FUSO TRUCK TRACTOR FV 6M70	00/1~	Engine CRANK SHAFT REAR
03905 8366	ME061574		FUSO TRUCK TRACTOR FV 8DV#,6D2#	79/10~	Engine VALVE STEM SEAL
03905 6917	ME120154		FUSO TRUCK TRACTOR FV 8M20,21,22,10M20,21,6D 40,6M70	91/9~	Engine VALVE STEM SEAL
03905 4427	31112-05701	130 x 160 x 14	FUSO TRUCK TRACTOR FV 6D2#	76/~79/	Engine CRANK SHAFT REAR
03905 5783	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV424	95/2~97/	Final Drive PINION REARWARD
03905 4664	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV412 EXC. JRH,JRK,JRN	94/11~96/	Final Drive PINION REARWARD

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1079	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV50J JX#	00/1~	Wheel Hub FRONT
03905 4475	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV415 EXC. JRS2H,JRS2K#,JRS2N	90/2~96/	Final Drive PINION REARWARD
03905 6131	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV500,501,502,509,510,5 11,519	96/4~00/	Final Drive PINION REARWARD
03905 8882	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV505 JXD(A),JXM(A),MYD(A) ,MYM(A)	98/4~00/	Final Drive PINION REARWARD
03905 2021	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV512 EXC. HRH,HRK	96/4~99/	Final Drive PINION REARWARD
03905 1949	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV515 JX(A),JXD,JXM(A),MYA ,MYD,MYM(A)	96/4~00/	Final Drive PINION REARWARD
03905 2858	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV50J JXD#(EXC.JXD1LA,NA), JXM#,MYD#,MYM#	00/1~	Final Drive PINION REARWARD
03905 2975	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV50K EXC. JXDLA,JXDNA	00/1~	Final Drive PINION REARWARD
03905 7526	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV50L PYP2,PYP2M	00/2~	Final Drive PINION REARWARD
03905 4988	MC827475	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV54J UZ353	00/1~03/3	Final Drive PINION REARWARD
03905 1658	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV412 JRH,JRK,JRN	95/2~96/	Final Drive PINION REARWARD
03905 6347	ME060124	95 x 125 x 13.5 x 21.5	FUSO TRUCK TRACTOR FV 8DC10 FV416	85/9~96/	Engine TIMING GEAR CASE
03905 2303	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV415 JRS2H,JRS2K#,JRS2N	90/10~96/	Final Drive PINION REARWARD
03905 2054	12020-59600	70 x 142 x 12 x 36	FUSO TRUCK TRACTOR FV FV4#	83/7~90/2	Final Drive PINION REARWARD
03905 3413	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV512 HRH,HRK	96/7~00/	Final Drive PINION REARWARD

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4547	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV513,514,540	96/7~00/	Final Drive PINION REARWARD
03905 5348	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV515 HR2H,HR2K,HR2N	96/4~00/	Final Drive PINION REARWARD
03905 2210	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV50J TZ3S,TZ4,UZ3#,UZ4#	00/1~	Final Drive PINION REARWARD
03905 8207	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV50L HR1#,HR2#	00/2~	Final Drive PINION REARWARD
03905 6059	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV50M,50N	00/2~	Final Drive PINION REARWARD
03905 5324	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV54J EXC. UZ353	00/1~	Final Drive PINION REARWARD
03905 2015	MH034178	70 x 122 x 12 x 30	FUSO TRUCK TRACTOR FV FV505 JXA,JXA5E	98/4~00/	Final Drive PINION REARWARD
03905 8270	MH034178	70 x 122 x 12 x 30	FUSO TRUCK TRACTOR FV FV50J JXD1LA,JXD1NA	00/1~03/3	Final Drive PINION REARWARD
03905 7838	MH034178	70 x 122 x 12 x 30	FUSO TRUCK TRACTOR FV FV50K JXDLA,JXDNA	00/1~03/3	Final Drive PINION REARWARD
03905 5924	31107-06301	85 x 110 x 13	FUSO TRUCK TRACTOR FV 8DC#	74/~83/	Engine TIMING GEAR CASE
03905 8081	ME061853	95 x 120 x 13	FUSO TRUCK TRACTOR FV 8DC8,9,10 FV413,415,416	83/6~85/8	Engine TIMING GEAR CASE
03905 8984	ME061853	95 x 120 x 13	FUSO TRUCK TRACTOR FV 6D2#	79/~85/8	Engine TIMING GEAR CASE
03905 3206	MH034131	80 x 162 x 12 x 41.5	FUSO TRUCK TRACTOR FV FV414 JRK,JRKQ	90/10~95/	Final Drive PINION REARWARD
03905 8411	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV415 HRS#,JDS,JDSQ,PPS,PPS M	83/6~90/	Transmission REAR
03905 6785	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV415 JRS2#	88/9~96/	Transmission FRONT
03905 7028	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV505	98/4~00/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3758	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV515 EXC. HR2H,HR2K,HR2N	96/4~00/	Transmission REAR
03905 4286	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV50K HXMS,JXM,JXMA,MYM ,MYMA	00/1~	Transmission REAR
03905 1085	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV215	80/3~83/	Transmission REAR
03905 7871	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV315 HR	79/10~83/	Transmission REAR
03905 3122	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV413,418	83/6~95/	Transmission REAR
03905 5702	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV412 EXC. PPM,JRH,JRK,JRN	95/2~96/	Transmission REAR
03905 4661	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV313,315,318 EXC. HR	79/10~83/	Transmission REAR
03905 8837	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV416	83/6~95/	Transmission REAR
03905 8726	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV419 EXC. PPM,HRH,HRK#(90.9~91 .8)	85/9~99/	Transmission REAR
03905 5672	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV439	91/9~94/	Transmission REAR
03905 6605	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV501,509 EXC. UZ5C	98/4~00/	Transmission REAR
03905 1814	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV502 EXC. PYPM	98/4~00/	Transmission REAR
03905 3233	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV512 EXC. HRH,HRK,PYPM	96/7~00/	Transmission REAR
03905 2156	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV411 EXC. PPM,HRC#,HRH,HRK	91/9~96/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6539	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV50L,50M,50N,54J	00/1~	Transmission FRONT
03905 2723	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV512,513,514,515,540 HR#	98/4~00/	Wheel Hub FRONT
03905 7583	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV419 PPM	90/9~91/8	Transmission FRONT
03905 4586	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV419 HRH,HRK#	90/10~91/ 8	Transmission FRONT
03905 7247	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV500,501,502,512,514,5 40	96/4~00/	Transmission FRONT
03905 3518	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV509 UZ5C	98/4~00/	Transmission FRONT
03905 7001	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV515 HR2#	96/7~00/	Transmission FRONT
03905 5384	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV415 JD,JDQ,JM,P,PQ,R,RQ,T, TQ	83/6~96/	Transmission REAR
03905 2984	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV50J EXC.JXD#,JXM1	00/1~	Transmission FRONT
03905 1547	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV50K TZS,HXDS,JXD#,MYD	00/1~	Transmission REAR
03905 8924	ME677501	55 x 75 x 8	FUSO TRUCK TRACTOR FV FV513	96/7~00/	Transmission FRONT
03905 7538	ME655359	97 x 110 x 4.5	FUSO TRUCK TRACTOR FV FV4#,5#	83/6~	Transmission MAIN SHAFT
03905 2645	44514-46681	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV102,103,112,113 HRA	74/~79/	Transmission REAR
03905 2630	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV102,103 EXC. Q,S	74/~74/12	Transmission REAR
03905 7889	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV112	74/~79/	Transmission REAR
03905 3986	MH034153	70 x 92 x 12	FUSO TRUCK TRACTOR FV FV113 EXC. J,JD,JM,N,Q	74/~79/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7685	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV519 UZA5C,UZ5C	96/4~99/	Transmission FRONT
03905 1784	MH034065	70 x 100 x 13	FUSO TRUCK TRACTOR FV FV112,113,315	78/6~83/	Propeller Shaft CENTER BEARING
03905 2345	MH034234	83 x 105 x 13	FUSO TRUCK TRACTOR FV FV519 UZA5C,UZ5C	96/4~99/	Transmission REAR
03905 4862	MH034234	83 x 105 x 13	FUSO TRUCK TRACTOR FV FV50J TZ3S,TZ4,UZ3#,UZ4#	00/1~	Transmission REAR
03905 2006	MH034234	83 x 105 x 13	FUSO TRUCK TRACTOR FV FV54J EXC. UZS353	00/1~	Transmission REAR
03905 2507	ME515135	105 x 130 x 12	FUSO TRUCK TRACTOR FV FV513	96/7~00/	Transmission REAR
03905 8612	ME515135	105 x 130 x 12	FUSO TRUCK TRACTOR FV FV514 HRK,HRKQ,HRN	96/7~00/	Transmission REAR
03905 5051	MH034245	115 x 145 x 13	FUSO TRUCK TRACTOR FV FV50L HRK#,HR1N#	00/2~	Transmission REAR
03905 1595	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV519 EXC. UZA5C,UZ5C	96/4~00/	Transmission REAR
03905 5654	03437-07052	70 x 90 x 10	FUSO TRUCK TRACTOR FV FV102,103,112,113	74/~78/5	Propeller Shaft CENTER BEARING
03905 3482	MH034234	83 x 105 x 13	FUSO TRUCK TRACTOR FV FV410	94/11~97/	Transmission REAR
03905 1919	MH034065	70 x 100 x 13	FUSO TRUCK TRACTOR FV FV4#	83/7~89/1 0	Propeller Shaft CENTER BEARING
03905 3935	MH034065	70 x 100 x 13	FUSO TRUCK TRACTOR FV FV4#,5#	89/11~	Propeller Shaft CENTER BEARING
03905 1043	MC833624	80 x 100 x 13	FUSO TRUCK TRACTOR FV FV4#,5#	89/11~	Propeller Shaft CENTER BEARING
03905 4391	MH034119	84 x 110 x 13	FUSO TRUCK TRACTOR FV FV4#,5#	94/11~	Propeller Shaft CENTER BEARING
03905 3785	03434-07051	70 x 92 x 13.5 x 20,5	FUSO TRUCK TRACTOR FV FV#	74/~76/9	Final Drive PINION REARWARD
03905 3215	12020-39600	70 x 132 x 12 x 30	FUSO TRUCK TRACTOR FV FV1#,2#,3#	76/9~83/	Final Drive PINION REARWARD
03905 3446	MH034245	115 x 145 x 13	FUSO TRUCK TRACTOR FV FV50N	00/1~	Transmission REAR
03905 8609	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV512 HRH,HRK,PYPM	96/7~00/	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3938	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV411 EXC. TZC21	91/9~99/	Transmission FRONT
03905 6986	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV50L PYP2	00/2~	Transmission REAR
03905 8690	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV411 PPM,HRK#,HRH,HRK	91/9~96/	Transmission REAR
03905 7400	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV412 PPM,JRH,JRK,JRN	95/2~96/	Transmission REAR
03905 5015	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV414,424	89/3~95/	Transmission REAR
03905 8531	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV415 JRS2#	88/9~96/	Transmission REAR
03905 8456	MH034234	83 x 105 x 13	FUSO TRUCK TRACTOR FV FV501,509 UZ5C	98/4~00/	Transmission REAR
03905 7418	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV502 PYPM	98/4~00/	Transmission REAR
03905 1436	MH034234	83 x 105 x 13	FUSO TRUCK TRACTOR FV FV500,540	98/4~00/	Transmission REAR
03905 7463	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV514 HRKQ52,HRK52,HRN52	96/7~00/	Transmission REAR
03905 7121	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV515 HR2H,HR2K,HR2N	96/7~00/	Transmission REAR
03905 6173	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV50L HR2H,HR2K,HR2N,PYP2 M	00/2~	Transmission REAR
03905 7286	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV50M	00/1~	Transmission REAR
03905 7250	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV54J UZ353	00/1~	Transmission REAR
03905 4799	MH034102	85 x 110 x 13	FUSO TRUCK TRACTOR FV FV415 JRS2H,JPS2K	85/9~88/8	Transmission REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2717	MH034155	75 x 100 x 13	FUSO TRUCK TRACTOR FV FV50J JXD#,JXM#,MYM#,MYD #,PY4,SY4	00/1~	Transmission REAR
03905 8651	MH034157	80 x 105 x 13	FUSO TRUCK TRACTOR FV FV419 PPM,HRH,HRK#	90/9~91/8	Transmission REAR
03905 7571	MH034082	155 x 180 x 17	FUSO TRUCK TRACTOR FV FV1#,2#,3#	74/~83/	Wheel Hub REAR INNER (F & R)
03905 7994	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV415 HRS7#	90/10~95/	Transmission FRONT
03905 6437	MH034180	139 x 158 x 11	FUSO TRUCK TRACTOR FV FV510,511,512,515,519 MY#,PY#,SY#,TZ#,UZ#	98/4~00/	Wheel Hub FRONT
03905 6266	MH034180	139 x 158 x 11	FUSO TRUCK TRACTOR FV FV50J,50K,50L,50M,54J MY#,PY#,SY#,TZ#,UZ#	00/1~	Wheel Hub FRONT
03905 6020	MH034089	134 x 152 x 11	FUSO TRUCK TRACTOR FV FV412 EXCEPT JRN	94/11~97/	Wheel Hub FRONT
03905 5819	MH034089	134 x 152 x 11	FUSO TRUCK TRACTOR FV FV415 JRS2N	89/11~97/	Wheel Hub FRONT
03905 8582	MH034089	134 x 152 x 11	FUSO TRUCK TRACTOR FV FV424 JRS2N	95/2~97/	Wheel Hub FRONT
03905 4604	MH034180	139 x 158 x 11	FUSO TRUCK TRACTOR FV FV500	98/4~00/	Wheel Hub FRONT
03905 5450	06015-13400	184 x 215 x 18	FUSO TRUCK TRACTOR FV FV50M NW1,JP3W	00/1~	Wheel Hub FRONT
03905 7505	MH034180	139 x 158 x 11	FUSO TRUCK TRACTOR FV FV419 TZ#	89/11~99/	Wheel Hub FRONT
03905 3833	MC807438	154 x 172 x 14	FUSO TRUCK TRACTOR FV FV4#	83/7~	Wheel Hub REAR INNER (F & R)
03905 8840	MH034084	160 x 182 x 17	FUSO TRUCK TRACTOR FV FV439	91/9~94/	Wheel Hub REAR INNER (F & R)
03905 3749	16421-02101	184 x 210 x 15	FUSO TRUCK TRACTOR FV FV50M JR3W	00/1~	Wheel Hub REAR INNER (F & R)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 8018	MH034134	60 x 72 x 12	FUSO TRUCK TRACTOR FV FV1#,2#,3#	74/~83/	Wheel Hub REAR OUTER (F & R)
03905 7274	MH034134	60 x 72 x 12	FUSO TRUCK TRACTOR FV FV4#...EXC.412(JR#),414, 415(JRS2#),424,439	83/6~97/	Wheel Hub REAR OUTER (F & R)
03905 1592	MH034134	60 x 72 x 12	FUSO TRUCK TRACTOR FV FV5#...EXC.512,513,514, 515 HR#	96/4~00/	Wheel Hub REAR OUTER (F & R)
03905 8762	MH034089	134 x 152 x 11	FUSO TRUCK TRACTOR FV FV439	91/9~94/	Wheel Hub FRONT
03905 8528	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV509 JX#,PX#,SX#,UX#	98/4~00/	Wheel Hub FRONT
03905 5369	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV410 TS#	94/11~97/	Wheel Hub FRONT
03905 5495	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV411 EXCEPT TZ#	94/11~99/	Wheel Hub FRONT
03905 1805	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV412 EXCEPT TZ#,JRN	94/11~97/	Wheel Hub FRONT
03905 4358	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV413,414,416 ALL	89/11~96/	Wheel Hub FRONT
03905 2594	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV415 EXC. JRS2N	89/11~97/	Wheel Hub FRONT
03905 5261	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV419 EXC. TZ#	89/11~99/	Wheel Hub FRONT
03905 3542	MH034180	139 x 158 x 11	FUSO TRUCK TRACTOR FV FV501,502,505,509 MY#,PY#,SY#,TZ#,UZ#	98/4~00/	Wheel Hub FRONT
03905 6275	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV501,502,505,507 JX#	98/4~00/	Wheel Hub FRONT
03905 5813	MH034135	65 x 77 x 12	FUSO TRUCK TRACTOR FV FV512,513,514,515 HR#	96/4~00/	Wheel Hub REAR OUTER (F & R)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2297	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV511,512,515 JX#	98/4~00/	Wheel Hub FRONT
03905 7349	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV519 JX#,PX#,SX#,UX#	98/4~00/	Wheel Hub FRONT
03905 5363	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV50K HX#,JX#	00/1~	Wheel Hub FRONT
03905 5126	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV50L,50M,50N,54J HR#	00/1~	Wheel Hub FRONT
03905 3974	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV50M JX#,PX#,SX#,UX#	00/1~	Wheel Hub FRONT
03905 1016	MH034180	139 x 158 x 11	FUSO TRUCK TRACTOR FV FV410,411,412 TZ#	94/11~99/	Wheel Hub FRONT
03905 4496	MH034136	130 x 150 x 12	FUSO TRUCK TRACTOR FV FV424 JRS2K#	95/2~97/	Wheel Hub FRONT
03905 8579	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV505	98/4~00/	Transmission FRONT
03905 3437	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV102,103,112,113,315 HRA	74/~83/	Transmission FRONT
03905 2903	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV103 Q,S	74/1~74/1 2	Transmission FRONT
03905 2735	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV113 J,JD,JM,N,Q	74/~79/	Transmission FRONT
03905 1100	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV214,215,313,315,318	76/~83/	Transmission FRONT
03905 7391	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV413,416,418,439	83/6~96/	Transmission FRONT
03905 2333	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV411 TZC21	94/11~97/	Transmission FRONT
03905 4160	MH034134	60 x 72 x 12	FUSO TRUCK TRACTOR FV FV5#,...EXC.50L,50M,50N HR#,50M NW1,JR3W	00/1~	Wheel Hub REAR OUTER (F & R)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4259	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV419 EXC.PPM(90.0~91.8),HR H,HRK#(90.10~91.8)	85/9~99/	Transmission FRONT
03905 7607	44514-51681	45 x 60 x 9	FUSO TRUCK TRACTOR FV FV102,103(EXCEPT Q,S)	74/1~74/1 2	Transmission FRONT
03905 3587	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV509 EXC. UZ5C	98/4~00/	Transmission FRONT
03905 6659	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV515 EXC. HR2#	96/4~00/	Transmission FRONT
03905 5090	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV519 EXC. UZA5C,UZ5C	96/4~99/	Transmission FRONT
03905 7106	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV50J JXD1#,JXM1	00/1~	Transmission FRONT
03905 2822	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV50K	00/1~	Transmission FRONT
03905 1955	MH034233	57 x 70 x 9	FUSO TRUCK TRACTOR FV FV410,412,414,424	89/3~97/	Transmission FRONT
03905 7589	MH034151	52 x 65 x 9	FUSO TRUCK TRACTOR FV FV415 EXC.JRS2#(88.9-) ,HRS7#(90.10-)	83/6~97/	Transmission FRONT
03905 4493	12857-16700	165 x 195 x 19	FUSO TRUCK TRACTOR FV FV50N,50M	00/1~	Rear Suspension TRUNNION
03905 6881	MH034092	130 x 150 x 14	FUSO TRUCK TRACTOR FV FV1#,2#,3#,4#	74/~89/10	Wheel Hub FRONT
03905 8693	MH034135	65 x 77 x 12	FUSO TRUCK TRACTOR FV FV50L,50M,50N HR#,FV50M NW1	00/1~	Wheel Hub REAR OUTER (F & R)
03905 4043	MT141132	50 x 65 x 9	FUSO TRUCK TRACTOR FV FV50M JR3W	00/1~	Wheel Hub REAR OUTER (F & R)
03905 8306	12857-16700	165 x 195 x 19	FUSO TRUCK TRACTOR FV FV4#	83/6~96/2	Rear Suspension TRUNNION
03905 7664	12857-16700	165 x 195 x 19	FUSO TRUCK TRACTOR FV FV512 HRH,HRK	96/7~00/	Rear Suspension TRUNNION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1367	12857-16700	165 x 195 x 19	FUSO TRUCK TRACTOR FV FV513,514	96/7~00/	Rear Suspension TRUNNION
03905 4946	44514-51681	45 x 60 x 9	FUSO TRUCK TRACTOR FV FV113 EXCEPT J,JD,JM,N,Q	74/~79/	Transmission FRONT
03905 5942	12857-16700	165 x 195 x 19	FUSO TRUCK TRACTOR FV FV50L HR1#,HR2#	00/1~	Rear Suspension TRUNNION
03905 6794	44514-51681	45 x 60 x 9	FUSO TRUCK TRACTOR FV FV112,119	74/~79/	Transmission FRONT
03905 5741	MC095475	154 x 185 x 19	FUSO TRUCK TRACTOR FV FV410,411,412,419	96/3~99/	Rear Suspension TRUNNION
03905 7130	MC095475	154 x 185 x 19	FUSO TRUCK TRACTOR FV FV500,501,502,505,509,5 10,511,519	96/4~00/	Rear Suspension TRUNNION
03905 6218	MC095475	154 x 185 x 19	FUSO TRUCK TRACTOR FV FV512 EXC. HRH,HRK	96/7~00/	Rear Suspension TRUNNION
03905 2408	MC095475	154 x 185 x 19	FUSO TRUCK TRACTOR FV FV515 EXC. HR2#	96/4~00/	Rear Suspension TRUNNION
03905 4667	MC095475	154 x 185 x 19	FUSO TRUCK TRACTOR FV FV50J,50K	00/1~	Rear Suspension TRUNNION
03905 1637	MC095475	154 x 185 x 19	FUSO TRUCK TRACTOR FV FV50L PYP2#	00/1~	Rear Suspension TRUNNION
03905 5597	MH034135	65 x 77 x 12	FUSO TRUCK TRACTOR FV FV412(JR#),414,415(JRS2 #),424,439	85/9~97/	Wheel Hub REAR OUTER (F & R)
03905 8723	12857-16700	165 x 195 x 19	FUSO TRUCK TRACTOR FV FV515 HR2#	96/4~00/	Rear Suspension TRUNNION
03905 2663	MD009038	17 x 28 x 7	GALANT (FWD) G32,G37B,4G32,4G37	83/8~92/	Engine OIL PUMP
03905 5543	MD008762	35 x 50 x 8	GALANT (FWD) G62B,G63B E13,15	83/8~87/	Engine CAM SHAFT
03905 5339	MD008762	35 x 50 x 8	GALANT (FWD) 4G94 EA7A,EC7A	00/5~	Engine CAM SHAFT
03905 1991	MD151463	28 x 40 x 8	GALANT (FWD) G32B,G37B,4G32,4G37	83/8~92/	Engine BLANCER SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6080	MD008762	35 x 50 x 8	GALANT (FWD) 4D68 E57,77	92/2~96/	Engine CAM SHAFT
03905 8864	MD008762	35 x 50 x 8	GALANT (FWD) 4D65 E14,34	84/3~93/	Engine CAM SHAFT
03905 7679	MD008762	35 x 50 x 8	GALANT (FWD) 6A13 EC5A	96/8~02/	Engine CAM SHAFT
03905 6251	MD008762	35 x 50 x 8	GALANT (FWD) 6A11,6A12 E53,54,64,84	92/2~96/	Engine CAM SHAFT
03905 3680	MD050608	25 x 35 x 6	GALANT (FWD) G62B,G63B,4G63,4G67,4 G64,4D65,4D68	83/8~02/	Engine BLANCER SHAFT
03905 6119	MD008762	35 x 50 x 8	GALANT (FWD) 4G93 E52,72,EA1,EC1	92/2~00/	Engine CAM SHAFT
03905 6716	MD008762	35 x 50 x 8	GALANT (FWD) 6G71 E17	86/10~90/	Engine CAM SHAFT
03905 7688	MD009038	17 x 28 x 7	GALANT (FWD) G62B,G63B,4D65	83/8~85/4	Engine OIL PUMP
03905 8756	MD008762	35 x 50 x 8	GALANT (FWD) 4G63,4G67 E33,35,38,39	87/9~92/	Engine CAM SHAFT
03905 5045	MD008882	44 x 60 x 7	GALANT (FWD) 4D65,4D68	84/3~96/	Engine CRANK SHAFT FRONT
03905 4868	MD008762	35 x 50 x 8	GALANT (FWD) 4G32,4G37 E31,32,37	87/8~92/	Engine CAM SHAFT
03905 8021	MD008762	35 x 50 x 8	GALANT (FWD) G32B,G37B E11,12	83/8~87/	Engine CAM SHAFT
03905 2891	MR961021		GALANT (FWD) EA7,EC7 EXC. PRGC8,SRGC8	00/5~	Power Steering SEAL KIT
03905 7943	MR961021		GALANT (FWD) EA1,EC1	97/7~00/	Power Steering SEAL KIT
03905 6773	MB333879		GALANT (FWD) EA1,EC1	96/9~97/6	Power Steering SEAL KIT
03905 1391	MR961024		GALANT (FWD) EA7,EC7 PRGC8,SRGC8	02/8~	Power Steering SEAL KIT
03905 1352	MD008762	35 x 50 x 8	GALANT (FWD) 4G64 EA3A,EC3A	98/8~02/	Engine CAM SHAFT
03905 1994	MD359158	85 x 103 x 7.5	GALANT (FWD) 4D68	92/3~96/	Engine CRANK SHAFT REAR
03905 4730	MR961024		GALANT (FWD) EA3,EC3,EC5	96/8~02/	Power Steering SEAL KIT
03905 7085	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E15 SNHG,SRHG	84/5~84/9	Wheel Hub FRONT INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7280	MD307343		GALANT (FWD) 4G64 IN.	98/8~99/7	Engine VALVE STEM SEAL
03905 7709	MD184303		GALANT (FWD) 6A13 IN.	96/8~02/	Engine VALVE STEM SEAL
03905 8759	MD184303		GALANT (FWD) 4G93,4G94 IN. & EX.	96/8~	Engine VALVE STEM SEAL
03905 7754	MD307343		GALANT (FWD) 4G64 EX.	98/8~02/	Engine VALVE STEM SEAL
03905 8717	MD307343		GALANT (FWD) 4G63,4G67	87/8~92/	Engine VALVE STEM SEAL
03905 8948	MD306079		GALANT (FWD) 4G64 IN.	99/7~02/	Engine VALVE STEM SEAL
03905 3257	MD008882	44 x 60 x 7	GALANT (FWD) G32B,G37B,4G32,4G37	83/8~92/	Engine CRANK SHAFT FRONT
03905 2087	MD359158	85 x 103 x 7.5	GALANT (FWD) 4G64,4G93,4G94,6A13	96/8~	Engine CRANK SHAFT REAR
03905 1958	MD168057	20 x 30 x 7 x 7.5	GALANT (FWD) G62B,G63B	85/5~87/	Engine OIL PUMP
03905 2462	MD150161	85 x 103 x 8	GALANT (FWD) 4G93,6A11,6A12	92/3~96/	Engine CRANK SHAFT REAR
03905 4151	MD101915	91 x 111 x 9	GALANT (FWD) 6G71	86/10~90/	Engine CRANK SHAFT REAR
03905 8657	MD069947	80 x 96 x 9	GALANT (FWD) G62B,G63B,4G63,4G67,4D65,4D68	83/8~96/	Engine CRANK SHAFT REAR
03905 1160	MD016549	72 x 96 x 9	GALANT (FWD) G32B,G37B,4G32,4G37	83/8~92/	Engine CRANK SHAFT REAR
03905 6383	MD168055	37 x 50 x 6	GALANT (FWD) 4G93,4G94,6A11,6A12,6A13	92/2~	Engine CRANK SHAFT FRONT
03905 2012	MD168055	37 x 50 x 6	GALANT (FWD) 6G71	86/10~90/	Engine CRANK SHAFT FRONT
03905 7850	MD008882	44 x 60 x 7	GALANT (FWD) G62B,G63B,4G63,4G64,4G67	83/8~02/	Engine CRANK SHAFT FRONT
03905 8297	MD095355	20 x 30 x 7	GALANT (FWD) 4G63,4G64,4G67	87/8~02/	Engine OIL PUMP
03905 8588	MD095355	20 x 30 x 7	GALANT (FWD) 4D65,4D68	85/5~96/	Engine OIL PUMP
03905 7427	MD000508		GALANT (FWD) G32B,G37B,4G63,4G63,4G67,4D65,4D68	83/8~96/	Engine VALVE STEM SEAL
03905 6719	MB303867	50 x 82 x 8 x 11	GALANT (FWD) E15 REAR DISC BRAKE	84/10~85/12	Wheel Hub FRONT INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2732	MB303875	52 x 72 x 8 x 11	GALANT (FWD) E15 REAR DISC BRAKE	84/10~85/ 12	Wheel Hub FRONT OUTER
03905 2561	MB303875	52 x 72 x 8 x 11	GALANT (FWD) E15 EXCEPT SNHG,SRHG	84/7~84/9	Wheel Hub FRONT OUTER
03905 4007	MB303875	52 x 72 x 8 x 11	GALANT (FWD) E13	84/10~87/	Wheel Hub FRONT OUTER
03905 7727	MB303866	50 x 72 x 8 x 11	GALANT (FWD) E15 EXCEPT SNHG,SRHG	84/5~84/7	Wheel Hub FRONT OUTER
03905 7292	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E15 REAR DRUM BRAKE	84/10~85/ 12	Wheel Hub FRONT OUTER
03905 1721	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E15	83/8~84/4	Wheel Hub FRONT OUTER
03905 8153	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E13	83/8~84/9	Wheel Hub FRONT OUTER
03905 2801	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E11,12,14	83/8~87/	Wheel Hub FRONT OUTER
03905 1433	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E31,34	87/8~93/	Wheel Hub FRONT INNER
03905 8945	MB303867	50 x 82 x 8 x 11	GALANT (FWD) E15 ALL	86/1~87/	Wheel Hub FRONT INNER
03905 4187	MD050608	25 x 35 x 6	GALANT (FWD) MT ALL	83/8~91/8	Mission & Differential (M/T) INPUT SHAFT
03905 7961	MB303867	50 x 82 x 8 x 11	GALANT (FWD) E15 EXCEPT SNHG,SRHG	84/5~84/9	Wheel Hub FRONT INNER
03905 1838	MB303867	50 x 82 x 8 x 11	GALANT (FWD) E13	84/10~87/	Wheel Hub FRONT INNER
03905 1418	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E15 REAR DRUM BRAKE	84/10~85/ 12	Wheel Hub FRONT INNER
03905 5111	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E15	83/8~84/4	Wheel Hub FRONT INNER
03905 8522	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E13	83/8~84/9	Wheel Hub FRONT INNER
03905 2198	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E11,12,14	83/8~87/	Wheel Hub FRONT INNER
03905 1514	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E31,34	87/8~93/	Wheel Hub FRONT OUTER
03905 5120	MD302338		GALANT (FWD) 6A13 EX.	96/8~02/	Engine VALVE STEM SEAL
03905 3674	MB573309	54 x 82 x 8 x 11	GALANT (FWD) E32,33,35,37,38,39	87/9~92/	Wheel Hub FRONT INNER
03905 7820	MD755904	41 x 61 x 9 x 13.5	GALANT (FWD) EC1A(4WD) AT	96/11~96/ 11	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH&LH)
03905 3071	MB949358		GALANT (FWD) E54A #XM	92/2~94/	Power Steering SEAL KIT
03905 4256	MB941351		GALANT (FWD) E52A,53A,54A*,57A,72A, 74A,77A	92/2~96/	Power Steering SEAL KIT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5489	MB815189		GALANT (FWD) E39A	87/9~92/	Power Steering SEAL KIT
03905 5093	MB815188		GALANT (FWD) E33A,35 EPS	87/8~92/	Power Steering SEAL KIT
03905 1202	MB682006R		GALANT (FWD) E31A,32A,33A(EXC. EPS),34A,35A(EXC. EPS),37A,38A	87/8~92/	Power Steering SEAL KIT
03905 6245	MB393929	35 x 65 x 12	GALANT (FWD) EC1A,3A,5A,7A	96/8~	Mission & Differential (M/T&A/T) REAR DRIVE PINION
03905 3272	MD707184	35 x 56 x 9 x 12	GALANT (FWD) EC1A,3A,5A,7A	96/8~	Mission & Differential (M/T&A/T) REAR DIFF. SIDE
03905 2711	MD707575	42 x 60 x 9	GALANT (FWD) E#,EA#,EC#	83/8~	Mission & Differential (M/T&A/T) CONVERTER OIL PUMP
03905 1067	MB303875	52 x 72 x 8 x 11	GALANT (FWD) E15 ALL	86/1~87/	Wheel Hub FRONT OUTER
03905 6056	MD758763	41 x 61 x 11.5 x 16	GALANT (FWD) EC1A(4WD) AT	96/12~00/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH&LH)
03905 3395	MB303875	52 x 72 x 8 x 11	GALANT (FWD) E32,33,35,37,38,39	87/9~92/	Wheel Hub FRONT OUTER
03905 6380	MD755904	41 x 61 x 9 x 13.5	GALANT (FWD) EC1A(4WD) MT	96/11~00/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH&LH)
03905 3992	MD755904	41 x 61 x 9 x 13.5	GALANT (FWD) EA1A,3A,7A(2WD)	96/8~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH&LH)
03905 5072	MD719710	35 x 54 x 10 x 17	GALANT (FWD) 4WD ALL	88/2~96/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 6671	MD707184	35 x 56 x 9 x 12	GALANT (FWD) 2WD ALL	83/8~96/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 1868	MD707184	35 x 56 x 9 x 12	GALANT (FWD) 2WD,4WD ALL	83/8~96/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 7208	MB936826	30 x 45 x 6.5	GALANT (FWD) EC5A	86/8~02/	Mission & Differential (M/T) INPUT SHAFT
03905 2795	MD741818	25 x 35 x 6	GALANT (FWD) EA1A,EC1A	86/8~00/	Mission & Differential (M/T) INPUT SHAFT
03905 1328	MD741818	25 x 35 x 6	GALANT (FWD) MT ALL	91/8~96/	Mission & Differential (M/T) INPUT SHAFT
03905 1877	MR961024		GALANT (FWD) EA1	96/8~96/9	Power Steering SEAL KIT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1697	MD758763	41 x 61 x 11.5 x 16	GALANT (FWD) EC3A,5A,7A(4WD)	96/8~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH&LH)
03905 3617	MB176746	50 x 66.5 x 13 x 16	GALANT (FWD) E15 SNHG,SRHG	84/5~84/9	Wheel Hub FRONT OUTER
03905 8183	MA181498	51 x 65 x 9	GALANT (RWD) A16#,EXCEPT A164A,166	80/2~84/	Wheel Hub REAR
03905 6029	MD703743	36 x 52 x 10	GALANT (RWD) A161(PB),164(TURBO),1 67A,168V	80/2~84/	Transmission REAR
03905 4553	MD701430	32 x 48 x 10	GALANT (RWD) A162(EXCEPTPB),162A, 163A,164A,(WITHOUT TURBO)	80/2~84/	Transmission REAR
03905 7982	MD723202	30 x 45 x 6	GALANT (RWD) A161(PB),163A,164A,167 A,163V,168V	80/2~84/	Transmission FRONT
03905 6074	MD050608	25 x 35 x 6	GALANT (RWD) A161A(EXCEPT PB),161V,162A	80/2~84/	Transmission FRONT
03905 4691	MD050608	25 x 35 x 6	GALANT (RWD) A12#,13#	76/4~80/	Transmission FRONT
03905 1634	MB393929	35 x 65 x 12	GALANT (RWD) A121A,122A,123A,131A, 132A,133A	76/4~80/	Final Drive PINION
03905 5855	MB800115	41 x 55 x 9	GALANT (RWD) A131A	77/6~80/	Wheel Hub REAR
03905 3689	MD701430	32 x 48 x 10	GALANT (RWD) A161V,163V	80/2~84/	Transmission REAR
03905 3242	MA181498	51 x 65 x 9	GALANT (RWD) A12#,13#...EXCEPT A131A	76/4~80/	Wheel Hub REAR
03905 3146	MB584745	45 x 62 x 6	GALANT (RWD) A163A,164A,166A,167A	80/2~83/	Wheel Hub FRONT
03905 1169	MB584745	45 x 62 x 6	GALANT (RWD) A1331(EXCEPT CNJ),135A	77/11~80/	Wheel Hub FRONT
03905 2519	MA125844	38 x 52 x 6	GALANT (RWD) A161,162,161V,163V,168 V	80/2~84/	Wheel Hub FRONT
03905 4568	MA125844	38 x 52 x 6	GALANT (RWD) A12#,A131A,132A,133A(CNJ)	76/4~80/	Wheel Hub FRONT
03905 4982	MB092186	40 x 65 x 10	GALANT (RWD) A164A,166A	80/2~83/	Wheel Hub REAR
03905 1886	MD008882	44 x 60 x 7	GALANT (RWD) G3B,G6B,4D5	76/5~84/	Engine CRANK SHAFT FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7328	MD000508		GALANT (RWD) G5B,G6B,4D5	76/5~84/	Engine VALVE STEM SEAL
03905 7478	MD069947	80 x 96 x 9	GALANT (RWD) G5B,G6B,4D5	80/5~84/	Engine CRANK SHAFT REAR
03905 2192	MD020240	80 x 96 x 9	GALANT (RWD) G5B	76/4~80/	Engine CRANK SHAFT REAR
03905 4952	MD701430	32 x 48 x 10	GALANT (RWD) A12#,13#	76/4~80/	Transmission REAR
03905 6377	MD020308	48 x 68 x 11	GALANT (RWD) G5B A122,123,132,133,135,166	76/4~81/	Engine CRANK SHAFT FRONT
03905 5999	MB393929	35 x 65 x 12	GALANT (RWD) A161A(EXCEPT PB),162A,163A	80/2~84/	Final Drive PINION
03905 5732	MD009038	17 x 28 x 7	GALANT (RWD) G3B,G6B,4D5	76/5~84/	Engine OIL PUMP
03905 8459	MD050608	25 x 35 x 6	GALANT (RWD) G6B,4D5	80/2~84/	Engine BALANCER SHAFT
03905 5399	MB092145	42 x 65 x 12	GALANT (RWD) A121V,123V,135A	77/11~80/	Final Drive PINION
03905 4790	MD008762	35 x 50 x 8	GALANT (RWD) 4D5 A167	80/2~83/	Engine CAM SHAFT
03905 8648	MD008762	35 x 50 x 8	GALANT (RWD) G6B A162,163,164,168	80/2~84/	Engine CAM SHAFT
03905 1757	MD008762	35 x 50 x 8	GALANT (RWD) G3B A121,131,161	76/4~84/	Engine CAM SHAFT
03905 6581	MB092145	42 x 65 x 12	GALANT (RWD) A161(PB),164A,166A,167 A,161V,163V,168V	80/2~84/	Final Drive PINION
03905 2285	MD151463	28 x 40 x 8	GALANT (RWD) G3B	76/4~84/	Engine BALANCER SHAFT
03905 3893	MD016549	72 x 96 x 9	GALANT (RWD) G3B	76/5~84/	Engine CRANK SHAFT REAR
03905 2849	MB569925	42 x 92 x 12.5 x 19.2	GTO Z15A,16A 6F	90/9~00/	Mission & Differential (A/T) REAR DIFF. SIDE
03905 2363	MD152603	30 x 42 x 8 x 8.4	GTO Z15A,16A(6G72) EXC.MJGF9	90/9~00/	Engine CAM SHAFT
03905 6497	MD177097	30 x 42 x 8	GTO Z15A,16A(6G72) MJGF9	92/10~97/	Engine CAM SHAFT
03905 4607	MD120700	37 x 50 x 6	GTO Z15A,16A(6G72)	90/9~00/	Engine CRANK SHAFT FRONT
03905 8825	MD120699	91 x 111 x 9	GTO Z15A,16A(6G72)	90/9~00/2	Engine CRANK SHAFT REAR
03905 3947	MD306079		GTO 6G72 IN.	90/9~00/	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4826	MD307343		GTO 6G72 EX.	90/9~00/	Engine VALVE STEM SEAL
03905 5462	MD707184	35 x 56 x 9 x 12	GTO Z15A,16A ATM,5F	90/9~00/	Mission & Differential (A/T) REAR DIFF. SIDE
03905 3839	MD372251	91 x 111 x 7.5	GTO Z15A,16A(6G72)	00/3~00/	Engine CRANK SHAFT REAR
03905 3152	MB393807	36 x 64 x 11 x 19	GTO Z15A,16A	90/9~00/	Wheel Hub REAR
03905 8483	MB393929	35 x 65 x 12	GTO Z15A,16A ATM,5F	90/9~00/	Mission & Differential (A/T) REAR DIFF. PINION
03905 5228	MD707575	42 x 60 x 9	GTO Z15A,16A	90/9~00/	Mission & Differential (A/T) CONVERTER OIL PUMP
03905 2144	MB837029	37 x 58 x 10 x 13.3	GTO Z15A,16A 6F	90/9~00/	Mission & Differential (A/T) FRONT DIFF. CASE(RH)
03905 5789	MD707184	35 x 56 x 9 x 12	GTO Z15A,16A ATM,5F	90/9~00/	Mission & Differential (A/T) FRONT DIFF. CASE(RH)
03905 1856	MB837028	37 x 58 x 11.5 x 16	GTO Z15A,16A 6F	90/9~00/	Mission & Differential (A/T) FRONT DIFF. CASE(LH)
03905 2111	MD719710	35 x 54 x 10 x 17	GTO Z15A,16A ATM,5F	90/9~00/	Mission & Differential (A/T) FRONT DIFF. CASE(LH)
03905 7649	MD741818	25 x 35 x 6	GTO Z15A,16A	90/9~00/	Mission & Differential (M/T) INPUT SHAFT
03905 8660	MB569924	42 x 72 x 12 x 15.5	GTO Z15A,16A 6F	90/9~00/	Mission & Differential (A/T) REAR DIFF. PINION
03905 6038	MD008762	35 x 50 x 8	LANCER (RWD) G3B 143,144,174	77/~87/	Engine CAM SHAFT
03905 3377	MD008762	35 x 50 x 8	LANCER (RWD) G6B A175	80/2~87/	Engine CAM SHAFT
03905 2342	MD151463	28 x 40 x 8	LANCER (RWD) G3B	77/~87/	Engine BALANCER SHAFT
03905 7196	MD050608	25 x 35 x 6	LANCER (RWD) G6B	81/~87/	Engine BALANCER SHAFT
03905 3116	MD009038	17 x 28 x 7	LANCER (RWD) G3B,G6B	77/~87/	Engine OIL PUMP
03905 8822	MD008882	44 x 60 x 7	LANCER (RWD) G3B,G6B	77/~87/	Engine CRANK SHAFT FRONT
03905 5912	MA125844	38 x 52 x 6	LANCER (RWD) A14#,17#...EXCEPT A175A NFU,NFG	77/~87/	Wheel Hub FRONT
03905 1004	MD008762	35 x 50 x 8	LANCER (RWD) G19 A141,142,148,149,171,172	77/~87/	Engine CAM SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6278	MD307343		LANCER (RWD) G1B	77/~87/	Engine VALVE STEM SEAL
03905 2165	MD030782	30 x 46 x 7	LANCER (RWD) G1B	77/~87/	Engine CRANK SHAFT FRONT
03905 6779	MD000508		LANCER (RWD) G3B,G6B	77/~87/	Engine VALVE STEM SEAL
03905 7640	MD069947	80 x 96 x 9	LANCER (RWD) G6B	80/2~87/	Engine CRANK SHAFT REAR
03905 7799	MA181498	51 x 65 x 9	LANCER (RWD) A146A,174A(NU),175A	79/4~87/	Wheel Hub REAR
03905 4769	MD016549	72 x 96 x 9	LANCER (RWD) G1B,G3B	77/~87/	Engine CRANK SHAFT REAR
03905 8342	MB584745	45 x 62 x 6	LANCER (RWD) A174A NFU,NFG	83/11~87/	Wheel Hub FRONT
03905 3626	MB092145	42 x 65 x 12	LANCER (RWD) A175A NTU,NTG,NFU,NFG	81/11~87/	Final Drive PINION
03905 5105	MB001115	41 x 55 x 9	LANCER (RWD) A171A,172A,174A(EXCEPT NU)	79/4~87/	Wheel Hub REAR
03905 7298	MA181498	51 x 65 x 9	LANCER (RWD) A141V,142V,148V,149V	77/~85/	Wheel Hub REAR
03905 1151	MD050608	25 x 35 x 6	LANCER (RWD) A14#,17#...EXCEPT A175A NTU,NTG,NFU,NFG	77/~87/	Transmission FRONT
03905 8975	MD723202	30 x 45 x 6	LANCER (RWD) A175A NTU,NTG,NFU,NFG	81/11~87/	Transmission FRONT
03905 8384	MD701430	32 x 48 x 10	LANCER (RWD) A14#,17#...EXCEPT A175A NTU,NTG,NFU,NFG	77/~87/	Transmission REAR
03905 4073	MD703743	36 x 52 x 10	LANCER (RWD) A175A NTU,NTG,NFU,NFG	81/11~87/	Transmission REAR
03905 4403	MB393929	35 x 65 x 12	LANCER (RWD) A14#,17#...EXCEPT A175A NTU,NTG,NFU,NFG	77/~87/	Final Drive PINION
03905 2027	MB001115	41 x 55 x 9	LANCER (RWD) A141A,142A,143A	77/~80/	Wheel Hub REAR
03905 1232	MD306079		LEGNUM 4G64 IN.	99/7~02/	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6041	MD008762	35 x 50 x 8	LEGNUM 4G94(EA7W,EC7W)	00/5~02/	Engine CAM SHAFT
03905 5951	MD095355	20 x 30 x 7	LEGNUM 4G64(EA3W,EC3W)	98/8~02/	Engine OIL PUMP
03905 4241	MD050608	25 x 35 x 6	LEGNUM 4G64(EA3W,EC3W)	98/8~02/	Engine BALANCER SHAFT
03905 6776	MD168055	37 x 50 x 6	LEGNUM 4G93,6A12,6A13,4G94	96/6~02/	Engine CRANK SHAFT FRONT
03905 3677	MD008882	44 x 60 x 7	LEGNUM 4G64	98/8~02/	Engine CRANK SHAFT FRONT
03905 8753	MD359158	85 x 103 x 7.5	LEGNUM 4G93,4G64,6A12,6A13,4G94	96/6~02/	Engine CRANK SHAFT REAR
03905 5558	MD184303		LEGNUM 4G93,4G94 IN. & EX.	96/6~02/	Engine VALVE STEM SEAL
03905 5774	MD184303		LEGNUM 6A12 IN.	96/6~98/	Engine VALVE STEM SEAL
03905 6362	MD008762	35 x 50 x 8	LEGNUM 6A12(EA4W,EC4W),6A13(EA5W,EC5W)	96/6~02/	Engine CAM SHAFT
03905 6134	MD307343		LEGNUM 4G64 EX.	98/8~02/	Engine VALVE STEM SEAL
03905 2420	MD755904	41 x 61 x 9 x 13.5	LEGNUM EC5W MT EXC.TURBO	96/6~02/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 6053	MD307343		LEGNUM 4G64 IN.	98/8~99/7	Engine VALVE STEM SEAL
03905 3920	MD707575	42 x 60 x 9	LEGNUM EA#,EC#	96/6~02/	Mission & Differential (A/T) OIL PUMP BODY
03905 7736	MD758763	41 x 61 x 11.5 x 16	LEGNUM EC5W AT LRGE,LRPE	96/6~02/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 2174	MD758763	41 x 61 x 11.5 x 16	LEGNUM EC5W MT TURBO	96/6~02/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 6104	MD758763	41 x 61 x 11.5 x 16	LEGNUM EC3W,7W	98/8~02/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 7187	MD755904	41 x 61 x 9 x 13.5	LEGNUM EC5W AT EXC. LRGE,LRPE	96/6~02/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 2882	MD755904	41 x 61 x 9 x 13.5	LEGNUM EC4W	96/6~98/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 2963	MD755904	41 x 61 x 9 x 13.5	LEGNUM EC1W	96/6~96/11	Mission & Differential (M/T) FRONT DIFF. CASE

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5648	MD755904	41 x 61 x 9 x 13.5	LEGNUM EA1W,4W,5W,7W	96/6~02/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 6839	MB936826	30 x 45 x 6.5	LEGNUM EC5W TURBO	96/6~02/	Mission & Differential (M/T) INPUT SHAFT
03905 7556	MD741818	25 x 35 x 6	LEGNUM EA1W,4W,5W,EC1W,4W ,5W(EXC.TURBO)	96/6~02/	Mission & Differential (M/T) INPUT SHAFT
03905 7601	MD008762	35 x 50 x 8	LEGNUM 4G93(EA1W,EC1W),4G6 4(EA3W,EC3W)	96/6~02/	Engine CAM SHAFT
03905 2513	MD302338		LEGNUM 6A12 EX.	96/6~98/	Engine VALVE STEM SEAL
03905 2924	MD758763	41 x 61 x 11.5 x 16	LEGNUM EC1W	96/12~00/	Mission & Differential (M/T) FRONT DIFF. CASE
03905 6389	MD707184	35 x 56 x 9 x 12	LEGNUM EC1W,3W,5W,7W	96/6~02/	Mission & Differential (M/T) REAR DIFF. SIDE
03905 3020	MD359158	85 x 103 x 7.5	LIBERO 4G92,4G93	95/2~	Engine CRANK SHAFT REAR
03905 5138	MD008762	35 x 50 x 8	LIBERO 4G92(CB4W),4G93(CB5 W,CD5W)	92/4~	Engine CAM SHAFT
03905 1460	MD008762	35 x 50 x 8	LIBERO 4D68(CB8#,CD8#)	92/4~	Engine CAM SHAFT
03905 5516	MD095355	20 x 30 x 7	LIBERO 4D68	92/4~	Engine OIL PUMP
03905 5201	MD050608	25 x 35 x 6	LIBERO 4D68	92/4~	Engine BALANCER SHAFT
03905 3812	MD030782	30 x 46 x 7	LIBERO 4G13,4G15	92/4~	Engine CRANK SHAFT FRONT
03905 8387	MD008762	35 x 50 x 8	LIBERO 4G13(CB1V),4G15(CB2#, CD2V)	92/4~	Engine CAM SHAFT
03905 2576	MD016549	72 x 96 x 9	LIBERO 4G13,4G15	92/4~	Engine CRANK SHAFT REAR
03905 1145	MD008882	44 x 60 x 7	LIBERO 4D68	92/4~	Engine CRANK SHAFT FRONT
03905 6353	MD359158	85 x 103 x 7.5	LIBERO 4D68	92/4~	Engine CRANK SHAFT REAR
03905 7739	MD307343		LIBERO 4G13,4G15	92/4~	Engine VALVE STEM SEAL
03905 4037	MD184303		LIBERO 4G92,4G93	92/4~	Engine VALVE STEM SEAL
03905 4985	MD000508		LIBERO 4D68	92/4~	Engine VALVE STEM SEAL
03905 6983	MB573309	54 x 82 x 8 x 11	LIBERO CD5W,8W	92/4~00/	Wheel Hub FRONT INNER
03905 1736	MD168055	37 x 50 x 6	LIBERO 4G92,4G93	92/4~	Engine CRANK SHAFT FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2696	MD707184	35 x 56 x 9 x 12	LIBERO CB#,CD#	92/4~	Mission & Differential (A/T) FRONT DIFF. CASE(RH)
03905 6197	MB808443	54 x 76 x 8 x 11	LIBERO CB1V,2V,2W,4W,5W,8V, 8W,CD2V,8V	92/4~	Wheel Hub FRONT INNER
03905 2813	MD150161	85 x 103 x 8	LIBERO 4G93	92/4~95/2	Engine CRANK SHAFT REAR
03905 1799	MB303875	52 x 72 x 8 x 11	LIBERO CD5W,8W	92/4~00/	Wheel Hub FRONT OUTER
03905 3581	MA181498	51 x 65 x 9	LIBERO CD#...WITHOUT ABS	92/4~	Wheel Hub REAR
03905 5666	MD741818	25 x 35 x 6	LIBERO CB#,CD#	92/4~	Mission & Differential (M/T) INPUT SHAFT
03905 3332	MB808444	51.9 x 66 x 8 x 10	LIBERO CB1V,2V,2W,4W,5W,8V, 8W,CD2V,8V	92/4~	Wheel Hub FRONT OUTER
03905 2846	MD707184	35 x 56 x 9 x 12	LIBERO CB#	92/4~	Mission & Differential (A/T) FRONT DIFF. CASE(LH)
03905 2834	MR103090R		LIBERO CB#,CD#	92/5~96/11	Power Steering SEAL KIT
03905 6359	MD719710	35 x 54 x 10 x 17	LIBERO CD#	92/4~	Mission & Differential (A/T) FRONT DIFF. CASE(LH)
03905 1622	MB393929	35 x 65 x 12	LIBERO CD#	92/4~	Mission & Differential (A/T) REAR DIFF. PINION
03905 7460	MD707575	42 x 60 x 9	LIBERO CB#,CD#	92/4~	Mission & Differential (A/T) CONVERTER OIL PUMP
03905 5564	MB910971R		LIBERO CB#,CD#	92/4~92/5	Power Steering SEAL KIT
03905 8705	MB886298	30 x 60 x 15	LIBERO CD#...WITH ABS	92/4~	Wheel Hub REAR
03905 8885	MN184008		LIBERO CB#,CD#	96/12~	Power Steering SEAL KIT
03905 3002	MD008762	35 x 50 x 8	MINI CAB 3G83 U41,42(DOHC)	90/12~	Engine CAM SHAFT
03905 7454	MD162689	35 x 47 x 8.5	MINI CAB 4A30 U43,44(SOHC)	93/12~99/	Engine CAM SHAFT
03905 4874	MD162689	35 x 47 x 8.5	MINI CAB 3G83 U61,62	98/11~	Engine CAM SHAFT
03905 6953	MD707184	35 x 56 x 9 x 12	MINI CAB U12,15,19,42,44(4WD)	84/4~99/	Final Drive FRONT DIFF. SIDE
03905 2009	MD162689	35 x 47 x 8.5	MINI CAB 3G81,3G83 U14,15,18,19	90/9~91/	Engine CAM SHAFT
03905 3980	MD008762	35 x 50 x 8	MINI CAB G23B U11,12	84/4~87/5	Engine CAM SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7019	MD008762	35 x 50 x 8	MINI CAB 4A30 U43,44(DOHC)	93/12~99/	Engine CAM SHAFT
03905 5873	MD008762	35 x 50 x 8	MINI CAB 3G81,3G83 U14,15,18,19	87/6~90/9	Engine CAM SHAFT
03905 8261	MD162689	35 x 47 x 8.5	MINI CAB 3G83 U41,42(SOHC)	90/12~99/	Engine CAM SHAFT
03905 6893	MD009038	17 x 28 x 7	MINI CAB 3G81,3G83	87/6~	Engine OIL PUMP
03905 6368	MD168057	20 x 30 x 7 x 7.5	MINI CAB 4A30	93/12~99/	Engine OIL PUMP
03905 2402	MD030782	30 x 46 x 7	MINI CAB G23B	84/4~87/	Engine CRANK SHAFT FRONT
03905 2930	MD115245	31 x 45 x 7	MINI CAB 3G81,3G83,4A30	87/6~	Engine CRANK SHAFT FRONT
03905 6449	MD329374	70 x 87 x 8.5	MINI CAB 4A30	93/12~	Engine CRANK SHAFT REAR
03905 7136	MD179175		MINI CAB 3G83,4A30	90/12~	Engine VALVE STEM SEAL
03905 2798	MB092620	35 x 55 x 11	MINI CAB U18,19,41,42,61,62	90/1~	Final Drive PINION
03905 3554	MD016317	60 x 78 x 7.5	MINI CAB 2G23,G23B	77/3~87/	Engine CRANK SHAFT REAR
03905 5303	MD307343		MINI CAB G23B,3G81,3G83	77/3~90/1 1	Engine VALVE STEM SEAL
03905 5486	MD112895	60 x 75 x 8	MINI CAB 3G81,3G83	87/6~95/1 0	Engine CRANK SHAFT REAR
03905 8195	MB001115	41 x 55 x 9	MINI CAB U11,14 FRONT DISC BRAKE	84/4~89/1 2	Wheel Hub REAR
03905 7763	MD321819	60 x 75 x 8	MINI CAB 3G83	95/10~	Engine CRANK SHAFT REAR
03905 7700	MB092620	35 x 55 x 11	MINI CAB U14,15 WITHOUT SUPER CHARGER ETC.	87/6~89/1 2	Final Drive PINION
03905 2867	MB109453	45 x 60 x 7 x 10	MINI CAB U12,15,19,42,44(4WD)	84/4~99/	Wheel Hub FRONT INNER
03905 3641	MB349099	46 x 61 x 7.3 x 10	MINI CAB U12,15,19(4WD)	84/4~91/	Wheel Hub FRONT OUTER
03905 3092	MV026391	35 x 46 x 8	MINI CAB U11,14 FRONT DRUM BRAKE	84/4~89/1 2	Wheel Hub REAR
03905 2294	MT131243	42 x 53 x 8	MINI CAB U11,14,18,41,43(2WD)	84/4~99/	Wheel Hub FRONT
03905 6782	MB001115	41 x 55 x 9	MINI CAB U12,15,18,19,41,42,43,44	84/4~99/	Wheel Hub REAR
03905 1685	MB001115	41 x 55 x 9	MINI CAB U61,62 WITHOUT ABS	98/11~	Wheel Hub REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1241	MR399191	28 x 50 x 11	MINI CAB U61,62 WITH ABS	98/11~	Wheel Hub REAR
03905 6614	MB393929	35 x 65 x 12	MINI CAB U12(12V HLBJ,LBD)	84/4~87/	Final Drive PINION
03905 7979	MB109453	45 x 60 x 7 x 10	MINI CAB U42,44(4WD)	90/12~99/	Wheel Hub FRONT OUTER
03905 4583	MB393929	35 x 65 x 12	MINI CAB U14,15 SUPER CHARGER ETC.	87/6~89/1 2	Final Drive PINION
03905 6923	MN114457	22 x 32 x 5	MINI CAB U1#,4#,6#	84/4~	Transmission (M/T) FRONT
03905 5171	MB290311	28 x 47 x 8	MINI CAB U14 FRONT DRUM BRAKE	87/6~89/1 2	Final Drive PINION
03905 6740	MB290311	28 x 47 x 8	MINI CAB U11,12(EXCEPT 12V HLBJ,LBD)	84/4~87/	Final Drive PINION
03905 6593	MD701430	32 x 48 x 10	MINI CAB U4#...TURBO	91/12~99/	Transmission (M/T) REAR EXTENTION
03905 6821	MR983239	28 x 45 x 10	MINI CAB U61	98/11~	Transmission (M/T) REAR EXTENTION
03905 2537	MR983239	28 x 45 x 10	MINI CAB U4#///EXCEPT TURBO	90/12~99/	Transmission (M/T) REAR EXTENTION
03905 4277	MR983239	28 x 45 x 10	MINI CAB U1#	84/4~91/	Transmission (M/T) REAR EXTENTION
03905 3566	MD008762	35 x 50 x 8	MINICA 2G23 A107	81/8~84/	Engine CRANK SHAFT FRONT
03905 7760	MD008762	35 x 50 x 8	MINICA 3G83(SONC) H22,27	90/1~90/8	Engine CAM SHAFT
03905 7157	MD008762	35 x 50 x 8	MINICA 3G83(DOHC) H22	90/1~93/	Engine CAM SHAFT
03905 8744	MD008762	35 x 50 x 8	MINICA 4A30(DOHC) H31,36	93/9~98/	Engine CAM SHAFT
03905 6146	MD162689	35 x 47 x 8.5	MINICA 3G83(SOHC) H22,27,32,37,42,47	90/9~	Engine CAM SHAFT
03905 4070	MD009038	17 x 28 x 7	MINICA 3G81,3G83	87/1~	Engine OIL PUMP
03905 6890	MD168057	20 x 30 x 7 x 7.5	MINICA 4A30	93/9~98/	Engine OIL PUMP
03905 5948	MD008762	35 x 50 x 8	MINICA G23B H11,12	84/1~86/	Engine CAM SHAFT
03905 5246	MD030782	30 x 46 x 7	MINICA G23B	84/1~86/	Engine CRANK SHAFT FRONT
03905 2474	MD115245	31 x 45 x 7	MINICA 3G81,3G83,4A30	87/1~96/2	Engine CRANK SHAFT FRONT
03905 4589	MD379845	31 x 45 x 7	MINICA 3G83,4A30	96/2~	Engine CRANK SHAFT FRONT
03905 4364	MD016317	60 x 78 x 7.5	MINICA 2G23,G23B	77/3~86/1 2	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7910	MD112895	60 x 75 x 8	MINICA 3G81,3G83	87/1~95/10	Engine CRANK SHAFT REAR
03905 1706	MD321819	60 x 75 x 8	MINICA 3G83,4A30	95/10~	Engine CRANK SHAFT REAR
03905 6692	MD307343		MINICA G23B,3G81 H11,12,14,15	84/1~89/1	Engine VALVE STEM SEAL
03905 5390	MB290311	28 x 47 x 8	MINICA H26(4WD)	90/1~90/	Mission & Differential (A/T) DRIVE PINION
03905 8363	MD307343		MINICA 3G81,3G83 SOHC	88/11~98/	Engine VALVE STEM SEAL
03905 8498	MB092620	35 x 55 x 11	MINICA H27,47(4WD)	90/11~	Mission & Differential (A/T) DRIVE PINION
03905 8603	MD179175		MINICA 3G83	98/10~	Engine VALVE STEM SEAL
03905 2828	MR112693	45 x 60 x 7 x 10	MINICA H22,27,3#	90/1~98/	Wheel Hub FRONT OUTER
03905 5207	MD008762	35 x 50 x 8	MINICA 3G81 H14,15,21,26	87/1~90/	Engine CAM SHAFT
03905 2228	MD179175		MINICA 4A30	93/9~98/	Engine VALVE STEM SEAL
03905 5771	MB303297	43 x 58 x 6.5 x 9	MINICA H1#,2#,3#	84/1~98/	Wheel Hub FRONT INNER
03905 3941	MB290311	28 x 47 x 8	MINICA H12,15,26(4WD)	84/1~89/	Mission & Differential (A/T) DRIVE PINION
03905 2231	MB109453	45 x 60 x 7 x 10	MINICA H1#,21,26	85/8~90/	Wheel Hub FRONT OUTER
03905 8591	MV026391	35 x 46 x 8	MINICA A107	81/8~84/	Wheel Hub REAR
03905 3287	MV026391	35 x 46 x 8	MINICA H12,15,26,27,37,47(4WD)	84/1~	Wheel Hub REAR
03905 4265	MB936241	33 x 50 x 13	MINICA H47 ABS	98/10~	Wheel Hub REAR
03905 5018	MN114457	22 x 32 x 5	MINICA A107	81/8~84/	Mission & Differential (M/T) INPUT SHAFT
03905 3422	MN114457	22 x 32 x 5	MINICA H1#,2#,3#,4#	84/1~	Mission & Differential (M/T) INPUT SHAFT
03905 8996	MR983239	28 x 45 x 10	MINICA A107	81/8~84/	Mission & Differential (M/T) REAR EXTENSION
03905 3782	MD707184	35 x 56 x 9 x 12	MINICA H1#,2#,3#,4#	84/1~	Mission & Differential (A/T) DIFF. SIDE(L&R)
03905 4865	MB290311	28 x 47 x 8	MINICA A107	81/8~84/	Mission & Differential (A/T) DRIVE PINION
03905 5063	MB303884	41 x 56 x 7 x 11	MINICA H1#	84/1~85/7	Wheel Hub FRONT OUTER
03905 1397	MD168055	37 x 50 x 6	MIRAGE / LANCER (FWD) 6A10,11 CB6,CK6	91/12~00/	Engine CRANK SHAFT FRONT
03905 5099	MD069947	80 x 96 x 9	MIRAGE / LANCER (FWD) 4G61	87/3~92/	Engine CRANK SHAFT REAR

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6158	MD372250	72 x 96 x 7.5	MIRAGE / LANCER (FWD) 4G13,4G15	00/3~	Engine CRANK SHAFT REAR
03905 8333	MB303875	52 x 72 x 8 x 11	MIRAGE / LANCER (FWD) CJ4A,(SIZE UP WHEEL),CK4A,CM5A	95/10~00/	Wheel Hub FRONT OUTER
03905 4229	MD016549	72 x 96 x 9	MIRAGE / LANCER (FWD) 4G13,4G15	87/9~00/2	Engine CRANK SHAFT REAR
03905 6398	MD168055	37 x 50 x 6	MIRAGE / LANCER (FWD) 4G93 CB5,CD5,CK5,CM5,CQ5, CS5	91/8~	Engine CRANK SHAFT FRONT
03905 8108	MD016549	72 x 96 x 9	MIRAGE / LANCER (FWD) G1B,G3B,G13B,G15B	78/3~92/	Engine CRANK SHAFT REAR
03905 5276	MD008882	44 x 60 x 7	MIRAGE / LANCER (FWD) 4G63 CD9,CE9,CN9,CP9,CT9	92/8~	Engine CRANK SHAFT FRONT
03905 1007	MD008882	44 x 60 x 7	MIRAGE / LANCER (FWD) 4D65,4D68 CB7,8,CD7,8,CK8,CM8	91/8~99/	Engine CRANK SHAFT FRONT
03905 6947	MD008882	44 x 60 x 7	MIRAGE / LANCER (FWD) 1800CC C14,34,64,74,37	83/10~92/	Engine CRANK SHAFT FRONT
03905 4907	MD069947	80 x 96 x 9	MIRAGE / LANCER (FWD) 4D65	79/3~92/	Engine CRANK SHAFT REAR
03905 1058	MD008882	44 x 60 x 7	MIRAGE / LANCER (FWD) 1600CC A153,157	78/2~85/	Engine CRANK SHAFT FRONT
03905 6404	MD306078		MIRAGE / LANCER (FWD) 4G13 IN.	95/8~00/	Engine VALVE STEM SEAL
03905 5108	MD008882	44 x 60 x 7	MIRAGE / LANCER (FWD) 1600CC C13,53,63,73,83	83/10~92/	Engine CRANK SHAFT FRONT
03905 6665	MD150161	85 x 103 x 8	MIRAGE / LANCER (FWD) 4G91,4G92,4G93,4G63,6 A10	91/8~95/	Engine CRANK SHAFT REAR
03905 5162	MD359158	85 x 103 x 7.5	MIRAGE / LANCER (FWD) 4G92,4G93,4G63,6A11	85/8~	Engine CRANK SHAFT REAR
03905 4211	MD359158	85 x 103 x 7.5	MIRAGE / LANCER (FWD) 4D68	92/10~	Engine CRANK SHAFT REAR
03905 6212	MD307343		MIRAGE / LANCER (FWD) G1B,G13B,G15B IN. & EX.	78/3~92/	Engine VALVE STEM SEAL
03905 3254	MD307343		MIRAGE / LANCER (FWD) 4G13,4G15 IN. & EX.	87/9~95/	Engine VALVE STEM SEAL
03905 1304	MD307343		MIRAGE / LANCER (FWD) 4G63 IN. & EX.	92/8~97/	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7907	MD184303		MIRAGE / LANCER (FWD) 4G91,92,93 IN. & EX.	91/7~	Engine VALVE STEM SEAL
03905 4394	MD307343		MIRAGE / LANCER (FWD) 4G13 EX.	95/8~00/	Engine VALVE STEM SEAL
03905 1982	MD307343		MIRAGE / LANCER (FWD) 4G63 IN. & EX.	98/1~	Engine VALVE STEM SEAL
03905 3014	MD307341		MIRAGE / LANCER (FWD) 4G15 EX.	95/8~	Engine VALVE STEM SEAL
03905 8714	MD307341		MIRAGE / LANCER (FWD) 4G13 EX.	00/1~	Engine VALVE STEM SEAL
03905 3728	MD302172		MIRAGE / LANCER (FWD) 4G15 IN.	95/8~	Engine VALVE STEM SEAL
03905 2327	MD302172		MIRAGE / LANCER (FWD) 4G13 IN.	00/1~	Engine VALVE STEM SEAL
03905 3650	MD000508		MIRAGE / LANCER (FWD) G3B,4D65,4D68	78/3~99/	Engine VALVE STEM SEAL
03905 3029	MA125844	38 x 52 x 6	MIRAGE / LANCER (FWD) A15#	78/3~85/	Wheel Hub REAR
03905 8420	MD755904	41 x 61 x 9 x 13.5	MIRAGE / LANCER (FWD) CJ#,CK#,CL2A,CM2A,C M8A	95/10~00/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 8858	MD707184	35 x 56 x 9 x 12	MIRAGE / LANCER (FWD) CA#,CB#,CC#,CD#,CE9A	91/8~96/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 1442	MD707184	35 x 56 x 9 x 12	MIRAGE / LANCER (FWD) C1#,3#,5#,6#,7#,8#	83/10~92/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 5426	MD707184	35 x 56 x 9 x 12	MIRAGE / LANCER (FWD) A15#	78/3~85/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 3593	MN132381	28 x 43 x 7	MIRAGE / LANCER (FWD) CT9A(6F)	01/2~	Mission & Differential (M/T) INPUT SHAFT
03905 6476	MB936826	30 x 45 x 6.5	MIRAGE / LANCER (FWD) CM5A,CN9A,CP9A,CT9 A(5F)	96/8~	Mission & Differential (M/T) INPUT SHAFT
03905 7118	MD741818	25 x 35 x 6	MIRAGE / LANCER (FWD) CS2A,V	00/5~	Mission & Differential (M/T) INPUT SHAFT
03905 8045	MD741818	25 x 35 x 6	MIRAGE / LANCER (FWD) CA#MCB#,CC#,CD#,CE9 A,CJ#,CK#,CM8A	91/8~00/	Mission & Differential (M/T) INPUT SHAFT
03905 6524	MD741818	25 x 35 x 6	MIRAGE / LANCER (FWD) C11V,12V,12W,14V,14W, 32V,34W,37W	91/8~92/	Mission & Differential (M/T) INPUT SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7070	MD050608	25 x 35 x 6	MIRAGE / LANCER (FWD) C1#,3#,5#,6#,7#,8#	83/10~91/8	Mission & Differential (M/T) INPUT SHAFT
03905 8879	MD050608	25 x 35 x 6	MIRAGE / LANCER (FWD) A15#	78/3~85/	Mission & Differential (M/T) INPUT SHAFT
03905 1667	MA181498	51 x 65 x 9	MIRAGE / LANCER (FWD) C3#,7#,8#	86/8~91/	Wheel Hub REAR
03905 2075	MD755904	41 x 61 x 9 x 13.5	MIRAGE / LANCER (FWD) CQ#,CS#	98/11~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 2483	MB584601	39 x 52 x 6 x 11.5	MIRAGE / LANCER (FWD) C1#...EXCEPT VAN,WAGON	83/10~88/	Wheel Hub REAR
03905 8930	MB808444	51.9 x 66 x 8 x 10	MIRAGE / LANCER (FWD) CK1A,2A,6A,8A,CL2A,C M2A,8A	95/10~00/	Wheel Hub FRONT OUTER
03905 4424	MB303875	52 x 72 x 8 x 11	MIRAGE / LANCER (FWD) CC4A,CD5A,CD9A,CE9#	91/8~96/	Wheel Hub FRONT OUTER
03905 5726	MB808444	51.9 x 66 x 8 x 10	MIRAGE / LANCER (FWD) CJ1A,2A,4A(EXC. SIZE UP WHEEL)	95/10~00/	Wheel Hub FRONT OUTER
03905 3305	MB176746	50 x 66.5 x 13 x 16	MIRAGE / LANCER (FWD) C1#,3#,5#,6#,7#,8#	83/10~92/	Wheel Hub FRONT OUTER
03905 3032	MB176746	50 x 66.5 x 13 x 16	MIRAGE / LANCER (FWD) A15#	78/3~85/	Wheel Hub FRONT OUTER
03905 3878	MB573309	54 x 82 x 8 x 11	MIRAGE / LANCER (FWD) CJ4A(SIZE UP WHEEL),CK4A,CM5A	95/10~00/	Wheel Hub FRONT INNER
03905 5408	MB573309	54 x 82 x 8 x 11	MIRAGE / LANCER (FWD) CC4A,CD5A,CD9A,CE9#	91/8~96/	Wheel Hub FRONT INNER
03905 3725	MB808443	54 x 76 x 8 x 11	MIRAGE / LANCER (FWD) CK1A,2A,6A,8A,CL2A,C M2A,8A	95/10~00/	Wheel Hub FRONT INNER
03905 2612	MB808443	54 x 76 x 8 x 11	MIRAGE / LANCER (FWD) CJ1A,2A,4A(EXC. SIZE UP WHEEL)	95/10~00/	Wheel Hub FRONT INNER
03905 3236	MB808443	54 x 76 x 8 x 11	MIRAGE / LANCER (FWD) CA#,CB#,CC3A,CD3A,7 A,8A	91/8~95/	Wheel Hub FRONT INNER
03905 3161	MB176746	50 x 66.5 x 13 x 16	MIRAGE / LANCER (FWD) C1#,3#,5#,6#,7#,8#	83/10~92/	Wheel Hub FRONT INNER
03905 2501	MB176746	50 x 66.5 x 13 x 16	MIRAGE / LANCER (FWD) A15#	78/3~85/	Wheel Hub FRONT INNER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3350	MD168055	37 x 50 x 6	MIRAGE / LANCER (FWD) 4G92 CA4,CB4,CC4,CJ4,CK4	91/8~00/	Engine CRANK SHAFT FRONT
03905 4961	MA125844	38 x 52 x 6	MIRAGE / LANCER (FWD) C11V,12V,12W,14V,14W	85/1~92/	Wheel Hub REAR
03905 3806	MB584601	39 x 52 x 6 x 11.5	MIRAGE / LANCER (FWD) C5#,6#	87/9~91/	Wheel Hub REAR
03905 4910	MD009038	17 x 28 x 7	MIRAGE / LANCER (FWD) 4D65	83/10~85/ 4	Engine OIL PUMP
03905 6857	MD168055	37 x 50 x 6	MIRAGE / LANCER (FWD) 4G91 CA3,CB3,CC3,CD3	91/8~95/	Engine CRANK SHAFT FRONT
03905 3365	MD030782	30 x 46 x 7	MIRAGE / LANCER (FWD) 4G13,4G15 CQ1,2,CS2	00/1~	Engine CRANK SHAFT FRONT
03905 5984	MB808444	51.9 x 66 x 8 x 10	MIRAGE / LANCER (FWD) CA#,CB#,CC3A,CD3A,7 A,8A	91/8~95/	Wheel Hub FRONT OUTER
03905 5738	MD758763	41 x 61 x 11.5 x 16	MIRAGE / LANCER (FWD) CN9A,CP9A,CT9A	96/8~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)
03905 5963	MD030782	30 x 46 x 7	MIRAGE / LANCER (FWD) 4G13,4G15 CA1,2,CB1,2,CJ1,2,CK1,2 ,CL2,CM2	91/8~00/	Engine CRANK SHAFT FRONT
03905 5876	MD030782	30 x 46 x 7	MIRAGE / LANCER (FWD) 1500CC C12,32,52,62,72,82	83/10~92/	Engine CRANK SHAFT FRONT
03905 3140	MD030782	30 x 46 x 7	MIRAGE / LANCER (FWD) 1300CC C11,51,61	83/10~92/	Engine CRANK SHAFT FRONT
03905 8150	MD030782	30 x 46 x 7	MIRAGE / LANCER (FWD) 1200CC,1400C A151,152,155,156	78/2~85/	Engine CRANK SHAFT FRONT
03905 7451	MD095355	20 x 30 x 7	MIRAGE / LANCER (FWD) 4D65,4D68	85/5~99/	Engine OIL PUMP
03905 1628	MD009038	17 x 28 x 7	MIRAGE / LANCER (FWD) G23B,G27B	79/3~92/	Engine OIL PUMP
03905 4226	MD050608	25 x 35 x 6	MIRAGE / LANCER (FWD) 4G63 CD9,CE9,CN9,CP9,CT9	92/8~	Engine BALANCER SHAFT
03905 3068	MD050608	25 x 35 x 6	MIRAGE / LANCER (FWD) 4D68 CB8,CD8,CK8,CM8	92/10~99/	Engine BALANCER SHAFT
03905 8576	MD050608	25 x 35 x 6	MIRAGE / LANCER (FWD) 4D65 C14,34,64,74,CB7,CD7	83/10~92/	Engine BALANCER SHAFT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 3299	MD008762	35 x 50 x 8	MIRAGE / LANCER (FWD) 4G#,4D#...C#	83/10~	Engine CAM SHAFT
03905 1754	MD707575	42 x 60 x 9	MIRAGE / LANCER (FWD) A15#,C#,CA#,CB#,CC#,C D#	78/3~95/	Mission & Differential (M/T&A/T) CONVERTER OIL PUMP
03905 8204	MD707184	35 x 56 x 9 x 12	MIRAGE / LANCER (FWD) CA#,CB#	91/8~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 7424	MD707184	35 x 56 x 9 x 12	MIRAGE / LANCER (FWD) A15#	78/3~85/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 7598	MD719710	35 x 54 x 10 x 17	MIRAGE / LANCER (FWD) C3#,7#,8#	86/8~92/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 6929	MD095355	20 x 30 x 7	MIRAGE / LANCER (FWD) 4G61,4G63	87/9~	Engine OIL PUMP
03905 4655	MD719710	35 x 54 x 10 x 17	MIRAGE / LANCER (FWD) CC#,CD#,CE9A	91/8~96/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 3539	MD755904	41 x 61 x 9 x 13.5	MIRAGE / LANCER (FWD) CJ#,CK#,CL2A,CM2A,C M8A	95/10~00/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 3857	MD707184	35 x 56 x 9 x 12	MIRAGE / LANCER (FWD) C1#,5#,6#	83/10~92/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 6068	MD755904	41 x 61 x 9 x 13.5	MIRAGE / LANCER (FWD) CQ#,CS#	98/11~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 3080	MD707575	42 x 60 x 9	MIRAGE / LANCER (FWD) CJ#,CK#,CL2A,CM#,CQ# ,CS#	95/10~	Mission & Differential (M/T&A/T) CONVERTER OIL PUMP
03905 6236	MB910971R		MIRAGE / LANCER (FWD) CA#,CB#,CC#,CD#	91/8~92/5	Power Steering SEAL KIT
03905 8537	MR103090R		MIRAGE / LANCER (FWD) CA#,CB#,CC#,CD#	92/5~95/	Power Steering SEAL KIT
03905 8282	MR103090R		MIRAGE / LANCER (FWD) CJ#,CK#,CM#	95/10~00/	Power Steering SEAL KIT
03905 4562	MR961785		MIRAGE / LANCER (FWD) CQ#,CS#	98/11~	Power Steering SEAL KIT
03905 8255	MD008762	35 x 50 x 8	MIRAGE / LANCER (FWD) G11B,12B,15B,32B,37B A15#,C11,12,13,32,37	78/3~92/	Engine CAM SHAFT
03905 4079	MB636914		PAJERO L14#	89/5~90/	Power Steering SECTOR SHAFT KIT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4004	MB160949	45 x 72 x 12 x 19.5	PAJERO V14,V2#,V34,V4#,V55	90/10~99/	Drive Pinion REAR
03905 4670	MB870190		PAJERO V14,V23,V24,V34,V43,V44	90/10~93/6	Power Steering SECTOR SHAFT KIT
03905 4451	MB553346		PAJERO LO4#	82/4~83/6	Power Steering SECTOR SHAFT KIT
03905 7730	MN103373		PAJERO V6#,V7#	99/6~	Power Steering SEAL KIT
03905 5066	MR151065		PAJERO V2#,V4#	93/7~99/	Power Steering SECTOR SHAFT KIT
03905 4745	MD008762	35 x 50 x 8	PAJERO G63B LO41,LO46	82/4~88/	Engine CAM SHAFT
03905 3374	MR374193		PAJERO V2#,V4#	93/7~99/	Power Steering SEAL KIT
03905 6815	MB553255		PAJERO LO4#,L14#	83/7~89/5	Power Steering SECTOR SHAFT KIT
03905 7067	MB870189		PAJERO V14,V23,V24,V34,V43,V44	90/10~93/6	Power Steering SEAL KIT
03905 8318	MB636913		PAJERO L14#	89/5~90/	Power Steering SEAL KIT
03905 5375	MB350847		PAJERO LO4#,L14#	83/7~89/5	Power Steering SEAL KIT
03905 3848	MB160949	45 x 72 x 12 x 19.5	PAJERO V6#,V7#	99/6~	Drive Pinion REAR
03905 5630	MB664285	44 x 72 x 12	PAJERO L141,L144,L146	88/9~90/	Drive Pinion FRONT
03905 5561	MD008762	35 x 50 x 8	PAJERO 4D55 LO43,LO48	82/4~86/	Engine CAM SHAFT
03905 6215	MD168055	37 x 50 x 6	PAJERO 6G72,6G74	88/9~	Engine CRANK SHAFT FRONT
03905 6515	MB160949	45 x 72 x 12 x 19.5	PAJERO LO4#,L14#	82/4~90/	Drive Pinion REAR
03905 2318	MB664285	44 x 72 x 12	PAJERO V55,V63(MT),V68,V73(MT),V78	97/8~	Drive Pinion FRONT
03905 5522	MB664285	44 x 72 x 12	PAJERO V21(MT),V23(MT),V25,V26,V43(MT),V45,V46	90/10~99/	Drive Pinion FRONT
03905 6110	MB553348		PAJERO LO4#	82/4~83/6	Power Steering SEAL KIT
03905 8570	MD009038	17 x 28 x 7	PAJERO G63B CAB	82/4~85/7	Engine OIL PUMP
03905 1448	MD101915	91 x 111 x 9	PAJERO 6G72	88/9~97/3	Engine CRANK SHAFT REAR
03905 5123	MD069947	80 x 96 x 9	PAJERO G63B,4D55,4D56	82/4~90/12	Engine CRANK SHAFT REAR
03905 1904	MD197467		PAJERO 4D56,6G72 IN. & EX.	92/10~99/	Engine VALVE STEM SEAL
03905 6092	MB160578	42 x 65 x 12	PAJERO V63(AT),V65,V73(AT),V75	99/6~	Drive Pinion FRONT
03905 3860	ME202850	50 x 74 x 11	PAJERO 4M41 V68,V78	99/6~	Engine TIMING GEAR CASE

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6707	ME202850	50 x 74 x 11	PAJERO 4M40 V26,V46	96/10~99/	Engine TIMING GEAR CASE
03905 8438	ME200028	52 x 74 x 11 x 19	PAJERO 4M40 V26,V46	93/7~96/10	Engine TIMING GEAR CASE
03905 5834	MD095355	20 x 30 x 7	PAJERO 4G64	96/3~99/	Engine OIL PUMP
03905 3536	MD168057	20 x 30 x 7 x 7.5	PAJERO G63B ECI	84/6~88/	Engine OIL PUMP
03905 8375	MD008762	35 x 50 x 8	PAJERO 4D56 LO44,LO49,L144,L149,V14,V24,V34,V44,V47	86/4~97/	Engine CAM SHAFT
03905 8408	MD009038	17 x 28 x 7	PAJERO 4D55,4D56	82/4~97/	Engine BALANCER SHAFT(RH)
03905 4154	MD050608	25 x 35 x 6	PAJERO 4G64	96/3~99/	Engine BALANCER SHAFT(RH)
03905 3575	MD050608	25 x 35 x 6	PAJERO G63B	82/4~88/	Engine BALANCER SHAFT(RH)
03905 7352	MD050608	25 x 35 x 6	PAJERO 4D55,4D56	82/4~97/	Engine BALANCER SHAFT(LH)
03905 4529	MD152603	30 x 42 x 8 x 8.4	PAJERO 6G74 V25,V45,V65,V75	93/7~	Engine CAM SHAFT
03905 7013	MD008762	35 x 50 x 8	PAJERO 4G64 V21	96/3~99/	Engine CAM SHAFT
03905 3434	MD008762	35 x 50 x 8	PAJERO 6G74 V55	97/8~97/11	Engine CAM SHAFT
03905 3389	MD008762	35 x 50 x 8	PAJERO 6G72 L141,L146,V23,V43,V63,V73	88/9~	Engine CAM SHAFT
03905 4466	MD008882	44 x 60 x 7	PAJERO G63B,4D55,4D56,4G64	82/4~99/	Engine CRANK SHAFT FRONT
03905 4628	MD184303		PAJERO 6G72 IN.	00/6~	Engine VALVE STEM SEAL
03905 2339	ME203250	90.5 x 114 x 12	PAJERO 4M40,4M41	99/6~	Engine CRANK SHAFT REAR
03905 6422	MD120699	91 x 111 x 9	PAJERO 6G74	93/7~00/2	Engine CRANK SHAFT REAR
03905 6149	MD372251	91 x 111 x 7.5	PAJERO 6G72,6G74	00/2~	Engine CRANK SHAFT REAR
03905 5078	MD359158	85 x 103 x 7.5	PAJERO 4G64	96/3~99/	Engine CRANK SHAFT REAR
03905 2132	ME200012	92 x 114 x 8 x 17	PAJERO 4M40	93/7~96/2	Engine CRANK SHAFT REAR
03905 3104	ME202115	90 x 114 x 10.5 x 17	PAJERO 4M40	96/3~96/10	Engine CRANK SHAFT REAR
03905 4520	ME202851	94.5 x 114 x 12	PAJERO 4M40	96/11~99/5	Engine CRANK SHAFT REAR
03905 6512	MB837719	37 x 62 x 12.5	PAJERO LO4#,L14#	82/4~90/	Wheel Hub REAR INNER
03905 8513	MD184303		PAJERO 4G64 IN. & EX.	96/3~99/	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 6734	MB837719	37 x 62 x 12.5	PAJERO V14,V2#,V34,V4#	90/10~99/	Wheel Hub REAR INNER
03905 1187	MD307342		PAJERO 6G72 EX.	00/6~	Engine VALVE STEM SEAL
03905 3293	MD306079		PAJERO 6G74 IN.	93/7~	Engine VALVE STEM SEAL
03905 4724	MD307343		PAJERO 6G74 EX.	93/7~	Engine VALVE STEM SEAL
03905 3110	ME241213		PAJERO 4M40 IN. & EX.	93/7~99/1	Engine VALVE STEM SEAL
03905 4637	ME241213		PAJERO 4M40 IN. & EX.	99/1~99/	Engine VALVE STEM SEAL
03905 2954	ME203255		PAJERO 4M41 IN. & EX.	99/6~	Engine VALVE STEM SEAL
03905 2567	MD120699	91 x 111 x 9	PAJERO 6G72	97/3~00/2	Engine CRANK SHAFT REAR
03905 7259	MD000508		PAJERO G63B,4D55,4D56,6G72 IN. & EX.	82/4~92/9	Engine VALVE STEM SEAL
03905 2927	MB936826	30 x 45 x 6.5	PAJERO V25,V26,V45,V46,V55,V63,V73	93/7~	Mission & Differential (M/T) MISSION INPUT
03905 8228	MB160578	42 x 65 x 12	PAJERO LO4#,L149	82/4~90/	Drive Pinion FRONT
03905 7307	MB919210	42.8 x 55 x 10 x 11	PAJERO V25,V26,V45,V46,V55,V6#,V7#	93/7~	Mission & Differential (A/T) TRANSFER REAR OUTPUT
03905 2123	MD731708	39.6 x 52 x 10 x 11	PAJERO V14,V21,V23,V24,V34,V43,V47	90/10~99/	Mission & Differential (A/T) TRANSFER REAR OUTPUT
03905 1013	MD731708	39.6 x 52 x 10 x 11	PAJERO LO4#,L14#	82/4~90/	Mission & Differential (A/T) TRANSFER REAR OUTPUT
03905 5402	MD712012	36 x 52 x 10 x 11	PAJERO ALL MODEL	82/4~	Mission & Differential (A/T) TRANSFER FRONT OUTPUT
03905 8939	MR145792	45 x 68.2 x 8.5	PAJERO LO4#,L14#,V2#,34,4#,55,6#,7#...ATM	82/4~	Mission & Differential (A/T) TRANSFER INPUT
03905 2180	MR145502	45 x 68.2 x 15	PAJERO LO4#,L14#,V14,2#,34,4#,55,63,73 MTM	82/4~	Mission & Differential (A/T) TRANSFER INPUT
03905 7676	MB526395	57 x 75 x 7.5 x 11.5	PAJERO LO4#,L14#,V14,V2#,V34,V4#	82/4~99/	Wheel Hub FRONT
03905 1358	MR350599	45 x 68.2 x 7 x 8	PAJERO V21,V23,V24,V25,V26,V34,V43,V45,V46,V47	90/10~99/	Mission & Differential (A/T) EXTENSION HOUSING
03905 6089	MB160578	42 x 65 x 12	PAJERO V14,V21(AT),V23(AT),V24,V43(AT),V47	90/10~99/	Drive Pinion FRONT

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1220	MH034067	32 x 45 x 8	PAJERO V23,V24,V43,V44,V47	90/10~99/	Mission & Differential (M/T) MISSION INPUT
03905 4049	MH034067	32 x 45 x 8	PAJERO L14#	88/9~90/	Mission & Differential (M/T) MISSION INPUT
03905 8798	MD723202	30 x 45 x 6	PAJERO V21	96/3~99/	Mission & Differential (M/T) MISSION INPUT
03905 3200	MD723202	30 x 45 x 6	PAJERO V14,V34	90/10~93/	Mission & Differential (M/T) MISSION INPUT
03905 1493	MD723202	30 x 45 x 6	PAJERO LO4#	82/4~90/	Mission & Differential (M/T) MISSION INPUT
03905 2222	MB664612	50 x 75 x 9	PAJERO V2#,V4#	90/10~99/	Wheel Hub REAR OUTER
03905 4919	MB092437	50 x 65 x 10	PAJERO V14,V34	90/10~93/	Wheel Hub REAR OUTER
03905 6662	MB092437	50 x 65 x 10	PAJERO LO4#,L14#	82/4~90/	Wheel Hub REAR OUTER
03905 4859	MR350599	45 x 68.2 x 7 x 8	PAJERO V55,V63,V65,V68,V73,V75,V78	97/8~	Mission & Differential (A/T) CASE ADAPTER
03905 1898	MA181498	51 x 65 x 9	PAJERO MINI, JR H51,53,56,57,58 WITHOUT ABS	94/12~	Wheel Hub REAR
03905 4796	MR983239	28 x 45 x 10	PAJERO MINI, JR H51,53	94/12~	Transmission (M/T) REAR EXTENTION
03905 1619	MB808444	51.9 x 66 x 8 x 10	PAJERO MINI, JR H51,53,56,57,58	94/12~	Wheel Hub FRONT OUTER
03905 7439	MD179175		PAJERO MINI, JR 4A30,4A31	94/12~	Engine VALVE STEM SEAL
03905 8909	MN114457	22 x 32 x 5	PAJERO MINI, JR H5#	94/12~	Transmission (M/T) FRONT
03905 2744	MB808443	54 x 76 x 8 x 11	PAJERO MINI, JR H51,53,56,57,58	94/12~	Wheel Hub FRONT INNER
03905 3137	MR983239	28 x 45 x 10	PAJERO MINI, JR H56,58 WITHOUT TURBO	94/12~	Transmission (M/T) REAR EXTENTION
03905 1553	MD701430	32 x 48 x 10	PAJERO MINI, JR H56,57,58 TURBO	94/12~	Transmission (M/T) REAR EXTENTION
03905 5435	MB092620	35 x 55 x 11	PAJERO MINI, JR H56,57,58(4WD)	94/12~	Final Drive PINION(FRONT)
03905 1520	MD329374	70 x 87 x 8.5	PAJERO MINI, JR 4A30,4A31	94/12~	Engine CRANK SHAFT REAR
03905 5795	MD707184	35 x 56 x 9 x 12	PAJERO MINI, JR H56,57,58(4WD)	94/12~	Final Drive DIFF. SIDE(FRONT)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2171	MD162689	35 x 47 x 8.5	PAJERO MINI, JR 4A30,4A31(SOHC) H51,53,56,57,58	94/12~	Engine CAM SHAFT
03905 4622	MD008762	35 x 50 x 8	PAJERO MINI, JR 4A30(DOHC) H51,53,56,58	94/12~	Engine CAM SHAFT
03905 7667	MD168057	20 x 30 x 7 x 7.5	PAJERO MINI, JR 4A30,4A31	94/12~	Engine OIL PUMP
03905 5894	MD115245	31 x 45 x 7	PAJERO MINI, JR 4A30,4A31	94/12~	Engine CRANK SHAFT FRONT
03905 1265	MB393929	35 x 65 x 12	PAJERO MINI, JR H51,53,56,57,58	94/12~	Final Drive PINION(REAR)
03905 4130	MR196784	33 x 60 x 15	PAJERO MINI, JR H51,53,56,57,58 WITH ABS	94/12~	Wheel Hub REAR
03905 8114	MD150161	85 x 103 x 8	RVR N13W,23W 4G63	92/5~97/	Engine CRANK SHAFT REAR
03905 6689	MD069947	80 x 96 x 9	RVR N13W,23W 4G63	91/1~92/4	Engine CRANK SHAFT REAR
03905 1457	MD008882	44 x 60 x 7	RVR N28W 4D68	92/9~97/	Engine CRANK SHAFT FRONT
03905 1772	MD008882	44 x 60 x 7	RVR N13W,23W#,64WG,73W G,74WG 4G63,64	91/1~	Engine CRANK SHAFT FRONT
03905 6674	MD168055	37 x 50 x 6	RVR N11W,21W,61W,71W 4G93	91/5~	Engine CRANK SHAFT FRONT
03905 8144	MD050608	25 x 35 x 6	RVR N13W,23W#,64WG,73W G,74WG 4G63,64	91/1~	Engine BALANCER SHAFT
03905 5933	MD150161	85 x 103 x 8	RVR N11W,21W 4G93	91/5~97/	Engine CRANK SHAFT REAR
03905 6551	MD050608	25 x 35 x 6	RVR N28#...4D68	92/9~97/	Engine BALANCER SHAFT
03905 6812	MD359158	85 x 103 x 7.5	RVR N28W 4D68	92/8~97/	Engine CRANK SHAFT REAR
03905 2003	MD359158	85 x 103 x 7.5	RVR N61W,64WG,71W,73WG, 74WG 4G93,63,64	97/1~	Engine CRANK SHAFT REAR
03905 7931	MD184303		RVR 4G93	91/5~	Engine VALVE STEM SEAL
03905 8810	MD307343		RVR 4G63	91/1~97/	Engine VALVE STEM SEAL
03905 7595	MD307343		RVR 4G63,64 IN.	97/1~99/1 1	Engine VALVE STEM SEAL
03905 8600	MD306079		RVR 4G63,64 IN.	99/12~	Engine VALVE STEM SEAL
03905 1850	MD095355	20 x 30 x 7	RVR N28#...4D68	92/9~97/	Engine OIL PUMP

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 4577	MD197467		RVR 4D68	92/9~97/	Engine VALVE STEM SEAL
03905 4556	MD758763	41 x 61 x 11.5 x 16	RVR N71W,73WG,74WG	97/11~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(L&R)
03905 7847	MD307343		RVR 4G63,64 EX.	97/1~	Engine VALVE STEM SEAL
03905 3269	MB633434	57 x 76 x 6.8 x 9.5	RVR N21WG,23WG,28WG	92/9~97/	Wheel Hub FRONT OUTER
03905 5567	MB573309	54 x 82 x 8 x 11	RVR N11W,13W,21W,23W,28W	91/1~97/	Wheel Hub FRONT INNER
03905 9038	MB633432	60 x 86 x 7 x 12	RVR N21W SNXE,SRXE	94/9~96/4	Wheel Hub FRONT INNER
03905 7673	MB633432	60 x 86 x 7 x 12	RVR N21WG,23WG,28WG	92/9~97/	Wheel Hub FRONT INNER
03905 3425	MB393929	35 x 65 x 12	RVR N21W#,23W#,28W#,71W,73WG,74WG	91/1~	Mission & Differential (M/T&A/T) REAR DRIVE PINION
03905 7712	MB633434	57 x 76 x 6.8 x 9.5	RVR N21W SNXE,SRXE	94/9~96/4	Wheel Hub FRONT OUTER
03905 5987	MD095355	20 x 30 x 7	RVR N13W,23W#,64WG,73WG,74WG 4G63,64	91/1~	Engine OIL PUMP
03905 4337	MD741818	25 x 35 x 6	RVR N1#,2#	91/1~97/	Mission & Differential (M/T) INPUT SHAFT
03905 6281	MB936826	30 x 45 x 6.5	RVR N73WG	97/11~	Mission & Differential (M/T) INPUT SHAFT
03905 6296	MD707184	35 x 56 x 9 x 12	RVR N21W#,23W#,28W#,71W,73WG,74WG	91/1~	Mission & Differential (M/T&A/T) REAR DIFF. SIDE
03905 7916	MB303875	52 x 72 x 8 x 11	RVR N11W,13W,21W,23W,28W	91/1~97/	Wheel Hub FRONT OUTER
03905 5240	MD008762	35 x 50 x 8	RVR N1#,2#,6#,7#	91/1~	Engine CAM SHAFT
03905 6827	MD707184	35 x 56 x 9 x 12	RVR N11W,13W	91/1~97/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 6848	MD707575	42 x 60 x 9	RVR N1#,2#,6#,7#	91/1~	Mission & Differential (M/T&A/T) CONVERTER OIL PUMP
03905 4847	MD755904	41 x 61 x 9 x 13.5	RVR N61W,64WG	97/11~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(L&R)
03905 4784	MD707184	35 x 56 x 9 x 12	RVR N11W,13W,21#,23#,28#	91/1~	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(RH)

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 5546	MD719710	35 x 54 x 10 x 17	RVR N21#,23#,28#	91/1~97/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(LH)
03905 5921	MD701430	32 x 48 x 10	STARION A182	82/4~83/	Transmission REAR
03905 5444	MB664285	44 x 72 x 12	STARION A187	88/4~90/	Final Drive PINION
03905 1283	MD020308	48 x 68 x 11	STARION G54B A187	88/4~90/	Engine CRANK SHAFT FRONT
03905 2939	MD008882	44 x 60 x 7	STARION G63B	82/4~88/	Engine CRANK SHAFT FRONT
03905 8768	MD168057	20 x 30 x 7 x 7.5	STARION G63B	85/5~88/	Engine OIL PUMP
03905 5192	MD009038	17 x 28 x 7	STARION G63B	82/4~85/4	Engine OIL PUMP
03905 1316	MD050608	25 x 35 x 6	STARION G63B	82/4~88/	Engine BALANCER SHAFT
03905 1196	MD008762	35 x 50 x 8	STARION G63B A182,183,184	82/4~88/	Engine CAM SHAFT
03905 4829	MD069947	80 x 96 x 9	STARION G63B,G54B	82/4~90/	Engine CRANK SHAFT REAR
03905 2360	MB393929	35 x 65 x 12	STARION A182	82/4~83/	Final Drive PINION
03905 9047	MD703743	36 x 52 x 10	STARION A183,184,187	82/4~90/	Transmission REAR
03905 1370	MD723202	30 x 45 x 6	STARION A18#	82/4~90/	Transmission FRONT
03905 6434	MB092186	40 x 65 x 10	STARION A183,184,187	82/4~90/	Wheel Hub REAR
03905 3479	MA181498	51 x 65 x 9	STARION A182	82/4~83/	Wheel Hub REAR
03905 8177	MB584745	45 x 62 x 6	STARION A18#	82/4~90/	Wheel Hub FRONT
03905 5756	MB092145	42 x 65 x 12	STARION A183,184	82/4~88/	Final Drive PINION
03905 5510	MB160949	45 x 72 x 12 x 19.5	STRADA K34T,K74T	91/3~	Drive Pinion REAR
03905 7652	MB351696		STRADA K34T	91/3~97/	Power Steering SEAL KIT
03905 1415	MR374193		STRADA K74T	97/5~	Power Steering SEAL KIT
03905 5144	MB553255		STRADA K34T	91/3~97/	Power Steering SECTOR SHAFT SEAL KIT
03905 1082	MR151065		STRADA K74T	97/5~	Power Steering SECTOR SHAFT SEAL KIT
03905 4022	MD008762	35 x 50 x 8	STRADA 4D56 K34T,K74T	91/3~	Engine CAM SHAFT
03905 1643	MB160578	42 x 65 x 12	STRADA K34T,K74T	91/3~	Drive Pinion FRONT
03905 5366	MD069947	80 x 96 x 9	STRADA 4D56	91/3~	Engine CRANK SHAFT REAR
03905 5936	MD050608	25 x 35 x 6	STRADA 4D56	91/3~	Engine BALANCER SHAFT(LH)
03905 8663	MD000508		STRADA 4D56 IN. & EX.	91/3~92/9	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7190	MD197467		STRADA 4D56 IN. & EX.	92/1	Engine VALVE STEM SEAL
03905 2441	MD009038	17 x 28 x 7	STRADA 4D56	91/3~	Engine BALANCER SHAFT(RH)
03905 8807	MB837719	37 x 62 x 12.5	STRADA K34T,K74T	91/3~	Wheel Hub REAR INNER
03905 6443	MD731708	39.6 x 52 x 10 x 11	STRADA K34T,K74T	91/3~	Mission & Differential (A/T) TRANSFER REAR OUTPUT
03905 5957	MD008882	44 x 60 x 7	STRADA 4D56	91/3~	Engine CRANK SHAFT FRONT
03905 3149	MB526395	57 x 75 x 7.5 x 11.5	STRADA K34T,K74T	91/3~	Wheel Hub FRONT
03905 7901	MB092437	50 x 65 x 10	STRADA K34T	91/3~97/	Wheel Hub REAR OUTER
03905 5033	MB664612	50 x 75 x 9	STRADA K74T	97/5~	Wheel Hub REAR OUTER
03905 8813	MD723202	30 x 45 x 6	STRADA K34T	91/3~97/	Mission & Differential (M/T) MISSION INPUT
03905 3719	MH034067	32 x 45 x 8	STRADA K74T	97/5~	Mission & Differential (M/T) MISSION INPUT
03905 1751	MD609235	45 x 68.2 x 7 x 8	STRADA K74T	97/5~	Mission & Differential (A/T) EXTENTION HOUSING
03905 6968	MR145502	45 x 68.2 x 15	STRADA K34T,K74T MTM	91/3~	Mission & Differential (A/T) TRANSFER INPUT
03905 5978	MR145792	45 x 68.2 x 8.5	STRADA K74T ATM	97/5~	Mission & Differential (A/T) TRANSFER INPUT
03905 7829	MD712012	36 x 52 x 10 x 11	STRADA K34T,K74T	91/3~	Mission & Differential (A/T) TRANSFER FRONT OUTPUT
03905 7442	MD162689	35 x 47 x 8.5	TOPPO BJ H41,46(4A30) SOHC	98/10~02/	Engine CAM SHAFT
03905 8453	MD321819	60 x 75 x 8	TOPPO BJ 3G83	98/10~	Engine CRANK SHAFT REAR
03905 2225	MD329374	70 x 87 x 8.5	TOPPO BJ 4A30,4A31	98/10~	Engine CRANK SHAFT REAR
03905 5762	MD379845	31 x 45 x 7	TOPPO BJ 4G30,4G31,3G83	98/10~	Engine CRANK SHAFT FRONT
03905 8246	MD343566	17 x 28 x 7	TOPPO BJ 3G83	98/10~	Engine OIL PUMP
03905 8234	MD168057	20 x 30 x 7 x 7.5	TOPPO BJ 4A30,4A31	98/10~	Engine OIL PUMP
03905 8969	MD133317	35 x 50 x 8	TOPPO BJ H41,46(4A30) DOHC	98/10~02/	Engine CAM SHAFT
03905 8981	MD179175		TOPPO BJ 4A30,4A31,3G83	98/10~	Engine VALVE STEM SEAL

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 7865	MD707184	35 x 56 x 9 x 12	TOPPO BJ H4#	98/10~	Mission & Differential (A/T) FRONT DIFF. CASE
03905 6884	MN114457	22 x 32 x 5	TOPPO BJ H4#	98/10~	Mission & Differential (M/T) INPUT SHAFT
03905 7073	MB936241	33 x 50 x 13	TOPPO BJ H47,48(4WD) WITH ABS	98/10~	Wheel Hub REAR
03905 3740	MV026391	35 x 46 x 8	TOPPO BJ H47,48(4WD) WITHOUT ABS	98/10~	Wheel Hub REAR
03905 3932	MD162689	35 x 47 x 8.5	TOPPO BJ H43,48(4A30)	99/1~	Engine CAM SHAFT
03905 7610	MD162689	35 x 47 x 8.5	TOPPO BJ H42,47(3G83)	98/10~	Engine CAM SHAFT
03905 3218	MD179175		TOWN BOX 3G83,4A31	94/4~	Engine VALVE STEM SEAL
03905 3821	MD009038	17 x 28 x 7	TOWN BOX 3G83	99/4~	Engine OIL PUMP
03905 4097	MD168057	20 x 30 x 7 x 7.5	TOWN BOX 4A30,4A31	99/4~	Engine OIL PUMP
03905 3716	MD358891		TOWN BOX 4A30 EX.	99/4~	Engine VALVE STEM SEAL
03905 3638	MD115245	31 x 45 x 7	TOWN BOX 3G83,4A30,4A31	99/4~	Engine CRANK SHAFT FRONT
03905 3686	MD179175		TOWN BOX 4A30 IN.	99/4~	Engine VALVE STEM SEAL
03905 7562	MD329374	70 x 87 x 8.5	TOWN BOX 4A30,4A31	99/4~	Engine CRANK SHAFT REAR
03905 3647	MR983239	28 x 45 x 10	TOWN BOX U61 WITHOUT TURBO	99/4~	Transmission (M/T) REAR EXTENTION
03905 7076	MD008762	35 x 50 x 8	TOWN BOX 4A30(TURBO) U63,64	99/4~	Engine CAM SHAFT
03905 8534	MD321819	60 x 75 x 8	TOWN BOX 3G83	99/4~	Engine CRANK SHAFT REAR
03905 4136	MB092620	35 x 55 x 11	TOWN BOX U61,62 WITHOUT TURBO	99/4~	Final Drive PINION
03905 4196	MD162689	35 x 47 x 8.5	TOWN BOX 3G83 U61,62	99/4~	Engine CAM SHAFT
03905 7625	MB393929	35 x 65 x 12	TOWN BOX U63,64,65,66	99/4~	Final Drive PINION
03905 2429	MB393929	35 x 65 x 12	TOWN BOX U61,62 TURBO	02/8~	Final Drive PINION
03905 4580	MD701430	32 x 48 x 10	TOWN BOX U61 TURBO,U63	99/4~	Transmission (M/T) REAR EXTENTION

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 2351	MN114457	22 x 32 x 5	TOWN BOX U6#	99/4~	Transmission (M/T) FRONT
03905 7112	MR399191	28 x 50 x 11	TOWN BOX U61,62,63,64,65,66 WITH ABS	99/4~	Wheel Hub REAR
03905 2126	MB001115	41 x 55 x 9	TOWN BOX U61,62,63,64,65,66 WITHOUT ABS	99/4~	Wheel Hub REAR
03905 8573	MD162689	35 x 47 x 8.5	TOWN BOX 4A31 U65,66	99/6~01/	Engine CAM SHAFT
03905 6971	MD153103	35 x 50 x 8	TREDIA / CORDIA G6B A213	82/3~87/	Engine CAM SHAFT
03905 2510	MD069950	25 x 35 x 6	TREDIA / CORDIA G6B	82/3~87/	Engine BALANCER SHAFT
03905 4499	MD069948	17 x 28 x 7	TREDIA / CORDIA G6B	82/3~85/4	Engine OIL PUMP
03905 5969	MD168057	20 x 30 x 7 x 7.5	TREDIA / CORDIA G6B	85/5~87/	Engine OIL PUMP
03905 8720	MD153104	30 x 46 x 7	TREDIA / CORDIA G1B	82/3~84/	Engine CRANK SHAFT FRONT
03905 3665	MD050606	44 x 60 x 7	TREDIA / CORDIA G3B,G6B	82/3~87/	Engine CRANK SHAFT FRONT
03905 6287	MD016549	72 x 96 x 9	TREDIA / CORDIA G1B,G3B	82/3~87/	Engine CRANK SHAFT REAR
03905 1913	MD069947	80 x 96 x 9	TREDIA / CORDIA G6B	82/3~87/	Engine CRANK SHAFT REAR
03905 4964	MD153103	35 x 50 x 8	TREDIA / CORDIA G3B A212,215	82/3~87/	Engine CAM SHAFT
03905 7223	MD000508		TREDIA / CORDIA G3B,G6B	82/3~87/	Engine VALVE STEM SEAL
03905 5903	MD151463	28 x 40 x 8	TREDIA / CORDIA G3B	84/9~87/	Engine BALANCER SHAFT
03905 7565	MD307343		TREDIA / CORDIA G1B	82/3~84/	Engine VALVE STEM SEAL
03905 3245	MB176746	50 x 66.5 x 13 x 16	TREDIA / CORDIA A215G BHZ,BHZ2	84/10~87/	Wheel Hub FRONT OUTER
03905 5273	MD069948	17 x 28 x 7	TREDIA / CORDIA G3B	82/3~87/	Engine OIL PUMP
03905 8201	MB176746	50 x 66.5 x 13 x 16	TREDIA / CORDIA A211A,212A,213A,G,215 A	82/3~87/	Wheel Hub FRONT INNER
03905 4649	MD153103	35 x 50 x 8	TREDIA / CORDIA G1B A211	82/3~84/	Engine CAM SHAFT
03905 4505	MB176746	50 x 66.5 x 13 x 16	TREDIA / CORDIA A215G BHZ,BHZ2	84/10~87/	Wheel Hub FRONT INNER
03905 5084	MB176746	50 x 66.5 x 13 x 16	TREDIA / CORDIA A211A,212A,213A,G,215 A	82/3~87/	Wheel Hub FRONT OUTER

5. Seals product list

5.5 MITSUBISHI / FUSO

SNT Part No.	OEM Part No.	Size	Body Model	Year/ Month	Part Description
03905 1106	MB303875	52 x 72 x 8 x 11	TREDIA / CORDIA A215G BHZ3	85/10~87/	Wheel Hub FRONT OUTER
03905 8804	MA125844	38 x 52 x 6	TREDIA / CORDIA A21#...2WD	82/3~87/	Wheel Hub REAR
03905 7580	MB393807	36 x 64 x 11 x 19	TREDIA / CORDIA A213G,215G(4WD)	86/1~87/	Wheel Hub REAR
03905 1796	MD069950	25 x 35 x 6	TREDIA / CORDIA A21#...ALL	82/3~87/	Mission & Differential (M/T) INPUT SHAFT
03905 5696	MD707184	35 x 56 x 9 x 12	TREDIA / CORDIA A21#...ALL	82/3~87/	Mission & Differential (M/T&A/T) FRONT DIFF. CASE(L&R)
03905 2570	MB303867	50 x 82 x 8 x 11	TREDIA / CORDIA A215G BHZ3	85/10~87/	Wheel Hub FRONT INNER

SERVICE WORLDWIDE

For over 10 years, we have continuously strived to improve our business to efficiently meet every customer demand. Now, SNT is providing Worldwide Service that will help drive your business growth endlessly and sustainably.



SNT AUTOPART GROUP

HEADQUARTERS

SNT AUTOPART ENTERPRISE, LLC.

Empire State Building
350 Fifth Avenue, 59th Floor
New York, NY 10118 U.S.A.
Telephone: (+1)917-979-6883
Fax: (+1)917-979-6884
E-mail: info@sntautopart.com

ASIA-PACIFIC OFFICE

SNT AUTOPART INTERTRADE Co., Ltd.

All Seasons Place
36th Floor, CRC Tower,
87/2 Wireless Road, Pathumwan,
Bangkok 10330 Thailand
Telephone: (+66)2-105-6155
Fax: (+66)2-105-6155 Ext.4
E-mail: info@sntautopart.com

FACTORY

SNT MACHINE LIMITED PARTNERSHIP

18/3 Rama II Road,
Samaedam, Bangkhuntien,
Bangkok 10150 Thailand
Telephone: (+66)2-897-0968
Fax: (+66)2-897-0968
E-mail: info@sntautopart.com



www.sntautopart.com